


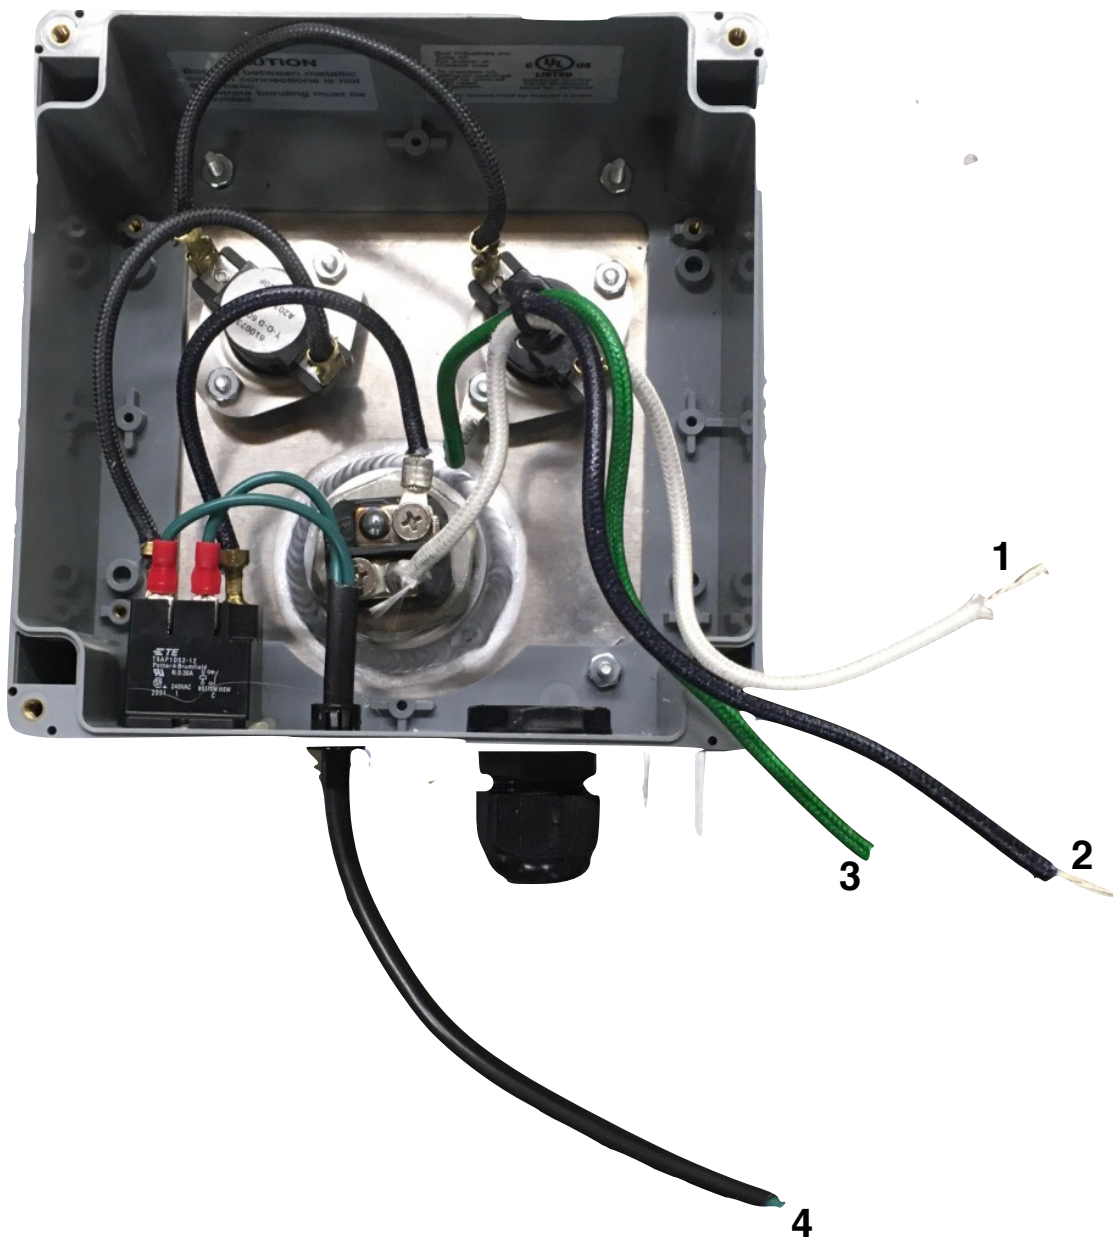

120V AC:

- | | | | |
|---|-------|---|---------|
| 1 | White | - | Neutral |
| 2 | Black | - | Phase |
| 3 | Green | - | Ground |

12V DC:

- | | | |
|---|---------------|--|
| 4 | 2 green wires | no polarity, connects to Rixen Control Box |
|---|---------------|--|



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.