



SURESHADE

EXTENDING THE EXPERIENCE



SureShade[®] Power Bimini Upgrades: High Speed Mesh Top

Installation and Owner's Manual

(For Aftermarket Applications)

Table of Contents

Introduction	2
Safety	2
Parts List	3
Installation	3
Operation	3
Storage	3
Troubleshooting	4
Maintenance	4
Fabric Care	4
Notes	4

High Speed Mesh Kit PN 2021013518	
Part #	Description
129191	BIMINI COVER SPEED TOP WITH BOOT - BLACK



Introduction

SureShade has developed a high speed mesh bimini exclusively for the power bimini installed on your pontoon or deck boat that not only protects, but stays in place at speeds up to 55 mph.

You can leisurely cruise with shade or ride the waves.

The 8-1/2' x 10'—fully extended—Speed Top power shade easily fits over the SureShade Power Bimini frame on your deck or pontoon boat.

Our bimini is made with a nylon mesh that gives you the protection you need from rain or the harsh UV rays of the sun. Unlike traditional canvas bimini tops, the mesh doesn't hold the heat so you can remain comfortable.

Shade in an instant, add speed and you're ready for a perfect day on the water!

Additional information about this product can be obtained from lci1.com/support or by using the LippertNOW app. Replacement kits can be ordered from <https://store.lci1.com/> or by using the LippertNOW app.

The myLCI app is available for free on Apple App Store® for iPhone® and iPad® and also on Google Play™ for Android™ users.

App Store® and iPad® are registered trademarks of Apple Inc.

Google Play™ and Android™ are trademarks of Google Inc.

Safety

Read and understand all instructions before installing or operating this product. Adhere to all safety labels.

This manual provides general instructions. Many variables can change the circumstances of the instructions, i.e., the degree of difficulty, operation and ability of the individual performing the instructions. This manual cannot begin to plot out instructions for every possibility, but provides the general instructions, as necessary, for effectively interfacing with the device, product or system. Failure to correctly follow the provided instructions may result in death, serious personal injury, severe product and/or property damage, including voiding of the LCI limited warranty.

SureShade® Power Bimini Upgrades: High Speed Mesh Top Installation and Owner's Manual (For Aftermarket Applications)

WARNING

THE "WARNING" SYMBOL ABOVE IS A SIGN THAT A PROCEDURE HAS A SAFETY RISK INVOLVED AND MAY CAUSE DEATH OR SERIOUS PERSONAL INJURY AND/OR SEVERE PRODUCT OR PROPERTY DAMAGE IF NOT PERFORMED SAFELY AND WITHIN THE PARAMETERS SET FORTH IN THIS MANUAL.

WARNING

FAILURE TO FOLLOW INSTRUCTIONS PROVIDED IN THIS MANUAL MAY RESULT IN DEATH, SERIOUS PERSONAL INJURY AND/OR SEVERE PRODUCT AND PROPERTY DAMAGE, INCLUDING VOIDING OF THE COMPONENT WARRANTY.

WARNING

DO NOT FULLY OPEN THE BIMINI FRAME WITHOUT THE CANVAS TOP INSTALLED. OPENING THE BIMINI FRAME WITHOUT THE CANVAS TOP INSTALLED WILL RESULT IN SEVERE PRODUCT DAMAGE. ONLY FULLY OPEN THE BIMINI FRAME WITH THE CANVAS TOP INSTALLED.


CAUTION

THE "CAUTION" SYMBOL ABOVE IS A SIGN THAT A SAFETY RISK IS INVOLVED AND MAY CAUSE PERSONAL INJURY AND/OR PRODUCT OR PROPERTY DAMAGE IF NOT SAFELY ADHERED TO AND WITHIN THE PARAMETERS SET FORTH IN THIS MANUAL.

CAUTION

ALWAYS WEAR EYE PROTECTION WHEN PERFORMING SERVICE, MAINTENANCE OR INSTALLATION PROCEDURES.

Parts List

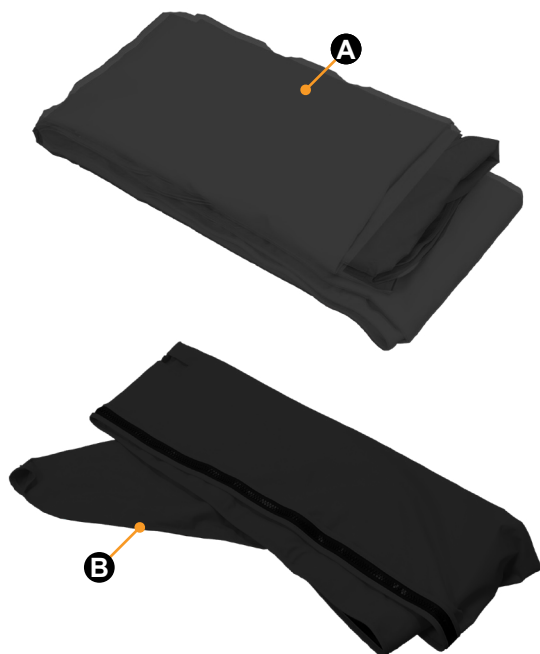

Letter	PN	Description	Qty
A	NA	Bimini Cover Mesh Speed Top	1
B	NA	Bimini Cover Boot	1

NOTE: Part numbers are shown for identification purposes only. Not all parts are available for individual sale. All parts with a link to the Lippert Store can be purchased.

Installation

If replacing a traditional bimini canvas fabric top with the Lippert high speed fine mesh top, follow the original owner's manual removal instructions for the canvas top. Such instructions may include:

- Removal of any securing straps.
- Unsnapping canvas corner button snaps.
- Unzipping bimini frame canvas pockets.

Install the optional Lippert high speed mesh top as follows:

1. Retract—lower—the bimini frame almost all of the way down.

2. Unzip the rear, middle and front mounting pockets of the Lippert high speed mesh top.

3. Place the mesh top over the bimini frame.

NOTE: The rear of the mesh top has an access hole for a stern light, the front of the mesh top has a zippered storage pouch that is separate from the top's front zippered mounting pocket.

4. If a stern light is attached to the rear frame's bow, slip the mesh top's access hole over the light, then spread the top outward; aligning the rear zippered pouch over the bimini's rear bow frame.

5. Zip the rear mesh top pocket closed over the rear bimini frame bow.

6. Pull the middle zippered pocket of the mesh top over the middle frame bow, then zip it closed.

7. Pull the front zippered pocket of the mesh top over the front frame bow, then zip it closed.

Operation

1. Turn on electrical power to the boat.
2. Remove any protective boot or restraints from the high speed mesh top.
3. To operate the quick-connect (QC) bimini top, use one of the following methods:
 - Helm switch
 - QC controller

NOTE: A helm switch and the QC controller are **NOT** compatible. Only one type of control can be used.

NOTE: Do **NOT** fully open the QC bimini system without a top installed or failure of the system will result.

Storage

When the high speed mesh top is not in use, properly store the canopy as follows:

1. Lower the top to its fully retracted position.
2. Install the boot over the canopy.



SureShade® Power Bimini Upgrades: High Speed Mesh Top Installation and Owner's Manual (For Aftermarket Applications)

Troubleshooting

What is happening?	Why?	What should be done?
Mesh top sags.	Unzipped frame pocket.	Zip all frame pockets closed.
	Mesh top not fully opened.	Fully open mesh top.

Maintenance

Fabric Care

Use clear water to consistently hose off the bimini top fabric during the boating season.

If necessary, do a deeper clean of the bimini top fabric as follows:

1. If necessary, remove the boot and place the bimini top into its full open position.
2. If the top was stored wet, allow the bimini top and boot to dry.
3. Remove any loose dirt and debris from the bimini top and boot.
4. Hose down the bimini top and boot fabric.
5. Prepare a mixture of ¼ cup of mild dish soap and five gallons of warm water.
NOTE: Do **NOT** use harsh detergents.
6. Use a soft bristle brush to apply the soapy water to the bimini top and boot fabric to remove stains and embedded dirt.
7. Allow the solution time to soak completely into the fabric.
8. Hose off the bimini top and boot fabric with fresh water. Repeat if necessary.
9. Allow bimini top and boot to dry before closing the top and installing the protective boot.

Notes



Manual information may be distributed as a complete document only, unless Lippert provides explicit consent to distribute individual parts.

All manual information is subject to change without notice. Revised editions will be available for free download at lippert.com. Manual information is considered factual until made obsolete by a revised version.

Please recycle all obsolete materials and contact Lippert with concerns or questions.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.