

Replacing Canvas on ATF Roller



This documentation provides instructions for properly removing and replacing canvas on our automated shade systems.




SURESHADE


1900 47TH TERRACE EAST
BRADENTON, FL 34203
Phone: 877-333-8323
International 215-673-2307
www.sureshade.com



1. Remove crossbars. Loosen roller clamps and remove entire roller assembly from the actuators (Fig 1).
2. Physically unwrap the canvas from the roller until the clamps are exposed (Fig 2).
3. Unclamp the canvas from the roller by unscrewing the one side of the clamp (Fig 2).
4. Center the new canvas on the roller, mark and punch the hole locations on the canvas. Then secure canvas to the roller.
5. Physically wrap the canvas around the roller as shown in (Fig 1).

Note: The roller is not meant to be rotated in the opposite direction the canvas is pulled off the roller. Reverse rotation can distort or disengage internal

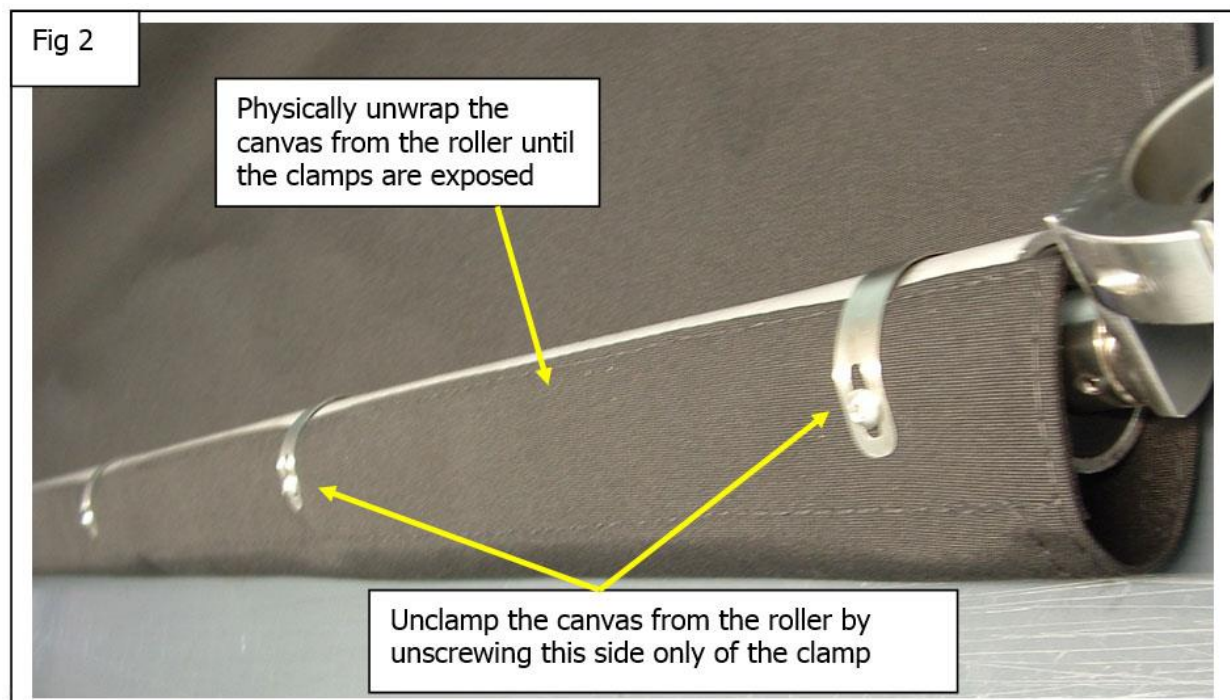

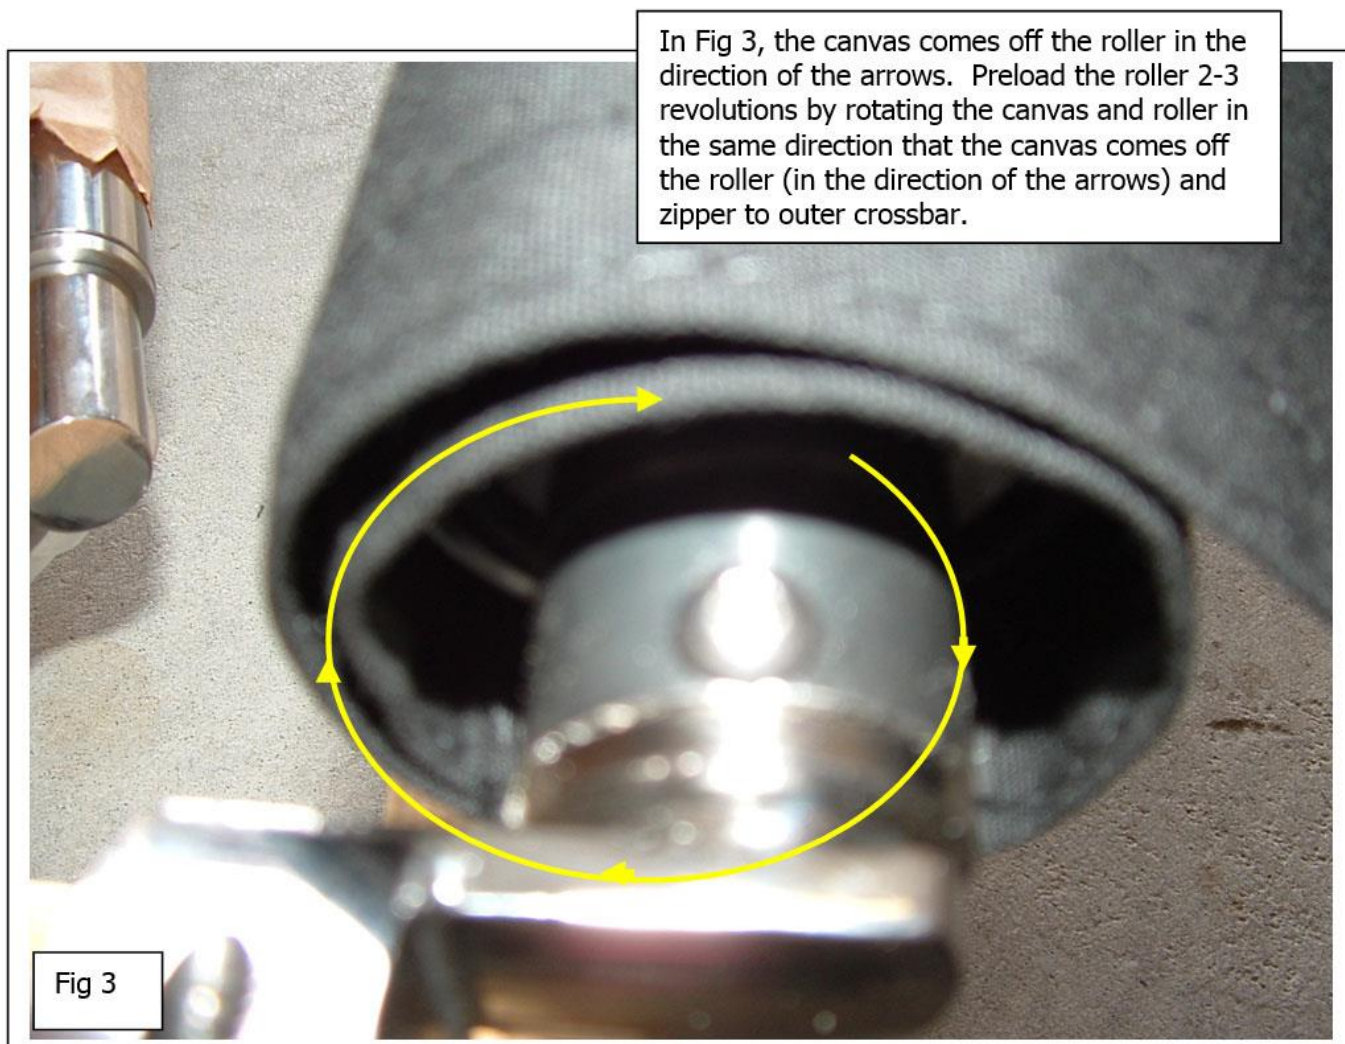



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.