 


Kit 1557

 
 
HONDA Civic, 2-dr Coupé, *06-11

HONDA Civic, 2-dr Coupé, *12–


*North America

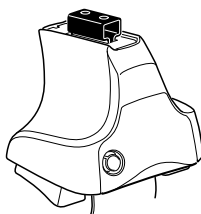

754 Rapid System
480R Rapid Traverse (North America)

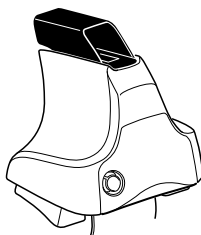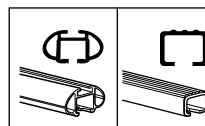

480 Traverse (North America)

 

THULE[®]
SWEDEN

ISO 11154-E

754 Rapid System

480R Rapid Traverse (North America)

x1

x4

x4

x4

 
x4

x1


x4

x4

480 Traverse (North America)

	 x2  x2  x2  x4  x4	 x1  x2  x2  x4	(North America)  x2  x2  x2  x2
--	--	--	--


 
1

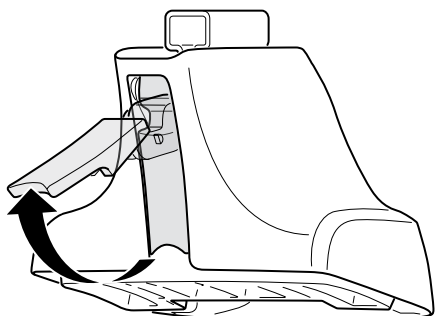



2



 
 
754 Rapid System
480R Rapid Traverse
(North America)

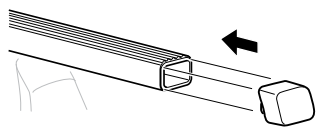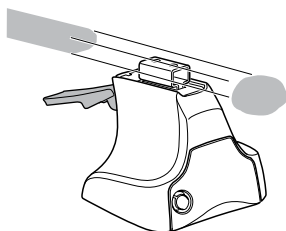

x4

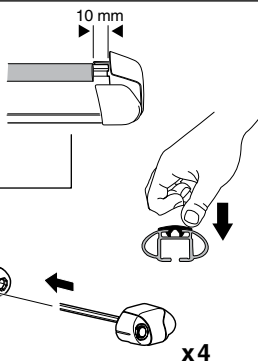  



x4

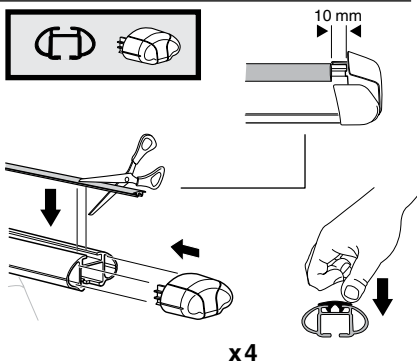  

x4




  480 Traverse
(North America)

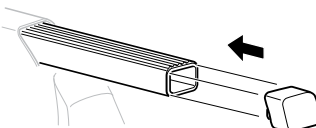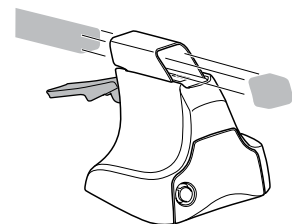


x4

 3



754 Rapid System

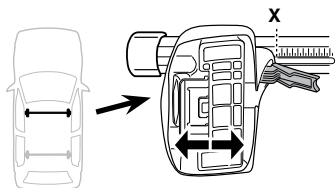 


X

HONDA Civic, 2-dr Coupé, *06-11

46

HONDA Civic, 2-dr Coupé, *12-

 42

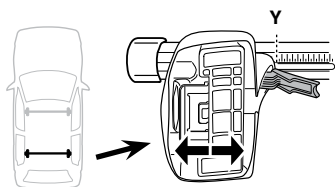

Y

HONDA Civic, 2-dr Coupé, *06-11

42

HONDA Civic, 2-dr Coupé, *12-

40,5

3



480R Rapid Traverse



480 Traverse



(North America)



X inch

X mm

HONDA Civic, 2-dr Coupé, *06-11

 
43 ³/₄ "

1111 mm

HONDA Civic, 2-dr Coupé, *12-

42 ¹/₄ "

1071 mm



Y inch

Y mm

HONDA Civic, 2-dr Coupé, *06-11

42 ¹/₄ "

 
1073 mm

HONDA Civic, 2-dr Coupé, *12-

41 ¹/₂ "

1056 mm

4


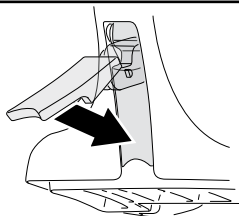


5


HONDA Civic, 2-dr Coupé, *06-11

HONDA Civic, 2-dr Coupé, *12-

  
SRA

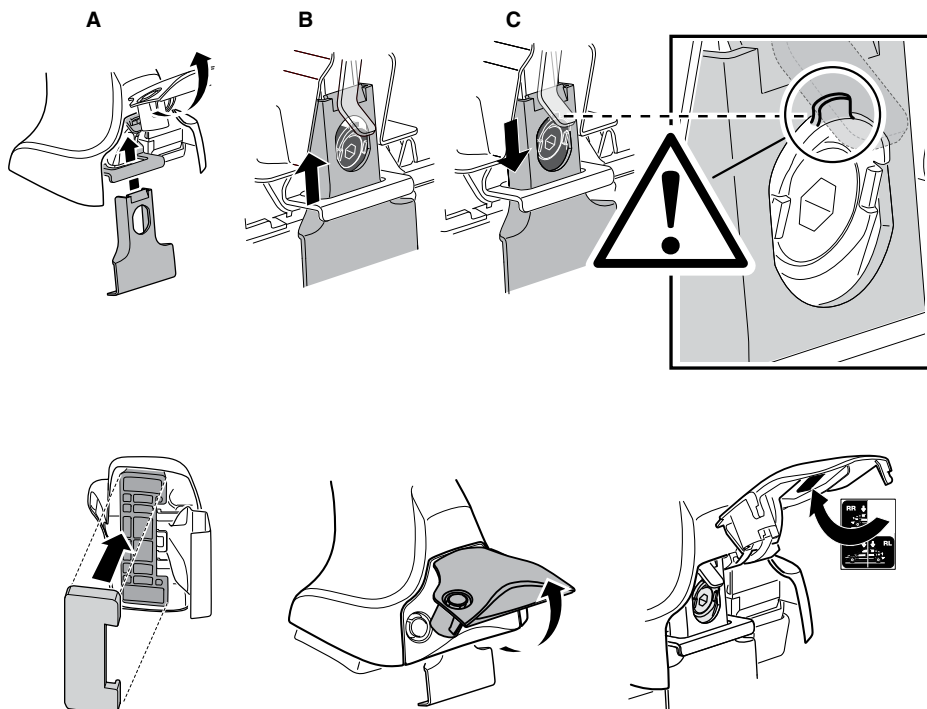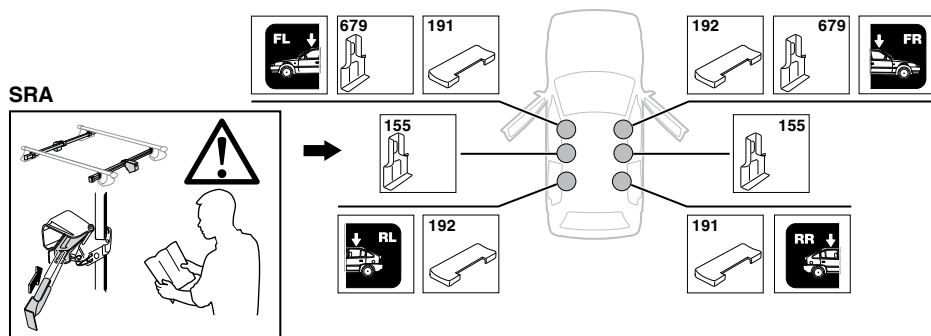


6

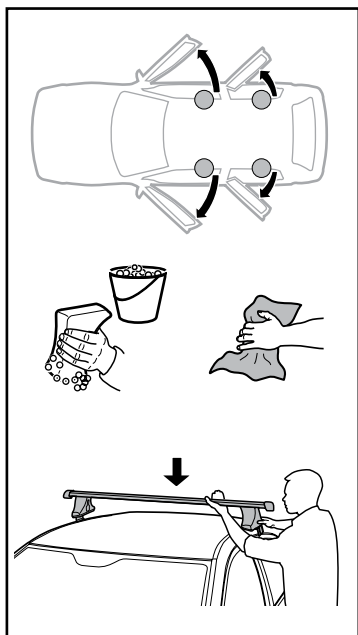 



i

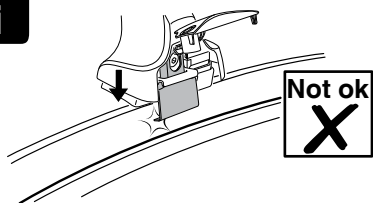 





A

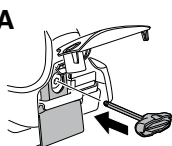 


B

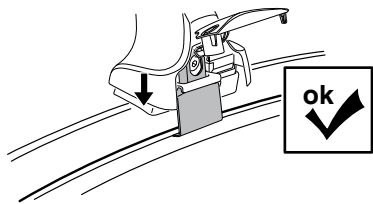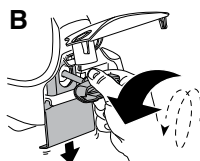  

	X mm	Y mm	Z mm	X inch	Y inch	Z inch
HONDA Civic, 2-dr Coupé, *06-11	140 mm	700 mm	350 mm	5 1/2"	27 1/2"	13 3/4"
HONDA Civic, 2-dr Coupé, *12-	140 mm	700 mm	350 mm	5 1/2"	27 1/2"	13 3/4"

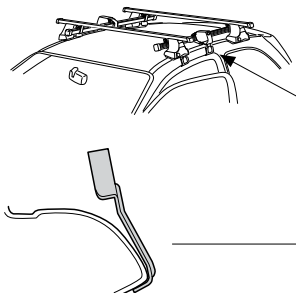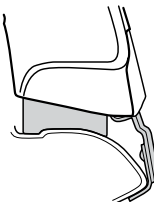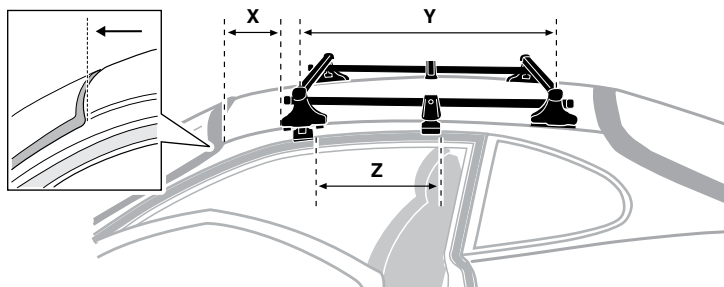    





7

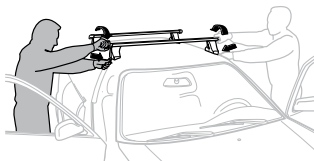 



GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apretar alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pieļieciet pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

CZ Pokręťta bagażnika dokręcaj dokręcaj naprzemiennie.
SK Dofahujtie striedavo
SLO Privijajte izmenično.
HR Naizmjenočno zategnite
HU Egyarástól fűggetlenül szorítandó
GR Σφιγγεται εναλλάξ
TR Dönüşümlü sıkın

    中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ชั้นในแบบสลับ

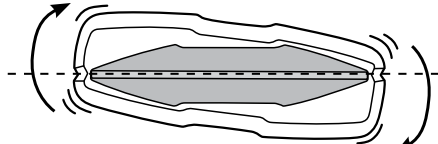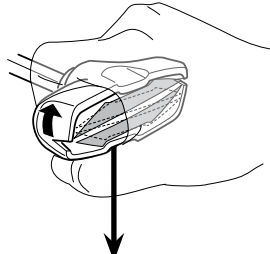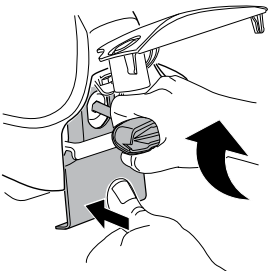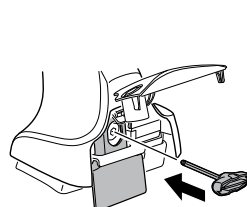



≈ 3 Nm

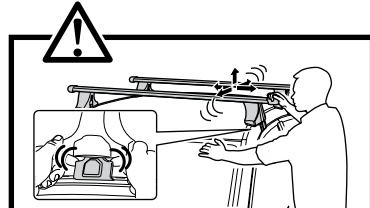 
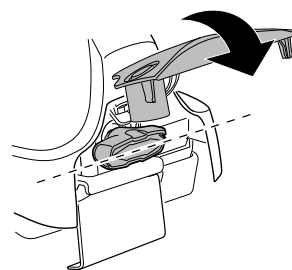 


8



    x1
17 mm

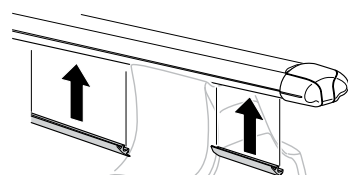

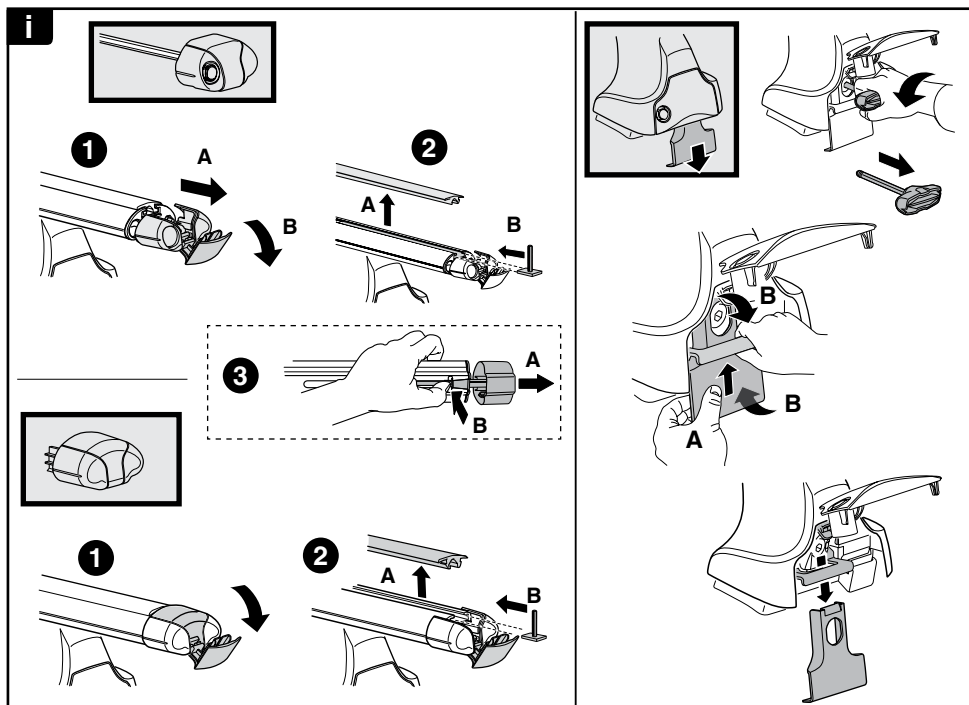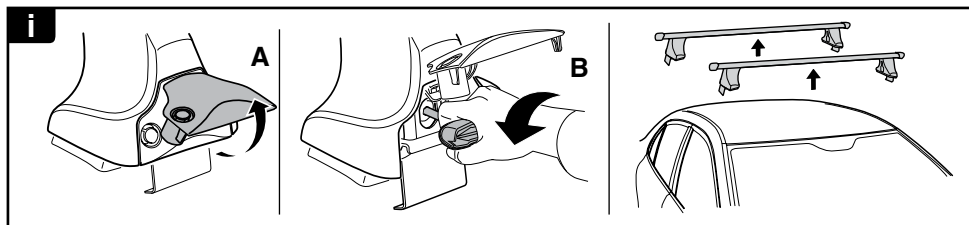

THULE SWEDEN ONE KEY SYSTEM		544 (x4) 596 (x6) 588 (x8) 510 (x10) 452 (x12) NA EUR ASIA



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.