 
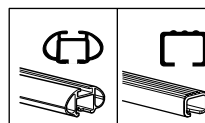 


Kit 1588

 
 
HONDA Accord Crosstour, 5-dr Hatchback, *10–

*North America

480R
754

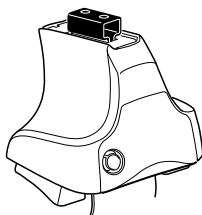

480

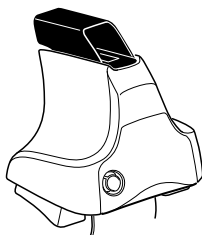



THULE[®]
SWEDEN

ISO 11154-E

Diagram illustrating the assembly of the device. The components and their quantities are:

- Box (1)
- Ruler (1)
- Device (4)
- Screwdriver (4)
- Small cube (4)
- Small cylinder (4)

The diagram shows the ruler being placed on the device and the screwdriver being inserted into the device. The small cube and small cylinder are also shown as components.

  				
				
x2	x2 23 mm	x1 17 mm	x2 23 mm	x2
				
	x2	x2 23 mm	x2	
				
	x4	x2		
				
	x4	x4		

Kit

 
544 x 2

06 x 4

RR ↓ FR
FL ↓ RL

x 1


1



480R/754



 480

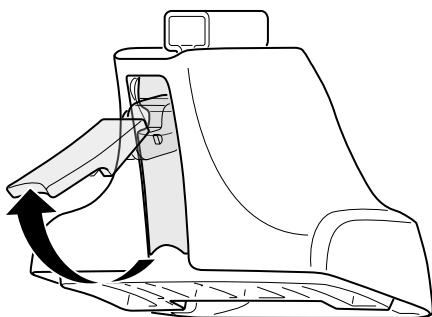

2

 
 
 
 
 
 


480R/754





480

+

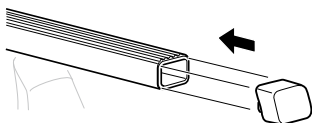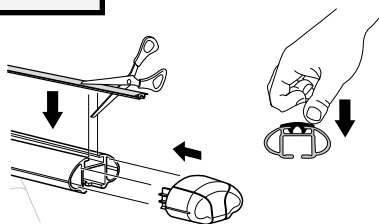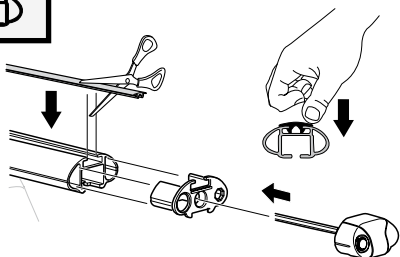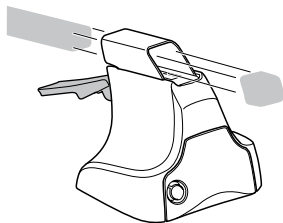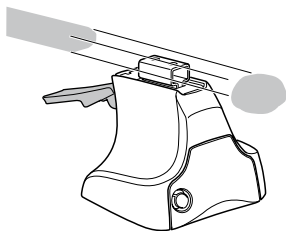


3

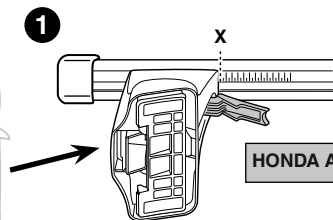  

HONDA Accord Crosstour, 5-dr Hatchback, *10-

X


 
38,5

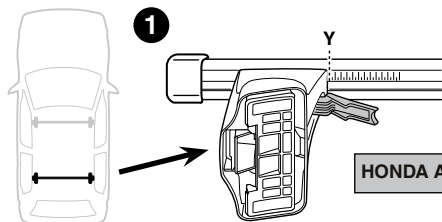

HONDA Accord Crosstour, 5-dr Hatchback, *10-

Y

  35,5

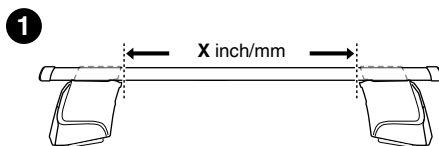



HONDA Accord Crosstour, 5-dr Hatchback, *10-

X inch

X mm

40 ³/₄"

  1036 mm

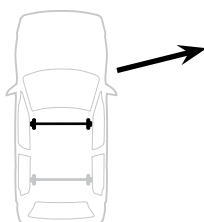

HONDA Accord Crosstour, 5-dr Hatchback, *10-

 
Y inch

Y mm

39 ⁵/₈"

1006 mm

4



480R/754



480

HONDA Accord Crosstour, 5-dr Hatchback, *10-

06



679



06



679



06



 
 
 
 
 
544




06






544

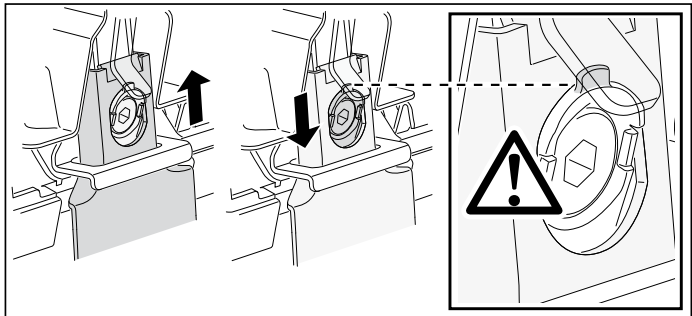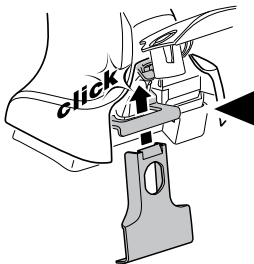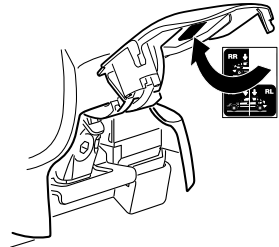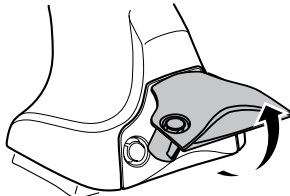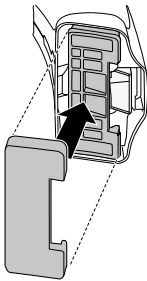

5

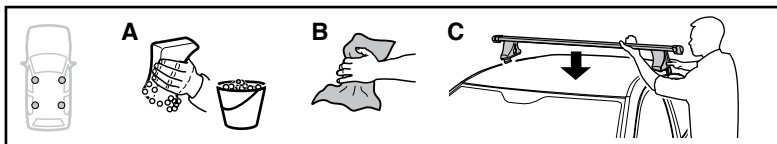 






	X mm	Y mm	X inch	Y inch
HONDA Accord Crosstour, 5-dr Hatchback, *10-	280 mm	660 mm	11 "	26 "

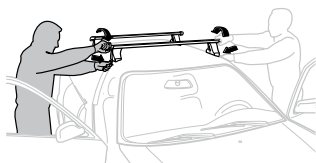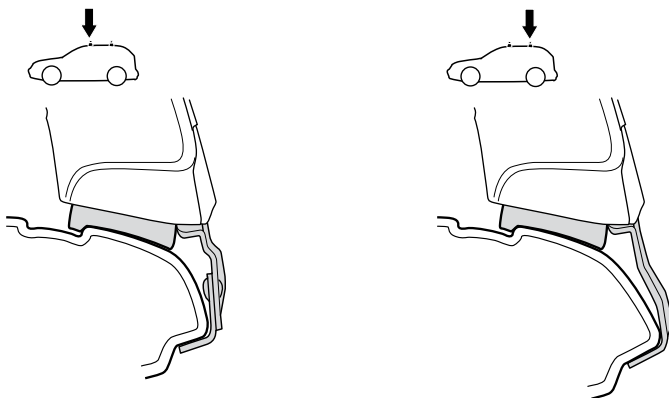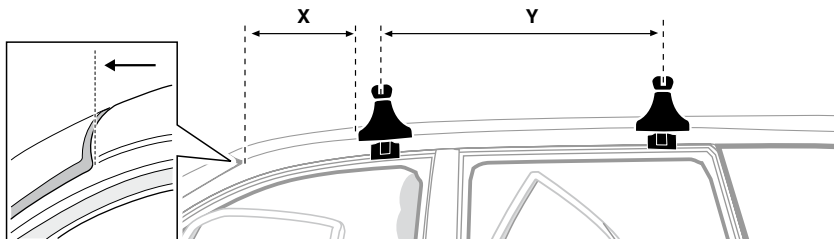   



GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apretar alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciēt pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно




CZ Pokrétla bagazníka dokręcaj dokręcaj naprzemiennie.
SK Dotahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egyarástól függetlenül szorítandó
GR Σφιγγετε εναλλάξ
TR Dönüşümlü sıkın
中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ชันในแบบสลับ

     6

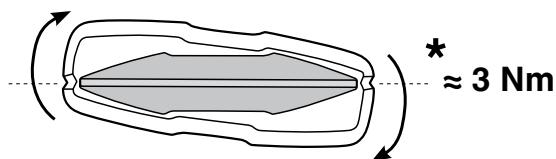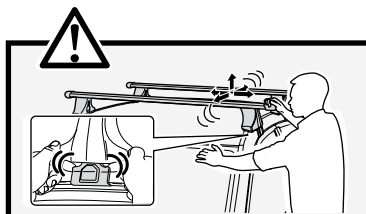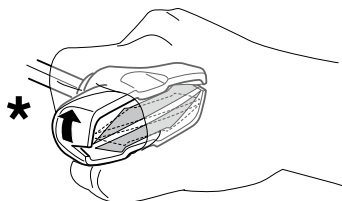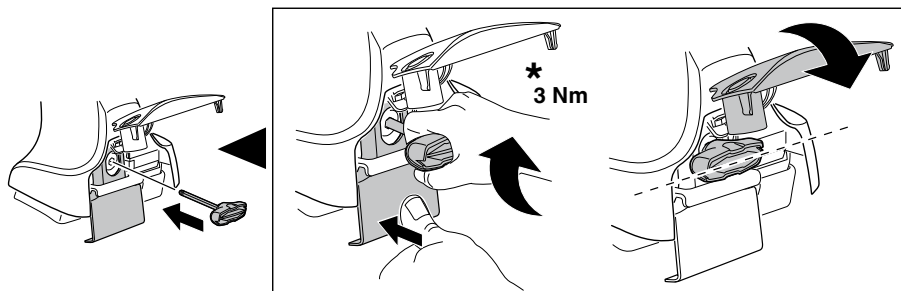

7

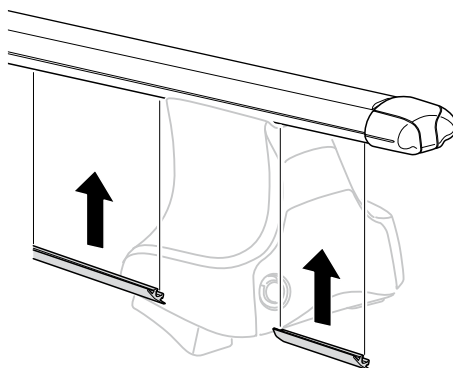  

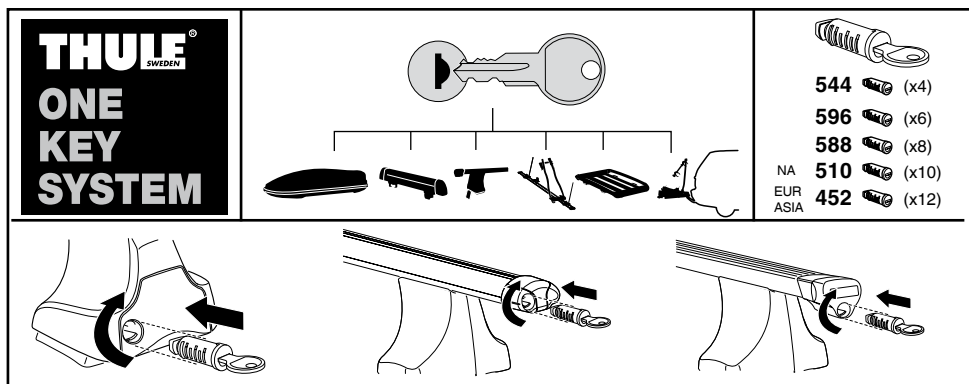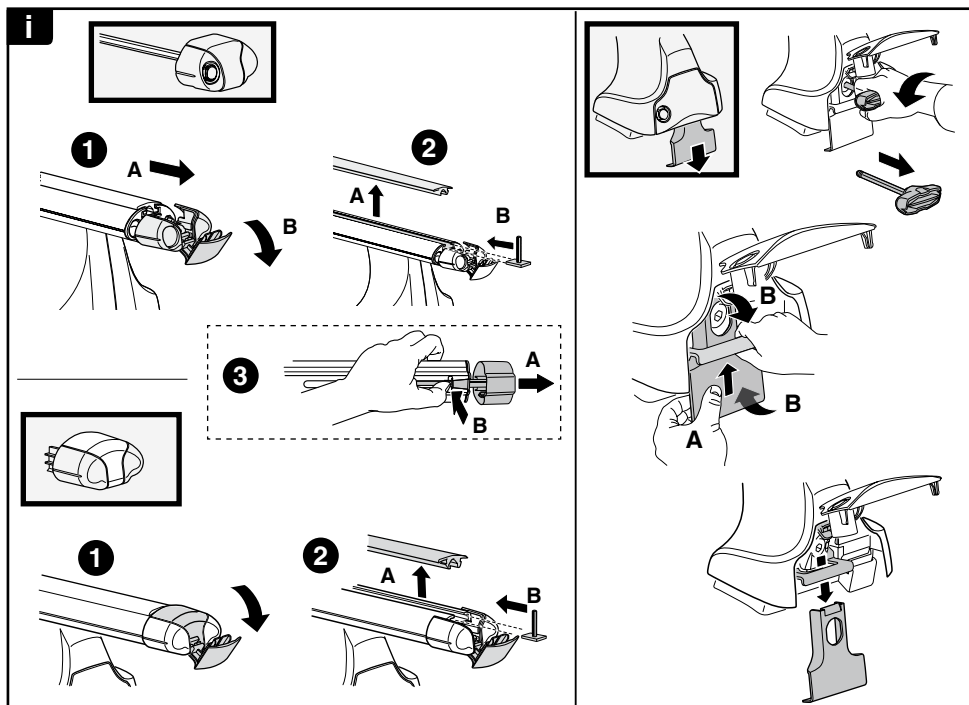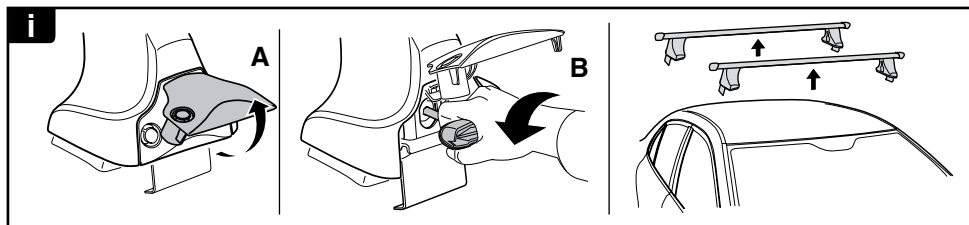   



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.