 




Kit 1624

HONDA CR-Z, 3-dr Hatchback, 10–16 / *11–17


*North America

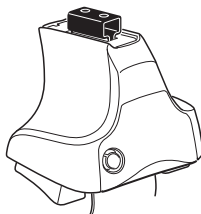

  754 Rapid System
480R Rapid Traverse (North America)

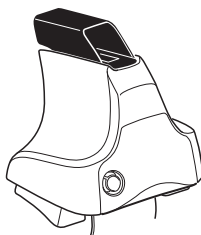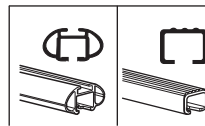

480 Traverse (North America)

 

THULE[®]
SWEDEN

ISO 11154-E

754 Rapid System

480R Rapid Traverse (North America)


754 Rapid System

480 Traverse (North America)

Europe		North America	

Exploded view of the front panel assembly. The front panel bezel is shown with four screws (1142, 1143, 1144) and the front panel bezel cover is shown with two screws (353, 354).


 
1

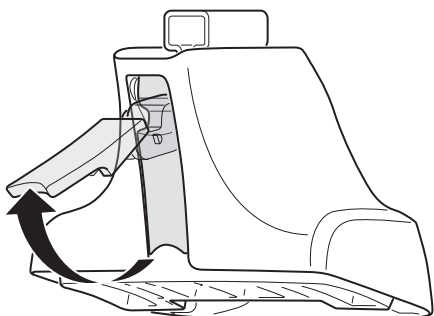


2



  
754 Rapid System
480R Rapid Traverse
(North America)

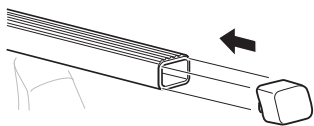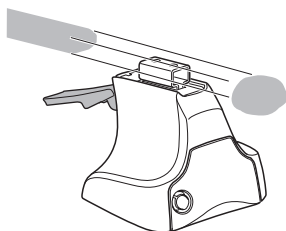

x4

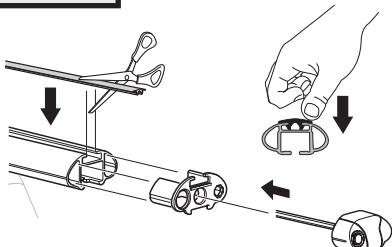 



x4

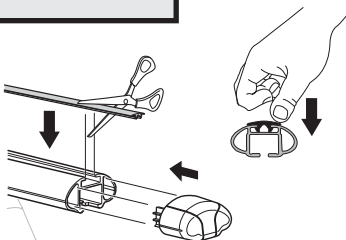 

x4




  480 Traverse
(North America)

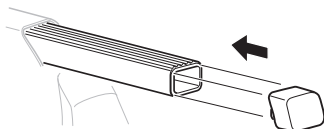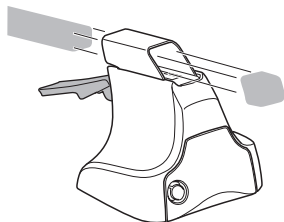


x4

 3




754 Rapid System

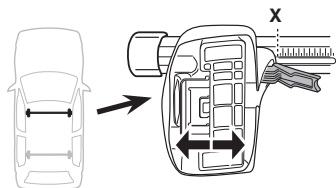 

HONDA CR-Z, 3-dr Hatchback, 10-16 / *11-17

X

 31

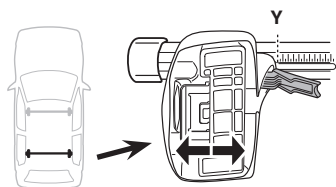

HONDA CR-Z, 3-dr Hatchback, 10-16 / *11-17

Y

26,5

3



480R Rapid Traverse



480 Traverse



(North America)



HONDA CR-Z, 3-dr Hatchback, 10-16 / *11-17

X inch

X mm

37 ⁷/₈ "

961 mm



HONDA CR-Z, 3-dr Hatchback, 10-16 / *11-17

 
Y inch

Y mm

36 ¹/₈ "

916 mm




4

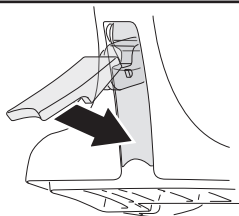


5

HONDA CR-Z, 3-dr Hatchback, 10-16 / *11-17

   
SRA

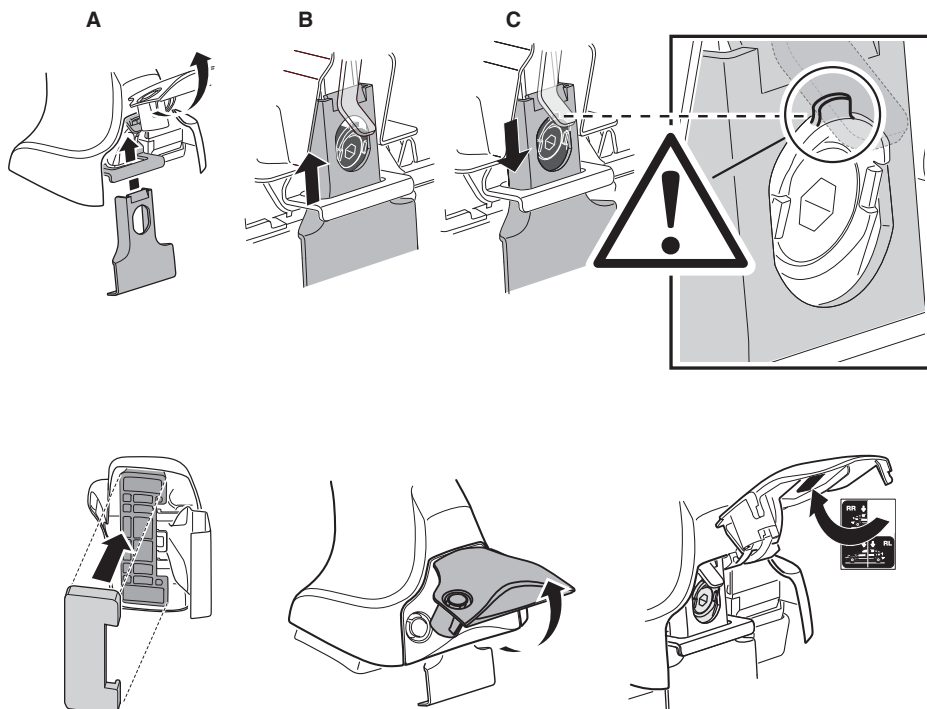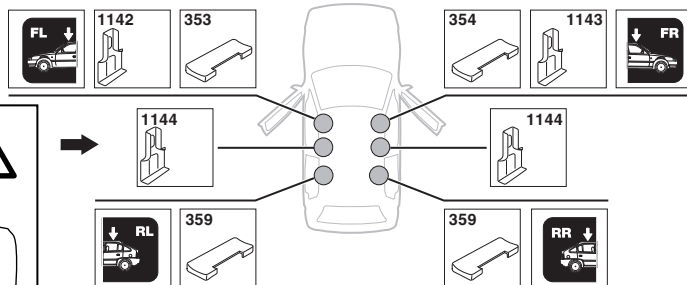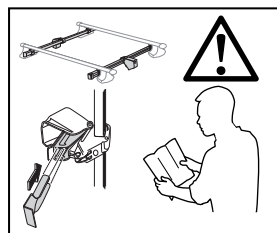


6

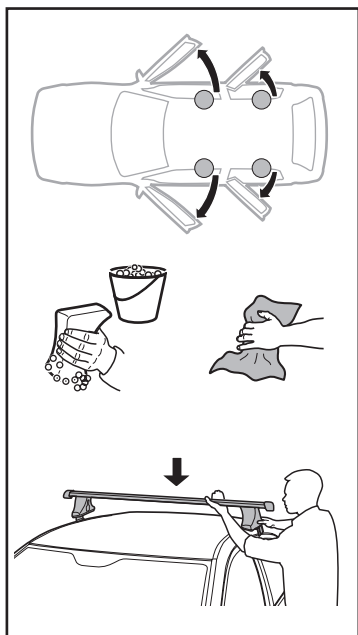 



i

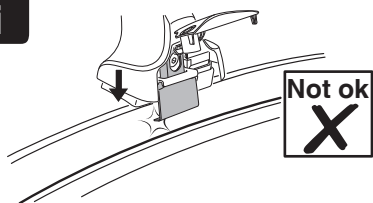 


A

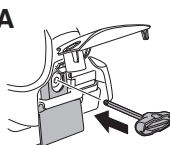 


B

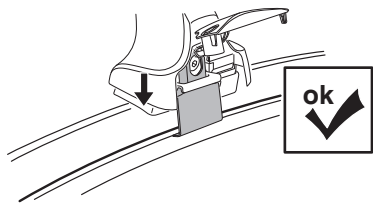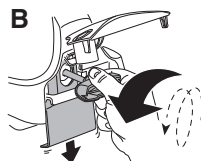  

	X mm	Y mm	Z mm	X inch	Y inch	Z inch
HONDA CR-Z, 3-dr Hatchback, 10-16 / *11-17	80 mm	610 mm	460 mm	3 1/8"	24"	18 1/8"

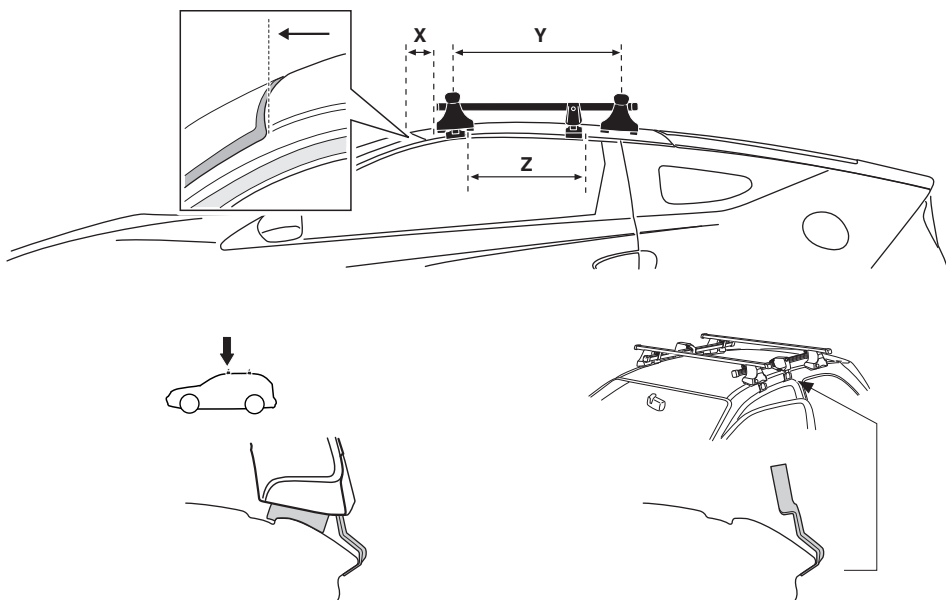 

7

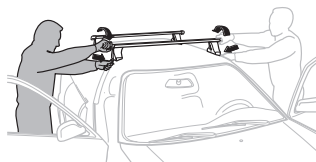 

GB/US	Tighten alternately
D	Die Schrauben abwechselnd anziehen
F	Serrer alternativement chaque côté
NL	Afwisselend aan de linker- en de rechterkant aandraaien
I	Alternare il serraggio delle viti
E	Apretar alternativamente
PT	Aperte alternadamente
S	Dra åt växelvis
FIN	Kierrä vuorotellen
EST	Pinguldage vaheldumisi
LAT	Pielvelciet pamišus
LIT	Užsukinėkite pakaitomis
PL	Śruby dokręcaj naprzemiennie
RU	Затягивайте попеременно





CZ	Pokręťta багаžníka dokręcaj dokręcaj naprzemiennie.
SK	Dofahujte striedavo
SLO	Privijajte izmenično.
HR	Naizmjenočno zategnite
HU	Egy mástól fűggetlenül szorítandó
GR	Σφιγγετε εναλλάξ
TR	Dönüşümlü sıkın

中文 交替拧紧



한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

    ไทย ชั้นในแบบสลับ

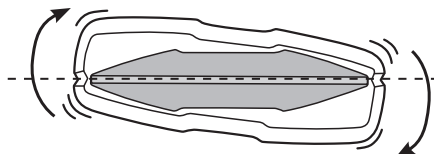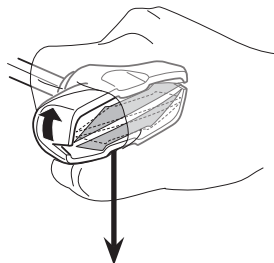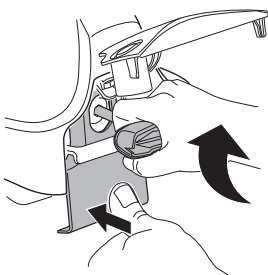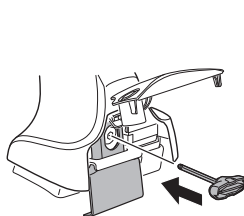


≈ 3 Nm

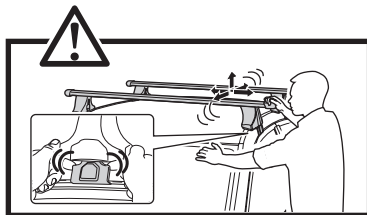 
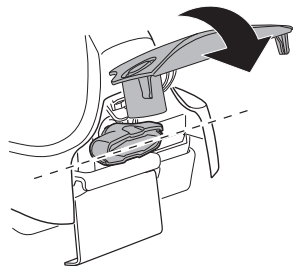 


8



   x1
17 mm

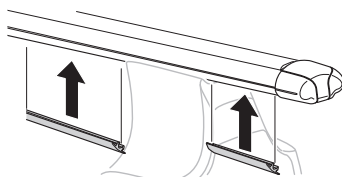

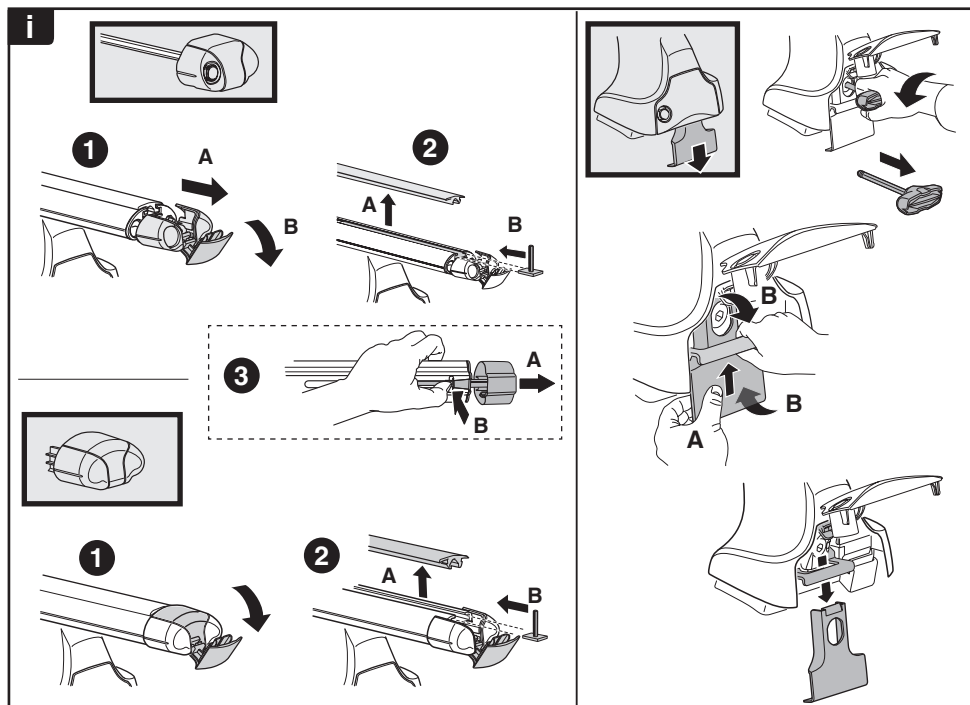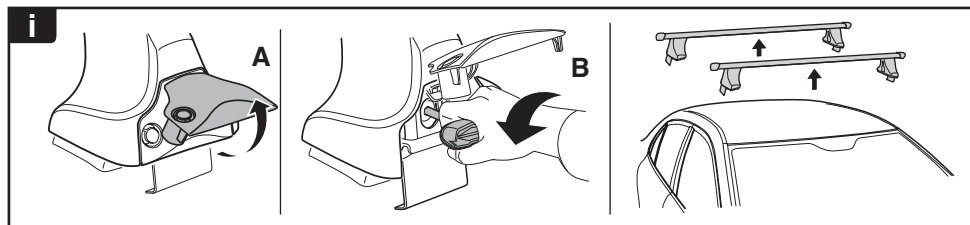

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.