

Thule Rapid System Kit 1325





> Instructions

BMW 5-Series, 4-dr Sedan, 04-10

BMW 5-Series, 5-dr Touring, 04-10 (without railing)

BMW 5-Series, 5-dr Wagon, *04-10 (without railing)

*North America

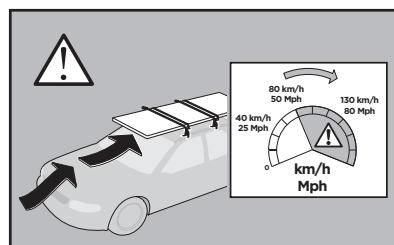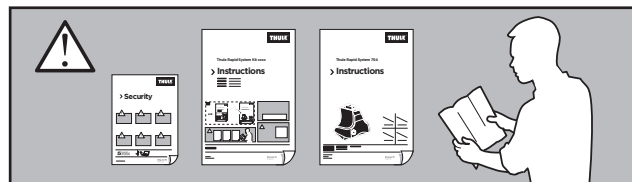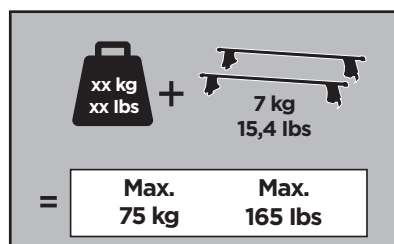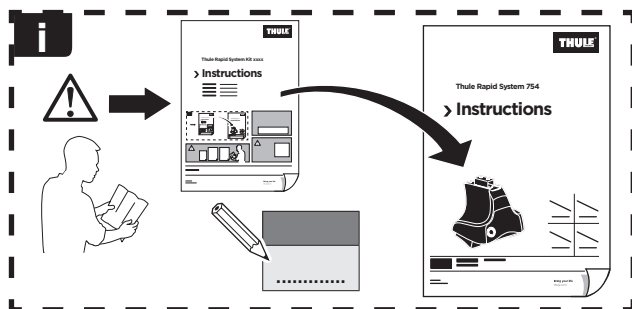

ISO 11154-E

141325

 
C.20160422
519-1325-05

Bring your life
thule.com



137

x4



591

x2

 


595

x2






x1



x1

1

	X (scale)	X (mm)	X (inch)
BMW 5-Series, 4-dr Sedan, 04-10	36,5	1016	40
BMW 5-Series, 5-dr Touring, 04-10 (without railing)	36,5	1016	40
BMW 5-Series, 5-dr Wagon, *04-10 (without railing)	36,5	1016	40

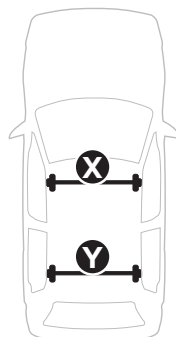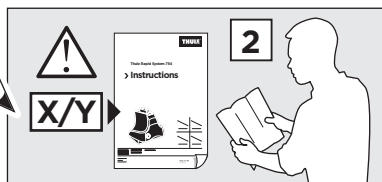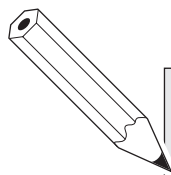



	Y (scale)	Y (mm)	Y (inch)
BMW 5-Series, 4-dr Sedan, 04-10	36	1011	39 ³/₄
BMW 5-Series, 5-dr Touring, 04-10 (without railing)	34	991	39
BMW 5-Series, 5-dr Wagon, *04-10 (without railing)	34	991	39

2



BMW 5-Series, 4-dr Sedan, 04-10

BMW 5-Series, 5-dr Touring, 04-10 (without railing)



BMW 5-Series, 5-dr Wagon, *04-10 (without railing)

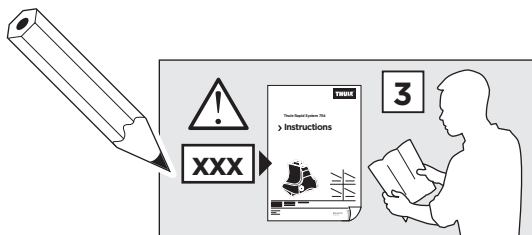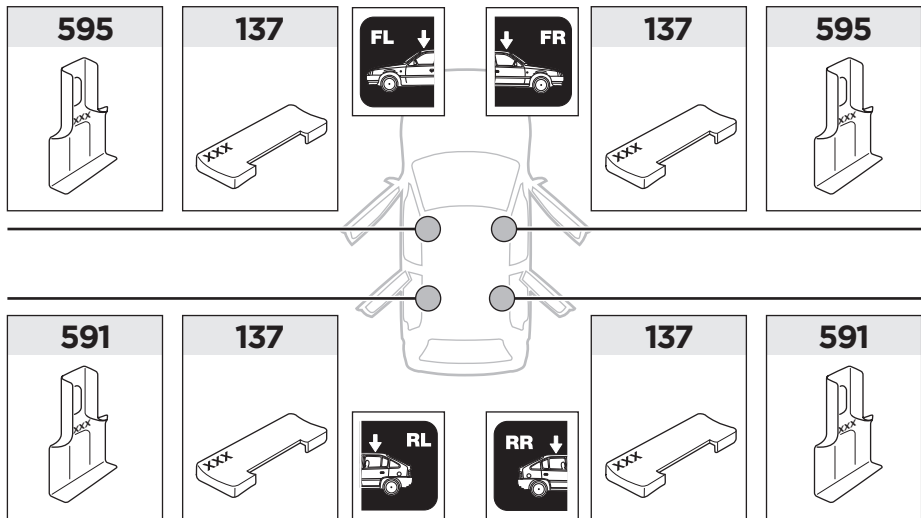

3

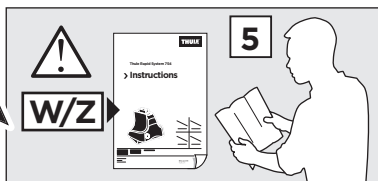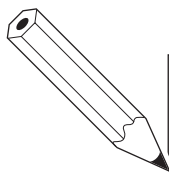

	W (mm)	Z (mm)	W (inch)	Z (inch)
BMW 5-Series, 4-dr Sedan, 04-10	270	750	10 ⁵/₈	29 ¹/₂
BMW 5-Series, 5-dr Touring, 04-10 (without railing)	270	700	10 ⁵/₈	27 ¹/₂
BMW 5-Series, 5-dr Wagon, *04-10 (without railing)	270	700	10 ⁵/₈	27 ¹/₂

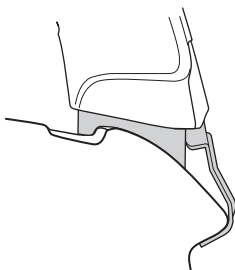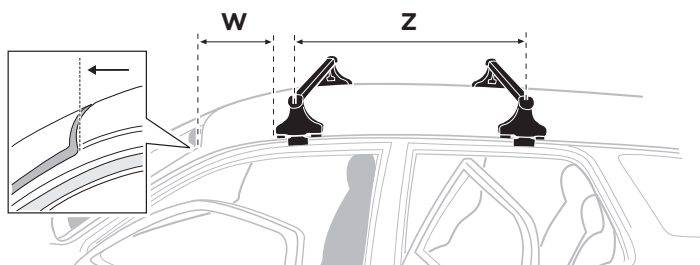



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.