

Wanderer10A/30A Installation Notes :

- The default starting position of the Wanderer controller terminal hatches are closed (in the UP position) that could mistakenly look like an open wire hatch.
- Make sure to FIRST lower each terminal hatch by screwing the terminals counterclockwise to expose the wire terminal hatch to open position.
- THEN secure each cable by rotating the screws clockwise to the closed position.



Wanderer10A



Wanderer30A



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.