



WFCO Product List

WF-8500 Series Power Center 40 and 60 Amps DC

WF-8540-S	30 Amp AC service, Main and 9 branch AC circuits, 13 DC branch circuits, 40 Amps, Screw Terminals
WF-8540-Q	30 Amp AC service, Main and 9 branch AC circuits, 13 DC branch circuits, 40 Amps, QC Terminals
WF-8540-W	30 Amp AC service, Main and 9 branch AC circuits, 13 DC branch circuits, 40 Amps, Pig Tail Wires
WF-8560-S	30 Amp AC service, Main and 9 branch AC circuits, 13 DC branch circuits, 60 Amps, Screw Terminals
WF-8560-Q	30 Amp AC service, Main and 9 branch AC circuits, 13 DC branch circuits, 60 Amps, QC Terminals
WF-8560-W	30 Amp AC service, Main and 9 branch AC circuits, 13 DC branch circuits, 60 Amps, Pig Tail Wires

WF-8700 Series Power Center 12 to 40 Amps DC

WF-8712-P	30 Amp AC service, Main and 3 branch AC circuits, 4 DC branch circuits, 12 Amps
WF-8712-PB	30 Amp AC service, Main and 3 branch AC circuits, 4 DC branch circuits, 12 Amps - Black
WF-8725-P	30 Amp AC service, Main and 3 branch AC circuits, 4 DC branch circuits, 25 Amps
WF-8725-PB	30 Amp AC service, Main and 3 branch AC circuits, 4 DC branch circuits, 25 Amps - Black
WF-8735-P	30 Amp AC service, Main and 5 branch AC circuits, 6 DC branch circuits, 35 Amps
WF-8735-PB	30 Amp AC service, Main and 5 branch AC circuits, 6 DC branch circuits, 35 Amps - Black
WF-8740-P	30 Amp AC service, Main and 5 branch AC circuits, 6 DC branch circuits, 40 Amps
WF-8740-PB	30 Amp AC service, Main and 5 branch AC circuits, 6 DC branch circuits, 40 Amps - Black

WF-8935 Series Power Center - 35 Amps DC

WF-8935PEC	30 Amp AC service, Main and 5 branch AC circuits, 11 DC branch circuits
WF-8935PEC-B	30 Amp AC service, Main and 5 branch AC circuits, 11 DC branch circuits - Black
WF-8935-MBA	Replacement Converter - Main Board Assembly

WF-8945 Series Power Center - 45 Amps DC

WF-8945PEC	30 Amp AC service, Main and 5 branch AC circuits, 11 DC branch circuits
WF-8945PEC-B	30 Amp AC service, Main and 5 branch AC circuits, 11 DC branch circuits - Black
WF-8945PEC-B/T30	30 Amp AC service, Main and 5 branch AC circuits, 11 DC branch circuits with T-30 - Black
WF-8945-MBA	Replacement Converter - Main Board Assembly

WF-8955 Series Power Center - 55 Amps DC

WF-8955PEC	30 Amp AC service, Main and 5 branch AC circuits, 11 DC branch circuits. New Generation
WF-8955PEC-B	30 Amp AC service, Main and 5 branch AC circuits, 11 DC branch circuits. New Generation - Black
WF-8955PEC-B/T30	30 Amp AC service, Main and 5 branch AC circuits, 11 DC branch circuits. New Gen. - Black with T-30
WF-8955PEC/T30	30 Amp AC service, Main and 5 branch AC circuits, 11 DC branch circuits. New Gen. with T-30
WF-8955-MBA	Replacement Converter - Main Board Assembly
WF-8955PEC-MBA	Replacement Converter - Main Board Assembly - New Generation
WF-8950L2-MBA	Lithium-Ion Replacement Converter - Main Board Assembly

WF-8965 Series Power Center - 65 Amps DC

WF-8965AN-P	30 Amp AC service, Main and 5 branch AC circuits, 11 DC branch circuits
WF-8965AN-PB	30 Amp AC service, Main and 5 branch AC circuits, 11 DC branch circuits - Black
WF-8965ANP/T30	30 Amp AC service, Main and 5 branch AC circuits, 11 DC branch circuits with T-30
WF-8965ANPB/T30	30 Amp AC service, Main and 5 branch AC circuits, 11 DC branch circuits - Black with T-30
WF-8965-MBA	Replacement Converter - Main Board Assembly

WF-8975 Series Power Center - 75 Amps DC

WF-8975AN-P	30 Amp AC service, Main and 5 branch AC circuits, 11 DC branch circuits
WF-8975AN-PB	30 Amp AC service, Main and 5 branch AC circuits, 11 DC branch circuits - Black
WF-8975-MBA	Replacement Converter - Main Board Assembly

WF-9500 Series Power Center 40 to 80 Amps DC

WF-9540	50 Amp AC service, 2 Main and up to 12 branch AC circuits, 17 DC branch circuits, 40 Amps
WF-9560	50 Amp AC service, 2 Main and up to 12 branch AC circuits, 17 DC branch circuits, 60 Amps
WF-9580	50 Amp AC service, 2 Main and up to 12 branch AC circuits, 17 DC branch circuits, 80 Amps

WF-9960 Series Power Center - 60 Amps DC

WF-9960	50 Amp AC service, Main and 12 branch AC circuits, 18 DC branch circuits
---------	--

WF-9990 Series Power Center - 90 Amps DC

WF-9990	50 Amp AC service, Main and 12 branch AC circuits, 18 DC branch circuits
---------	--

Transfer Switches

T-30	30 Amps Automatic Power Transfer - Shore to Generator
------	---

T-57	50 Amps Automatic Power Transfer - Shore to Generator
------	---

Universal Replacement Kits for Non-WFCO Power Centers

WF-8945-REP	Converter/Charger 45 Amps DC Output, includes 11 branch circuit fuses, using WF-9845
WF-8955-REP	Converter/Charger 55 Amps DC Output, includes 11 branch circuit fuses, using WF-9855

WF-6800 Series Deckmount Converter/Charger – 80 to 100 Amps DC

WF-68100	100 Amps DC Output with Power Factor Correction, reverse polarity fuses (15 Amps AC Power Cord)
----------	---

WF-9800 Series Deckmount Converter/Charger – 35 to 75 Amps DC

WF-9835	35 Amps DC Output, reverse polarity fuses (15 Amps AC Power Cord)
WF-9845	45 Amps DC Output, reverse polarity fuses (15 Amps AC Power Cord)
WF-9855	55 Amps DC Output, reverse polarity fuses (15 Amps AC Power Cord)
WF-9865	65 Amps DC Output, reverse polarity fuses (20 Amps AC Power Cord)
WF-9875	75 Amps DC Output, reverse polarity fuses (20 Amps AC Power Cord)
WF-9850L2	50 Amps Lithium-Ion Battery Converter-Charger

220VAC Models (used in Europe, Australia or wherever 220VAC is available)

WF-8725E	Power Center for 220V AC service, Main and 3 branch circuits, 25 Amps DC Output with 4 circuits
WF-8725EB	Power Center for 220V AC service, Main and 3 branch circuits, 25 Amps DC Output with 4 circuits - Black
WF-8735E	Power Center for 220V AC service, Main and 3 branch circuits, 35 Amps DC Output with 4 circuits
WF-8735EB	Power Center for 220V AC service, Main and 3 branch circuits, 35 Amps DC Output with 4 circuits - Black
WF-8955E	Power Center for 220V AC service, Main and 5 branch circuits, 55 Amps DC Output with 11 circuits
WF-8955EB	Power Center for 220V AC service, Main and 5 branch circuits, 55 Amps DC Output with 11 circuits - Black
WF-8855E	Converter/Charger Deckmount for 220V AC, 55 Amps DC Output (15 Amps power cord)

WF-8930/50 Series Distribution Panel

WF-8930/50NP	30 Amp or 50 Amp AC service, Main and 12 branch AC circuits, 15 DC circuits
WF-8930/50NPB	30 Amp or 50 Amp AC service, Main and 12 branch AC circuits, 15 DC circuits - Black
WF-8930/50NP-30	30 Amp AC service, Main and 5 branch AC circuits, 15 DC circuits
WF-8930/50NPB-30	30 Amp AC service, Main and 5 branch AC circuits, 15 DC circuits - Black

WF-5100 Series Pure Sine Wave Power Inverter

WF-5110R	1000-Watt Pure Sine Wave Inverter
WF-5118	1800-Watt Pure Sine Wave Inverter
WF-5120	2000-Watt Pure Sine Wave Inverter

Energy Management Switches- 15 Amps & 20 Amps

EM-15	15 Amp Energy Management Branch Circuit Expander
EM-20	20 Amp Energy Management Branch Circuit Expander

Fuse Boards & Door Latches

WF-87/8900-DL	Door Latch for all WFCO Power Centers & Distribution Panels Excluding the WF-8712 & WF-8725 Power Centers
8500-W-PCB	Fuse Board for WF-8500 Series Power Centers with Hard Wired Pigtail Outputs
8500-S-PCB	Fuse Board for WF-8500 Series Power Centers with Screw Output Terminals
8500-Q-PCB	Fuse Board for WF-8500 Series Power Centers with Spade Type Quick Disconnect Terminals
8500-S-PCB-J	Fuse Board for WF-8500 Series Power Centers with Screw Output Terminals and an Additional Battery Output Terminal
8500-W-PCB-J	Fuse Board for WF-8500 Series Power Centers with Hard Wired Pigtail Outputs and an Additional Battery Output Terminal
8930/50N-PCB	Fuse Board for WF-8930/50 Distribution Panels with Screw Output Terminals
8935/45/55-PCB	Fuse Board for WF-8935, WF-8945, & WF-8955 Power Centers with Screw Output Terminals
8935/45/55-PCB-J	Fuse Board for WF-8935, WF-8945, & WF-8955 Power Centers with Screw Output Terminals and an Additional Battery Output Terminal
8965/75AN-PCB	Fuse Board for WF-8965 & WF-8975 Power Centers with Screw Output Terminals
9500-W-PCB	Fuse Board for WF-9500 Series Power Centers with Hard Wired Pigtail Outputs
9500-S-PCB	Fuse Board for WF-9500 Series Power Centers with Screw Output Terminals
9500-S-PCB-J	Fuse Board for WF-9500 Series Power Centers with Screw Output Terminals and an Additional Battery Output Terminal
9500-W-PCB-J	Fuse Board for WF-9500 Series Power Centers with Hard Wired Pigtail Outputs and an Additional Battery Output Terminal
9960/90-PCB	Fuse Board for WF-9900 Series Power Centers with Screw Output Terminals
9960/90-PCB-J	Fuse Board for WF-9900 Series Power Centers with Screw Output Terminals and an Additional Battery Output Terminal



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.