


INSTALLATION

Not provided: Screwdriver and Ethernet cables

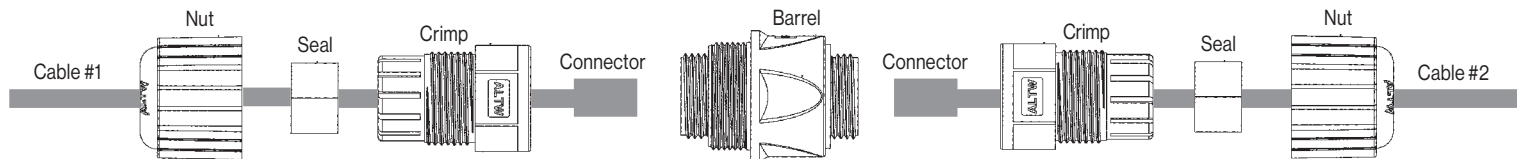

- 1 **TAKE** apart each piece of the coupler.
- 2 **USE** a screw driver or similar tool to push through the crimp and force out the rubber seal. Set the seal aside for later.
- 3 **SLIDE** the end of the Ethernet cable #1 through the nut before threading the cable through the crimp.

- 4 **SLIP** the rubber seal onto Ethernet cable #1 via the side slit. Push the rubber seal back into the crimp.
- 5 **PLUG** the connector into the barrel and make sure it clicks. Slide the crimp until it is threaded snugly onto the barrel. Screw the nut back onto the crimp and tighten until snug.
- 6 **REPEAT** the process with Ethernet cable #2.



For more product details
visit Winegard's website.

Winegard Company 2736 Mt. Pleasant St. | Burlington, IA 52601
Printed in U.S.A. © 2021 Winegard Company

All trademarks, registered trademarks, and logos are the property of their respective owners and are not affiliated with Winegard Company.



WINEGARD®



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.