

Pigtail Assembly Replacement RP-G2PT

For assistance email
help@winegard.com
or call 1-800-788-4417



Figure 1

- 1 Using either a Phillips head screw driver or 5/16" socket, remove six dome screws and dome (see figure 1).

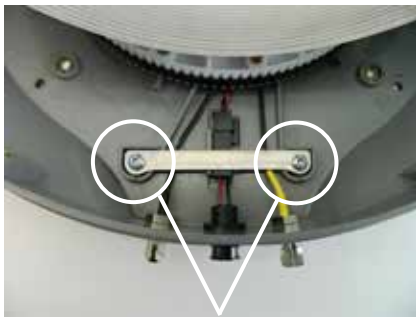


Figure 2

- 2 Remove security strap by loosening two screws with T20 Torx Driver (see figure2).



Figure 3

- 3 Once security strap is removed, disconnect pigtail connection from wire wrap by depressing lever gently separating the two connectors (see figure 3).



Figure 4

- 4 After disconnecting the pigtail connection, use 13/16" socket to loosen exterior nut. When nut is taken off, the existing pigtail can be removed. It must be removed from the inside of the base (see figure 4).

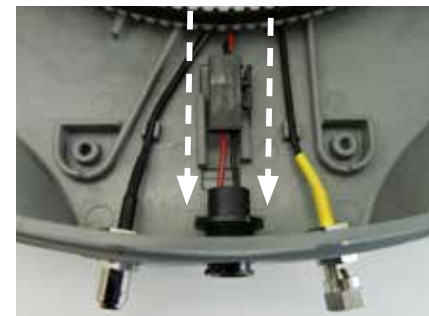


Figure 5

- 5 Install replacement pigtail by sliding it through base hole from the inside of the base, ensuring it is flush against the base. Secure pigtail in position by threading on supplied exterior nut until hand tight, then tightening an additional quarter-turn with 13/16" driver (see figure 5).
- 6 Attach pigtail and wire wrap connectors together.
- 7 Re-install security strap by using T20 Torx Driver.
- 8 Re-install dome by using six dome screws and Phillips head screw driver or 5/16" socket.





This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.