

WiFiRanger Osprey

LTE WiFi Router | Fast and Secure

**SCAN TO DOWNLOAD OUR
USER GUIDE**



SUPPORT HOURS AND CONTACT INFORMATION AVAILABLE ON

<https://wifiranger.com/support/#contact>

PHONE

208.321.5544

EMAIL

support@wifiranger.com

MAILING ADDRESS

943 W Overland Road | Suite 144 | Meridian ID 83642

WIFIRANGER

A WINEGARD COMPANY

www.WiFiRanger.com

WiFiRanger Osprey

LTE WiFi Router | Requires Winegard Air 360+

**INSTALL &
QUICK START
GUIDE**



WIFIRANGER

A WINEGARD COMPANY

www.WiFiRanger.com

INSTALL GUIDE

- 1 Confirm you own a Winegard Air360+. Remove the Osprey from it's packaging. You will see the Osprey, mounting plate, and screws for mounting to the RV ceiling.
- 2 Locate the Pre-Wire cap in the ceiling of your RV and remove the cap.
- 3 Confirm there are 4 wires to plug into the Osprey: Red, Yellow, Green and a Black power cable.
- 4 Attach the Osprey mounting plate using the tape and screws, using the existing screw holes from the Winegard Air 360+ ceiling port access.
- 5 Connect the wires to the proper ports by color on the Osprey.
- 6 Attach the wire housing to the Osprey mounting plate.
- 7 Attach the Osprey to the mounting plate following the diagram on the bottom of the mounting plate.
- 8 Power the Air360+ unit on.

QUICK START GUIDE

- 1 Wirelessly connect a device (phone, tablet, laptop) to the **Osprey's** broadcast
 - a. Find **Pvt.WiFiRanger_Osprey.XXYY** network
 - b. Enter **password changemenowXXYY** when prompted

Deducing Osprey Password
 Replace **XXYY** with the four numbers that are shown at the end of the broadcast to deduce the Password of your Osprey. For example; if your phone, tablet or computer sees the broadcast Pvt.WiFiRanger_Osprey.**5678** you would deduce the following:
PASSWORD: "changenow**5678**"
- 2 Open a web browser on the device you just connected to the **Osprey's** network with
 - a. In the address bar on your browser, type in and go to **http://mywifiranger.com**
- 3 You should now be on the **Osprey's** Control Panel.
- 4 You can get the **Osprey** connected to the internet using WiFi
 - a. On "**Main**" tab of the Control Panel, press the scan button to scan for networks, then connect to the desired broadcast in the list below.
 - b. You have to enter a password to connect to the network

Recommended Configuration Changes

 - A. As soon as you're on the control panel, change your default SSID and WPA key to something only you would know, in the "**WiFi**" tab. The default credentials are well known, and you don't want just anyone accessing your Internet.
 - B. Turn on "**Failover**" located in the "**Setup**" tab
 - C. Turn on "**Usage Tracking**" located in the "**Usage**" tab



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.