

Configuration Menu Structure — Overview

Clear Errors in PROsine	Configure PROsine—Basic	Configure PROsine—Advanced	Configure Display Panel	Configure Battery	Diagnostics
Clear Errors: - Yes - No Note: This menu item is only available when an error is active in the PROsine and the display panel in in Configure mode.	AC Breaker Size Load Sensing Equalize	Load Sensing Load Sense Power Load Sense Interval Low AC Transfer (V) Low AC Transfer (Hz) High AC Transfer (V) High AC Transfer (Hz) AC Series Mode Inverter Low V Shutdown Inverter Low V Warning Inverter Low V Restart Hysteresis Run Without Panel Inverter After Reset Without Panel Charger After Reset Without Panel Auto Restart After Error Reset to Defaults	Audible Alarm LCD Backlight Mode LCD Backlight Brightness LCD Backlight Timeout Temperature (C/F)	Battery Size Default Battery Temp Battery Type View/Change Battery Details: - Battery Temp. Coefficient - Mode Settings: Bulk Charge - Max Voltage - Max Current (%C) - Threshold Voltage - Threshold Timeout - Mode Settings: Absorption - Max Voltage - Max Current (%C) - Max Timeout - Threshold Current (%C) - Threshold Timeout - Mode Settings: Overcharge - Max Voltage - Max Current (%C) - Max Timeout - Mode Settings: Float - Max Voltage - Max Current (%C) - Max Timeout - Threshold Voltage - Threshold Timeout - Mode Settings: Equalize - Max Voltage - Max Current (%C) - Max Timeout - Threshold Change - Threshold Timeout - Mode Settings: Constant - Voltage Setpoint - Current Setpoint Charger Mode Charger Type Charger High Battery V Warning Offset	PS System Mode View Last 20 PROsine Faults Clear PROsine Fault Log View Last 10 Panel Faults AC Bad Cause View Software Versions: - LVP Software Revision - HVP Software Revision - Display Software Revision - Display EEPROM Revision View System Temperatures: - Temperature at Panel - PROsine Unit Temp. 1 - PROsine Unit Temp. 2 PROsine HVDC

PROsine 2.0 Errors

When an error is active in the PROsine, you can access the Clear Errors menu. By selecting Yes, you tell the PROsine that you have attempted to correct the error condition and the PROsine should attempt a restart.

Warning, Error, and Panel Fault Messages

The last 20 Warning and Error messages (and the last 10 Panel Fault messages) are recorded so you can view them for troubleshooting purposes. View messages by select-ing View Last 20 PROsine Faults (or View Last 10 Panel Faults) on the Diagnostics menu. Some Error messages appear as Internal Error nnnn where nnnn is the number of the error. If one of these errors causes the PROsine to shut down, attempt to restart the unit. If the error occurs again, call Xantrex. Other messages describe problems you can troubleshoot.

Troubleshooting

For details about Warning, Error, and Panel Fault messages, see the Troubleshooting section of the User’s Manual. If you need to contact Xantrex, please record what is required in the “Information About Your System” section of the manual before calling.

This quick reference guide is intended as a job aid. For complete details, please consult your User’s Manual.

PROsine Default Values

Item	Default Value	Your Settings
NOTE At a minimum, configure the items marked with a ** after installation.		
Adjustable From the Configure PROsine—Basic Menu		
AC Breaker Size	15 amps	**
Adjustable From the Configure PROsine—Advanced Menu		
Load Sensing	Disabled	
Load Sense Power	100 Watts	
Load Sense Interval	1 second	
Low AC Transfer (V)	90V	
Low AC Transfer (Hz)	55Hz	
High AC Transfer (V)	130V	
High AC Transfer (Hz)	65Hz	
AC Series Mode	Standalone	
Inverter Low V Shutdown	10V	
Inverter Low V Warning	+0.5V	
Inverter Low V Restart Hysteresis (INV Low V Restrtr Hyst)	2.5V	
Run Without Panel	NO	
Inverter Enabled on Reset Without Panel	Disabled	
Charger Enabled on Reset Without Panel	Disabled	
Auto Restart After Error	NO	**
Adjustable From the Configure Display Panel Menu		
Audible Alarm	OFF	
LCD Backlight Mode	Auto	
LCD Backlight Brightness	50%	
LCD Backlight Timeout	20 seconds	
Temperature	Fahrenheit	
Adjustable From the Configure Battery Menu		
NOTE Settings below are for Battery Type = Generic Gel.		
Battery Size	200Ah	**
Default Battery Temperature (Dflt Batt Temp)	Warm	
Battery Type	Generic Gel	**
Battery Temp Coefficient (Batt Temp Coeff)	−27mV/°C	
Mode Settings: Bulk - Max Voltage - Max Current (%C) - Threshold Voltage - Threshold Timeout	14.2V 25% 13.8V 3min	
Mode Settings: Absorption - Max Voltage - Max Current (%C) - Max Timeout - Threshold Current (%C) - Threshold Timeout	14.2V 25% 8hr 1% 3min	

PROsine Default Values

Item	Default Value	Your Settings
Mode Settings: Overcharge - Max Voltage - Max Current (%C) - Max Timeout	14.2V 20% 0	
Mode Settings: Float - Max Voltage - Max Current (%C) - Max Timeout - Threshold Voltage - Threshold Timeout	13.8V 200% 21days 12.5V 15min	
Mode Settings: Equalize - Max Voltage - Max Current (%C) - Max Timeout - Threshold Voltage - Threshold Timeout	13.8V 200% 0 0 0	
Mode Settings: Constant - Voltage Setpoint - Current Setpoint	13.5V 100A	
Charger Mode	Standalone	
Charger Type	3-Step	
Charger High Battery V Warning Offset (CHG Hi V Warning Offset)	1.0V	

NOTE
The values opposite the gray bar are set when you select a battery type. If you did not subsequently change these settings, they do not need to be recorded.

Trademarks

PROsine 2.0 Inverter/Charger is a trademark of Xantrex International. Xantrex is a registered trademark of Xantrex International.

Notice of Copyright

PROsine 2.0 Inverter/Charger Quick Reference Guide © January 2006 Xantrex International. All rights reserved.

Disclaimer

UNLESS SPECIFICALLY AGREED TO IN WRITING, XANTREX TECHNOLOGY INC. (“XANTREX”) (a) MAKES NO WARRANTY AS TO THE ACCURACY, SUFFICIENCY OR SUITABILITY OF ANY TECHNICAL OR OTHER INFORMATION PROVIDED IN ITS MANUALS OR OTHER DOCUMENTATION. (b) ASSUMES NO RESPONSIBILITY OR LIABILITY FOR LOSS OR DAMAGE, WHETHER DIRECT, INDIRECT, CONSEQUENTIAL OR INCIDENTAL, WHICH MIGHT ARISE OUT OF THE USE OF SUCH INFORMATION. THE USE OF ANY SUCH INFORMATION WILL BE ENTIRELY AT THE USER’S RISK.

Date and Revision

January 2006 Revision B

Part Number

445-0089-01-01

Contact Information

Telephone: 1 800 670 0707 (toll free North America)
1 360 925 5097 (direct)

Fax: 1 800 994 7828 (toll free North America)
1 360 925 5143 (direct)

Email: customerservice@xantrex.com

Web: www.xantrex.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.