


FURRION

---

# Dishwasher

## *Instruction Manual*

FDW18SAC-SS

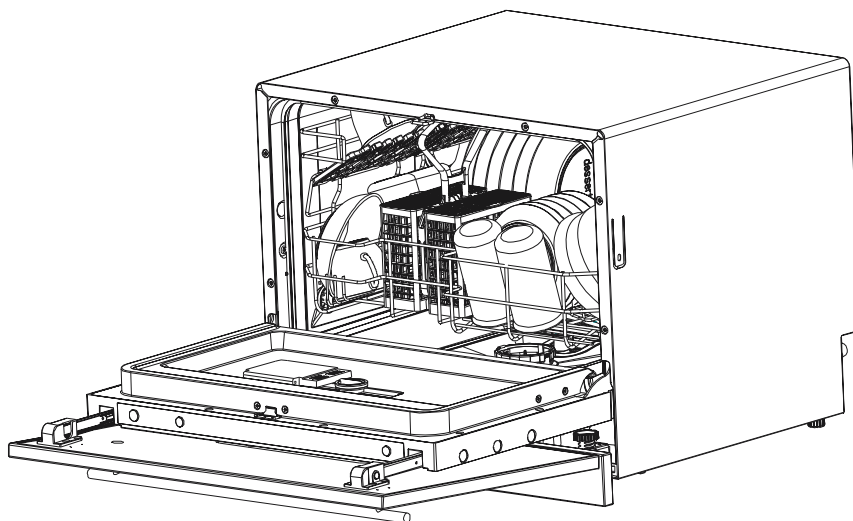

# Welcome

Thank you and congratulations for purchasing this Furrion® Dishwasher. Before placing your new appliance into operation, please read these operating instructions carefully. This instruction manual contains important information for safe use, installation and maintenance of the appliance.

Please keep this instruction manual in a safe place for future reference. This will ensure safe use and reduce the risk of injury to persons. Pass it onto possible new owners of the appliance.

The manufacturer does not accept responsibility for any damages that may arise due to non-observation of these instructions.

If you have any further questions regarding our products, please contact us at [support@furrion.com](mailto:support@furrion.com)



*Read this Manual*

Dear Customer,

- Please carefully read this manual before using the dishwasher to help you use and maintain the dishwasher properly.
- Keep this manual to refer to at a later date.  
Pass it on to any subsequent owner of the appliance.

This manual contains sections of Safety Instructions, Operating Instructions, Installation Instructions and Troubleshooting Tips, etc.

This product is suitable for use in modular homes and recreational vehicles.



*Before Calling for Service*

- Review the section on Troubleshooting Tips to help you to solve common problems by yourself.
- If you can not resolve the troubles by yourself, please ask for the help of professional technicians.



**NOTE:**

The manufacturer, following a policy of constant development and updating of the product, may make modifications without giving prior notice.

|                                                               |           |
|---------------------------------------------------------------|-----------|
| <b>1) Safety Information.....</b>                             | <b>1</b>  |
| <b>2) Operating Instructions.....</b>                         | <b>2</b>  |
| Control Panel.....                                            | 2         |
| Dishwasher Features.....                                      | 2         |
| <b>3) Prior to using for the first time .....</b>             | <b>3</b>  |
| A. Fill the Rinse Aid Dispenser.....                          | 3         |
| B. Function of Detergent .....                                | 4,5       |
| <b>4) Loading the Dishwasher Basket.....</b>                  | <b>6</b>  |
| Attention before or after loading the Dishwasher Baskets..... | 6         |
| Loading the Basket.....                                       | 7         |
| Cutlery Basket.....                                           | 8         |
| <b>5) Starting a washing program .....</b>                    | <b>9</b>  |
| Wash Cycle Table.....                                         | 9         |
| Turning on the Appliance.....                                 | 9         |
| Change the Program.....                                       | 10        |
| At the End of the Wash Cycle.....                             | 10        |
| <b>6) Maintenance and cleaning.....</b>                       | <b>11</b> |
| Filtering System.....                                         | 11        |
| Caring for the Dishwasher.....                                | 12        |
| <b>7) Installation instruction.....</b>                       | <b>13</b> |
| Positioning the Appliance.....                                | 14        |
| About Power Connection.....                                   | 14        |
| Water Connection.....                                         | 15        |
| Connection of Drain Hoses.....                                | 15        |
| Start of dishwasher.....                                      | 16        |
| <b>8) Troubleshooting Tips.....</b>                           | <b>17</b> |
| Before calling for service.....                               | 17        |
| Error codes.....                                              | 18        |
| <b>9) Technical information.....</b>                          | <b>19</b> |
| <b>10) Installation instruction.....</b>                      | <b>20</b> |

# 1. IMPORTANT SAFETY INFORMATION

## READ ALL INSTRUCTIONS BEFORE USING

**⚠ WARNING!** When using your dishwasher, follow the precautions listed below:



### GROUNDING INSTRUCTIONS

- This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance of electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug.
- The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances.

### ⚠ WARNING!

- Improper connection of the equipment-grounding conductor can result in a risk of electric shock.
- Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly grounded. Do not modify the plug provided with the appliance; If it is not fit for the outlet. Have a proper outlet installed by a qualified electrician.



### WARNING! PROPER USE

- Do not abuse, sit on, or stand on the door or dish rack of the dishwasher.
- Do not place any heavy objects or stand on the door when it is open. The appliance could tip forward.
- When loading items to be washed:
  - 1) Load sharp items so that they are not likely to damage the door seal;
  - 2) Warning: Knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position.
- When using your dishwasher, you should prevent plastic items from coming into contact with heating element. (This instruction is only applicable to machines with a visual heating element.)
- Check that the detergent receptible is empty after completion of the wash cycle.
- Do not wash plastic items unless they are marked dishwasher safe or the equivalent. For plastic items not so marked, check the manufacturer's recommendations.
- Use only detergent and rinse additives designed for an automatic dishwasher.
- Never use soap, laundry detergent, or hand washing detergent in your dishwasher. Keep these products out of the reach of children.
- Keep children away from detergent and rinse aid, keep children away from the open door of the dishwasher, there could still be some detergent left inside.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Dishwasher detergents are strongly alkaline, they can be extremely dangerous if swallowed. Avoid contact with skin and eyes and keep children away from the dishwasher when the door is open.
- The door should not be left in the open position since this could present a tripping hazards.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Please dispose of packing materials properly.
- Use the dishwasher only for its intended function.
- During installation, the power supply must not be excessively or dangerously bent or flattened. Do not tamper with controls.
- The appliance is to be connected to the water mains using new hose sets and that old hose-sets should not be reused.
- The maximum size of the dishes is 260mm.
- The maximum permissible inlet water pressure is 1Mpa.
- The minimum permissible inlet water pressure is 0.04Mpa.

**READ AND FOLLOW THIS SAFETY INFORMATION CAREFULLY**  
**SAVE THESE INSTRUCTIONS**

## 2. Operation Instruction



**! IMPORTANT** To get the best performance from your dishwasher, read all operating instructions before using it for the first time.

### Control Panel



- 1** Power indicator: To come on when Power ON/OFF button is pressed down.
- 2** ON/OFF Button: To turn on/off the power supply.
- 3** Delay time display : To display booking time .
- 4** Delayed Start Button: Press this button to set the delayed hours for washing. You can delay the start of washing up to 24 hours. One press on this button delays the start of washing by one hour.
- 5** Rinse Aid Warning Light : To be on when the rinse aid dispenser needs to be refilled.
- 6** Program indicator : when you select washing program, the correspond light will display.
- 7** Program button :To select washing program when press the button.

### Dishwasher Features

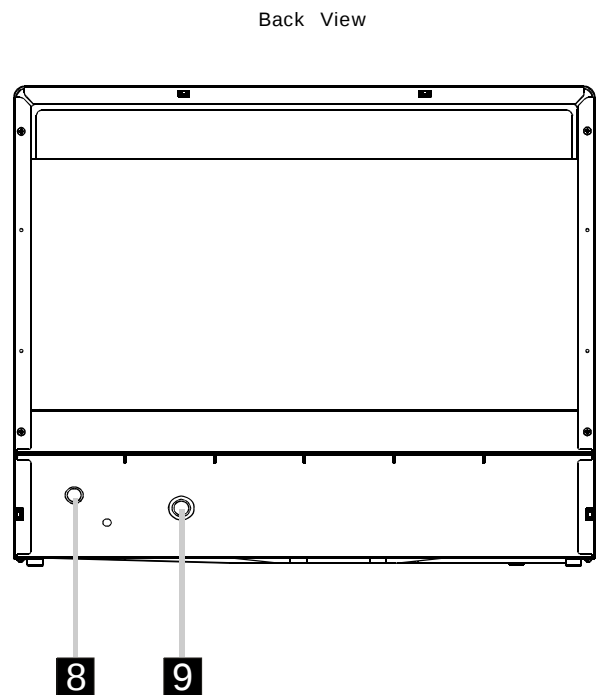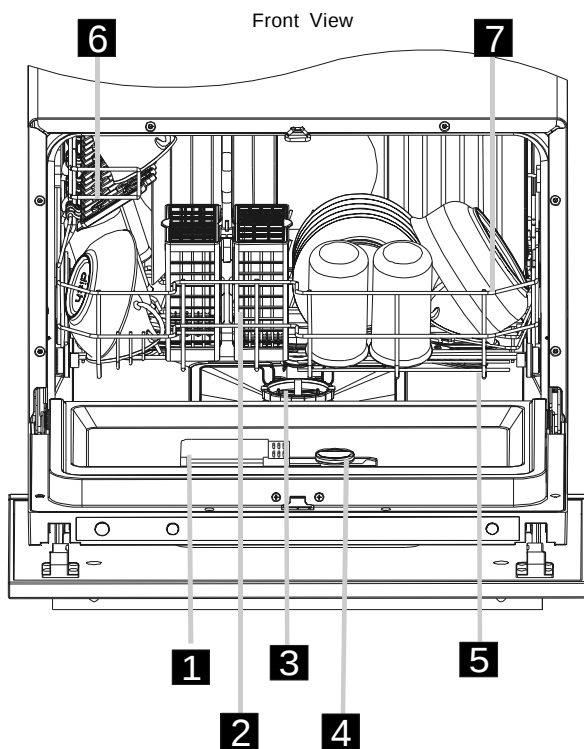

- |                              |                              |                     |                               |                               |
|------------------------------|------------------------------|---------------------|-------------------------------|-------------------------------|
| <b>1</b> Detergent Dispenser | <b>3</b> Filter Assembly     | <b>5</b> Spray Arms | <b>7</b> Basket               | <b>9</b> Inlet Pipe Connector |
| <b>2</b> Cutlery Basket      | <b>4</b> Rinse Aid Dispenser | <b>6</b> Cup Shelf  | <b>8</b> Drain Pipe Connector |                               |

### 3. Prior to using for the first time

#### A. Fill the Rinse Aid Dispenser

##### Rinse Aid Dispenser

The rinse aid is released during the final rinse to prevent water from forming droplets on your dishes. That can leave spots and streaks. It also improves drying by allowing water to sheet off the dishes. Your dishwasher is designed to use liquid rinse aids. The rinse aid dispenser is located inside the door next to the detergent dispenser. To fill the dispenser, open the cap and pour the rinse aid into the dispenser until the level indicator turns completely black. The volume of the rinse aid container is about 110ml.

##### Function of Rinse Aid

Rinse aid is automatically added during the last rinse, ensuring thorough rinsing, and spot and streak free drying.

##### Attention!

Only use branded rinse aid for dishwasher. Never fill the rinse aid dispenser with any other substances (e.g. Dishwasher cleaning agent, liquid detergent). This would damage the appliance.



##### When to Refill the Rinse Aid Dispenser

If there is no rinse-aid warning light in the control panel, you can judge the amount of rinse-aid by the color of the optical level indicator "C" located next to the cap. When the rinse-aid container is full, the whole indicator will be dark. As the rinse-aid diminishes, the size of the dark dot decreases. You should never let the rinse aid get below 1 / 4 full.

As the rinse aid diminishes, the size of the black dot on the rinse aid level indicator changes, as illustrated below.

- Full
- ◐ 3 / 4 full
- ◑ 1 / 2 full
- ◒ 1 / 4 full - Should refill to eliminate spotting
- Empty


C (Rinse-Aid indicator)

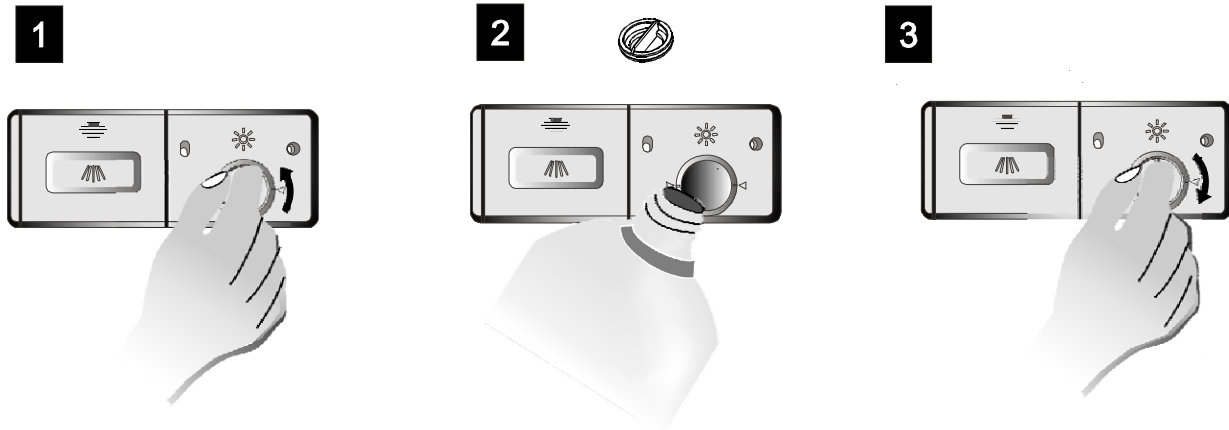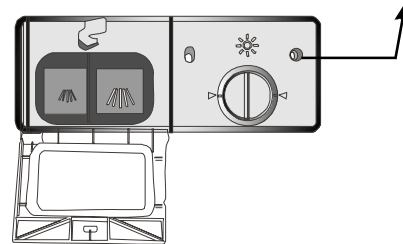

- 1 To open the dispenser, turn the cap to the "open" (left) arrow and lift it out.
- 2 Pour the rinse aid into the dispenser, being careful not to overfill.
- 3 Replace the cap by inserting it aligned with "open" arrow and turning it to the closed (right) arrow.

**NOTE:** Clean up any rinse aid split during filling with an absorbent cloth to avoid excessive foaming during the next wash. Don't forget to replace the cap before you close dishwasher door.

## Adjusting Rinse Aid Dispenser

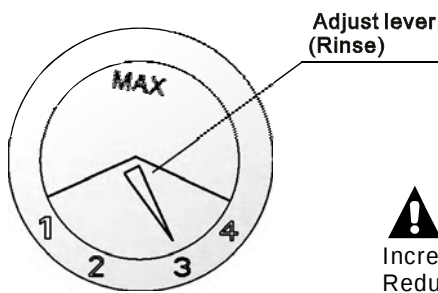

The rinse aid dispenser has four settings. The recommended setting is on "3". If the dishes still are not drying properly or are spotted, adjust the dial to the next higher number on "4".



### **NOTE:**

Increase the dose if there are drops of water or lime spots on the dishes after washing. Reduce it if there are sticky whitish stains on your dishes or a bluish film on glassware or knife blades.

## B. Function of Detergent

### Proper Use of Detergent

Detergents with chemical ingredients are necessary to remove dirt, crush dirt and transport it out of the dishwasher. Use only detergent specifically made for use in dishwashers. Keep your detergent fresh and dry. Don't put powder detergent into the dispenser until you're ready to wash dishes.

### Detergents

There are 3 sorts of detergents

1. With phosphate and with chlorine
2. With phosphate and without chlorine
3. Without phosphate and without chloride

Normally new pulverised detergent is without phosphate. The water softener function of phosphate is not given. In this case we recommend to fill salt in the salt container even when the hardness of water is only 6 ° dH. If detergents without phosphate were used in case of hard water often white spots appear at dishes and glasses. In this case please add more detergent to reach better results. Detergents without chlorine only bleach a little. Strong and colored spots will not be removed completely. In this case please choose a program with a higher temperature.

### Concentrated Detergent

Based on their chemical composition, dishwashers can be split in two basic types:

- conventional, alkaline detergents with caustic components
- low alkaline concentrated detergents with natural enzymes

The use of "normal" washing programs in conjunction with concentrated detergents reduces pollution and is good for your dishes; these wash programs are specially matched to the dirt-dissolving properties of the enzymes of the concentrated detergent. For this reason "normal" wash programs in which concentrated detergents are used can achieve the same results that can otherwise only be achieved using "heavy" program.

### Detergent Tablets

Detergent tablets of different brands dissolve at different speeds. For this reason some detergent tablets cannot dissolve and develop their full cleaning power during short programs. Therefore please use long programs when using detergent tablets, to ensure the complete removal of detergent residuals.




**NOTE:** Detergent tablets are only for the models with 3 in 1 function or 3 in 1 program.

# Detergent Dispenser

The dispenser must be refilled before the start of each wash cycle following the instructions provided in the Wash Cycle Table . Your dishwasher uses less detergent and rinse aid than conventional dishwasher. Generally, only one tablespoon of detergent is needed for a normal wash load. Also, more heavily soiled items need more detergent. Always add the detergent just before starting the dishwasher, otherwise it could get damp and will not dissolve properly.

## Amount of Detergent to Use

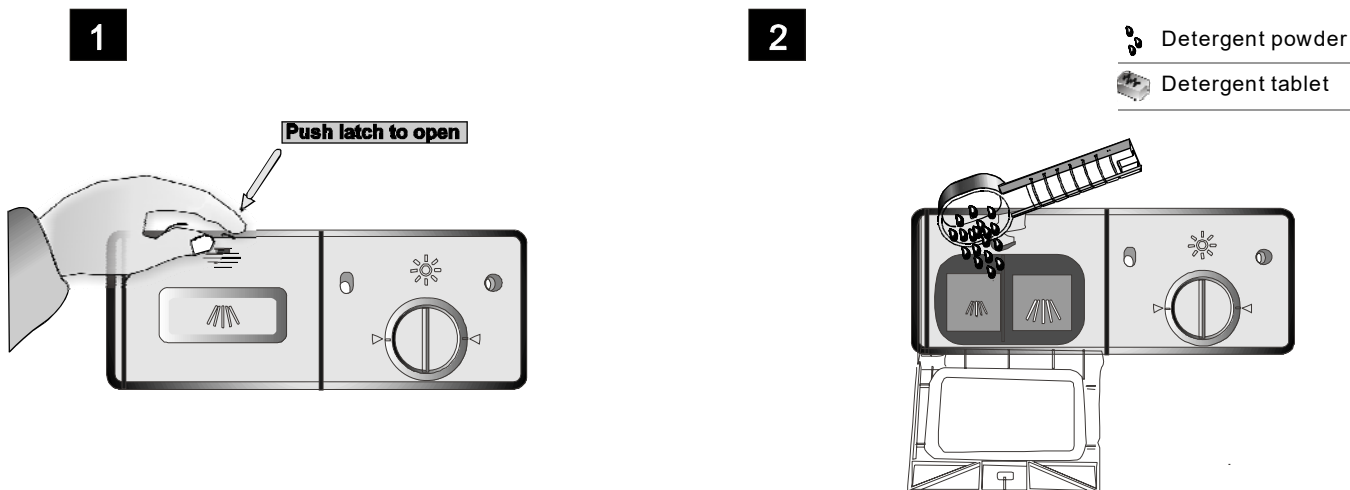

### ! NOTE:

- If the lid is closed: press release button. The lid springs open.
- Always add the detergent just before starting each wash cycle.
- Only use branded detergent aid for dishwasher.

### ! WARNING!

Dishwasher detergent is corrosive! Take care to keep it out of reach of children.

## Fill in detergent


Fill the detergent dispenser with detergent. The marking indicates the dosing levels , as illustrated on right:

- A** The place can load 15g detergent.
- B** The place can load 25g detergent .

Please observe the manufacturers dosing and storage recommendations as stated on the detergent packaging.

Close the lid and press until it locks in place.

If the dishes are heavily soiled, place an additional detergent dose in the pre-wash detergent chamber. This detergent will take effect during the pre-wash phase.

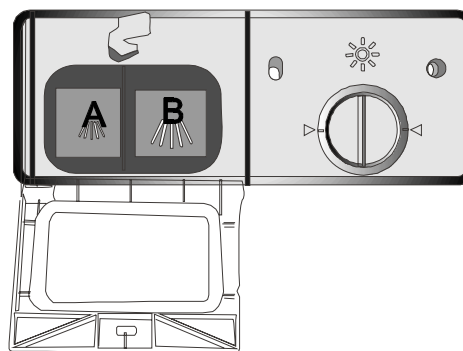

### ! NOTE:

- You will find information about the amount of detergent for the single program on the last page.
- Please be aware, that according to the soiling level and the specific hardness of water, differences are possible.
- Please observe the manufacturer's recommendations on the detergent packaging.

## 4. Loading the Dishwasher Baskets

### Recommendation

- Consider buying utensils which are identified as dishwasher-proof.
- Use a mild detergent that is described as 'kind to dishes'. If necessary, seek further information from detergent manufacturers.
- For particular items, select a program with a low temperature.
- To prevent damage, do not take glass and cutlery out of the dishwasher immediately after the program has ended.

### For washing in the dishwasher the following cutlery/dishes

#### Are not suitable

- Cutlery with wooden, horn china or mother-of-pearl handles
- Plastic items that are not heat resistant
- Older cutlery with glued parts that are not temperature resistant
- Bonded cutlery items or dishes
- Pewter or copper items
- crystal glass
- Steel items subject to rusting
- Wooden platters
- Items made from synthetic fibers

#### Are of limited suitability

- Some types of glasses can become dull after a large number of washes
- Silver and aluminium parts have a tendency to discolor during washing
- Glazed patterns may fade if machine washed frequently

### Attention before or after loading the Dishwasher Baskets

(For best performance of the dishwasher, follow these loading guidelines.  
Features and appearance of baskets and cutlery baskets may vary from your model.)

Scrape off any large amounts of leftover food. Soften remnants of burnt food in pans  
It is not necessary to rinse the dishes under running water.

Place objects in the dishwasher in following way:

1. Items such as cups, glasses, pots/pans, etc. are face down.
2. Curved items, or those with recesses, should be loaded at a slant so that water can run off.
3. All utensils are stacked securely and can not tip over.
4. All utensils are placed in the way that the spray arms can rotate freely during washing.






**NOTE:** Very small items should not be washed in the dishwasher as they could easily fall out of the basket.

- Load hollow items such as cups, glasses, pans etc. With the opening downwards so that water cannot collect in the container or a deep base.
- Dishes and items of cutlery must not lie inside one another, or cover each other.
- To avoid damage to glasses, they must not touch.
- Load large items which are most difficult to clean into the basket.
- Long bladed knives stored in an upright position are a potential hazard!
- Long and/or sharp items of cutlery such as carving knives must be positioned horizontally in the basket.
- Please do not overload your dishwasher.

## Loading the Basket

Position the dishes and cookware so that they will not get moved by the spray of water.

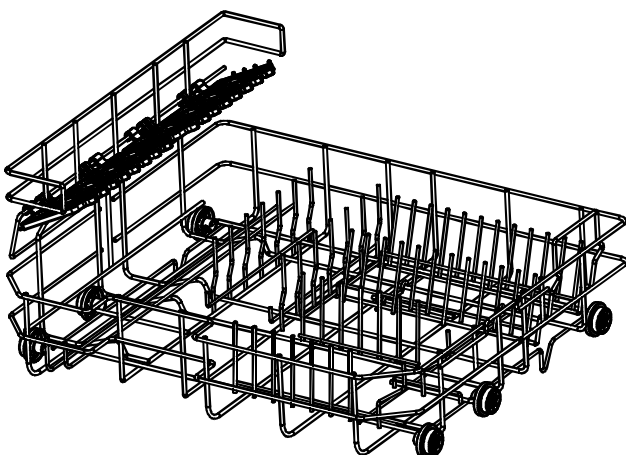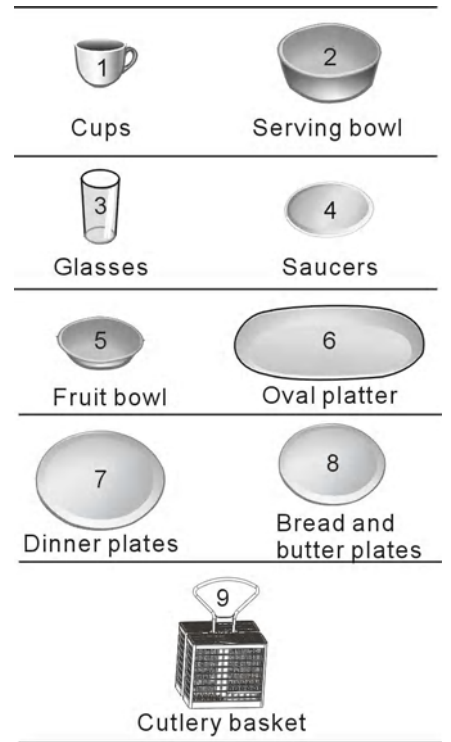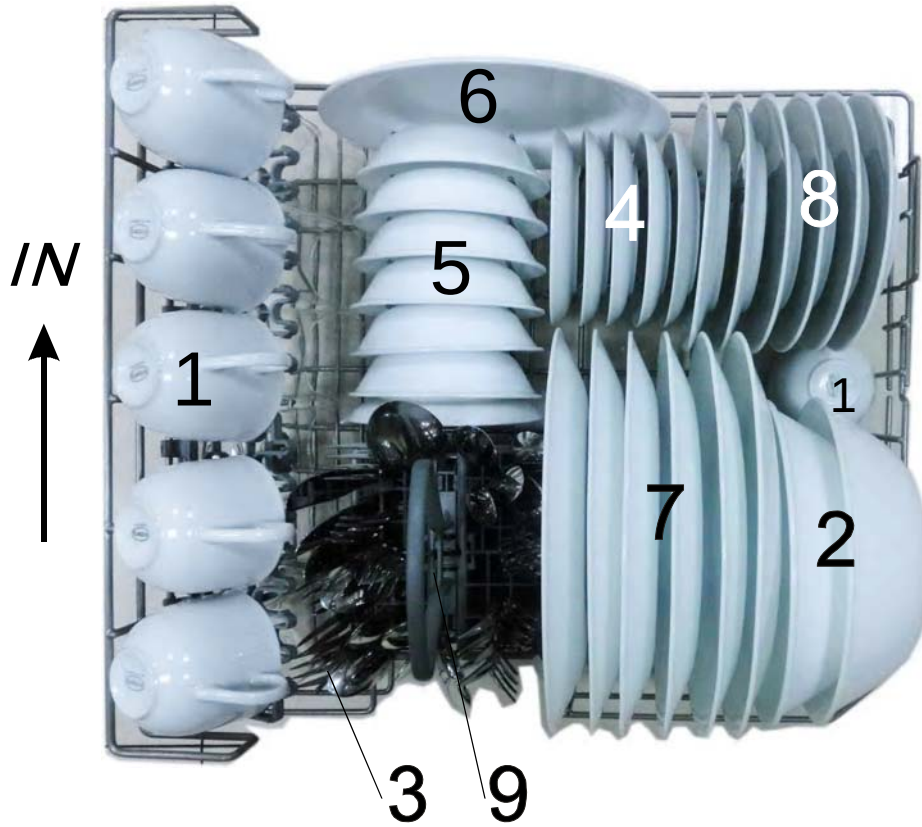

### Plate racks in Basket

**Plate Racks in Basket**  
The basket is fitted with plate racks which can be stowed horizontal if required.

# Cutlery Basket

Cutlery should be placed in the cutlery basket with handles at the bottom. If the rack has side baskets, the spoon should be loaded individually into the appropriate slots, especially long utensils should be placed in the horizontal position at the front of the upper basket as shown.

IN

3

2

5

3

2

3

2

1

4

1

4

4

4

1

4

4

4

4

1

4

4

4

1

4

1

2

3

6

2

3

5

2

3

1

Dinner forks



2

Salad forks



3

Knives



4

Teaspoons



5

Serving spoons



6

Serving forks





## ⚠ WARNING!

- Do not let any item extend through bottom.
- Always load sharp utensils with the sharp point down!

For personal safety and a top quality clean, place the silverware in the basket:

- They do not nest together.
- Place silverware with handles-down.
- But place knives and other potentially dangerous utensils handles-up.

## 5.Starting a washing program

### Wash Cycle Table



#### NOTE:

■ (★) Means: need to fill rinse into the Rinse-Aid Dispenser.

■ \*AHAM DW-1-2005 : This program is the test cycle, the rinse-aid dispenser setting is recommended to Position 3.

| Program                      | Cycle Selection Information                                                                                                              | Description of Cycle                                                                       | Detergent pre/main | Running time(min) | Energy (Kwh) | Water (l) | Rinse Aid |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|--------------------|-------------------|--------------|-----------|-----------|
| Heavy                        | For the heaviest soiled loads, such as pots,pans,casserole dishes and dishes that have been sitting with dried food on them for a while. | Pre-wash<br>Pre-wash(50℃)<br>Wash (55 ℃)<br>Wash (50 ℃)<br>Rinse<br>Rinse (65 ℃)<br>Drying | 18g                | 100               | 0.40         | 14.5      | ★         |
| Normal<br>(*AHAM DW-1-2005 ) | For normally soiled loads, such as pots, plates,glasses and lightly soiled pans. standard daily cycle.                                   | Pre-wash<br>Pre-wash<br>Wash (55 ℃)<br>Rinse<br>Rinse (65 ℃)<br>Drying                     | 13+13g             | 85                | 0.35         | 12        | ★         |
| Light                        | For lightly soiled loads,such as plates,glasses,bowls and lightly soiled pans.                                                           | Pre-wash<br>Pre-wash (50 ℃)<br>Wash (50 ℃)<br>Rinse<br>Rinse (60 ℃)<br>Drying              | 18g                | 75                | 0.29         | 12        | ★         |
| Glass                        | For lightly soiled loads, such as glasses, crystal and fine china.                                                                       | Pre-wash<br>Wash(50 ℃)<br>Rinse<br>Rinse(60 ℃)<br>Drying                                   | 15g                | 70                | 0.27         | 9.7       | ★         |
| Speed                        | A shorter wash for lightly soiled loads that do not need drying.                                                                         | Pre-wash<br>Pre-wash(50 ℃)<br>Wash (50 ℃)<br>Rinse<br>Rinse(55 ℃)                          | 15g                | 45                | 0.22         | 12        |           |
| Rinse                        | For the dishes that only need pre-wash.                                                                                                  | Pre-wash                                                                                   | /                  | 24                | 0.02         | 5         |           |
| Soak                         | To rinse dishes that you plan to wash later that day.                                                                                    | Pre-wash                                                                                   | /                  | 10                | 0.01         | 2.5       |           |

### Turning On the Appliance

Starting a wash cycle...

1. Draw out the basket(see the section entitled “Loading the Dishwasher” );
2. Pour in the detergent (see the section entitled “Salt, Detergent and Rinse Aid” );
3. Insert the plug into the socket. The power supply is 120V/60 Hz;
4. Make sure that the water supply is turned on to full pressure;
5. Press the on/off button to turn on the power supply;
6. Press the program button to select wash program you need

**Heavy->Normal->Light->Glass->Speed->Rinse->Soak**

- 7.Close the door, the dishwasher will start.

## Change the Program...

Premise: You can modify the washing program, When the dishwasher just runs for a short time. Otherwise, the detergent may have already been released, and the appliance may have already drained the wash water. If this is the case, the detergent dispenser must be refilled (see the section entitled "Loading the Detergent").

Open the door to pause during washing, press Program Button more than three seconds the machine will be in stand by state, then you can change the program to the desired cycle setting (see the section entitled "Starting a wash cycle...").

NOTE: If you open the door during washing, the machine will pause. When you close the door, the machine will keep on working after 10 seconds.

The program lights show the state of the dishwasher:

- a) All program lights off-----stand by
- b) One of the program lights on-----pause
- c) One of the program lights blinking----- run



**NOTE:** *If you open the door while washing, the machine will pause. Then you close the door, the machine will keep on working after 10 seconds.*

## Forget to Add a Dish?

A forgotten dish can be added any time before the detergent cup opens.

- 1** Open the door a little to stop the washing.
- 2** After the spray arms stop working, you can open the door completely.
- 3** Add forgotten dishes.
- 4** Close the door

## At the End of the Wash Cycle

When the working cycle has finished, the buzzer of dishwasher will sound 8 seconds, then stop. Turn off the appliance using the ON/OFF button, shut off the water supply and open the door of the dishwasher. Wait a few minutes before unloading the dishwasher to avoid handling the dishes and utensils while they are still hot and more susceptible to breakage. They will also dry better.

### ■ Switch Off the Dishwasher

In the digital display appears 0 (remaining program time), only in this case the program has ended.

1. Switch off the dishwasher by pressing the ON/OFF button.
2. Turn off the water tap!

### ■ Open the door carefully.

Hot dishes are sensitive to knocks. The dishes should therefore be allowed to cool down around 15 minutes before removing from the appliance.

Open the dishwasher's door, leave it ajar and wait a few minutes before removing the dishes. In this way they will be cooler and the drying will be improved.

### ■ Unloading the dishwasher

It is normal that the dishwasher is wet inside.



### **WARNING!**


It is dangerous to open the door when washing, because the hot water may scald you.

## 6. Maintenance and Cleaning

### Filtering System

The filter prevent larger remnants of food or other objects from getting inside the pump.

The filter system consists of a coarse filter, a flat (Main filter) and a micro filter (fine filter).

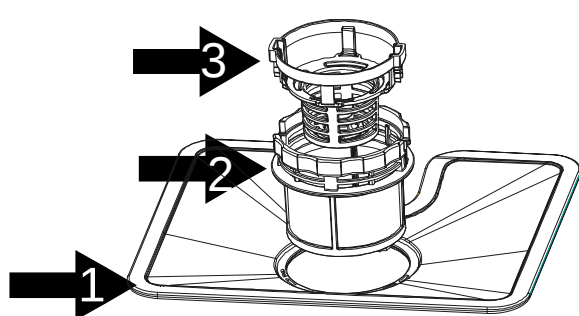

#### Main filter **1**

Food and soil particles trapped by this filter are pulverized by a special jet on the spray arm and washed down to drain.

#### Fine filter **2**

This filter holds soil and food residue in the sump area and prevents it from being redeposit on the dishes during wash cycle.

#### Coarse filter **3**


Larger items, such as pieces of bone or glass, that could block the drain are trapped in the coarse filter. To remove the items caught by the filter, gently squeeze the tap on the top of this filter and lift out.

### Filter assembly

The filter efficiently removes food particles from the wash water, allowing it to be re-cyclated during the cycle. For best performance and results, the filter assembly must be regularly cleaned. For this reason, it is a good idea to remove the larger food particles trapping in the filter after each wash cycle by rinsing the filter and cup under running water. To remove the filter assembly, pull on the cup handle in the upward direction.


#### **⚠ WARNING!**

- ⚠ Never run the dishwasher without the filters in place.
- ⚠ The dishwasher must never be used without the filters.
- ⚠ Improper replacement of the filter may reduce the performance level of the appliance and damage dishes and utensils.

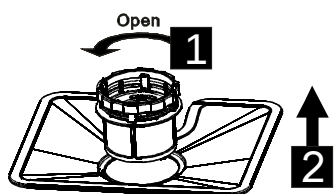

Step 1 : Rotate the Fine filter counterclockwise

Step2: lift it up;

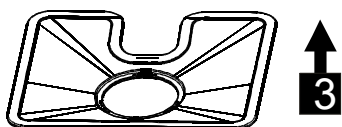

Step3: lift the Main filter up



**NOTE:** Work from step1 to step 3, to remove the filter system; Work from Step 3 to Step 1, to install the filter system.

## Remarks:

- Inspect the filters for blockage every time the dishwasher has been used.
- By unscrewing the coarse filter, you can remove the filter system. Remove any food remnants and clean the filters under running water.

**! NOTE:** The entire filter assembly should be cleaned once a week.

## Cleaning The Filter

To clean the coarse filter and the fine filter, use a cleaning brush. Reassemble the filter parts as shown in the figures in the last page and reinsert the entire assembly in the dishwasher, positioning in its seat and pressing downward.

### **! WARNING!**

When cleaning the filters, don't knock on them. Otherwise, the filters could be contorted and the performance of dishwasher could be debased.


## Caring for the Dishwasher

The control panel can be cleaned by using a lightly dampened cloth and dry thoroughly.

The exterior use a good appliance polish wax.


Never use sharp objects, scouring pads or harsh cleaners on any part of the dishwasher.

## Cleaning The Door

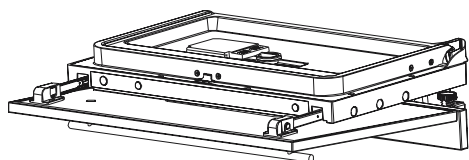

To clean the edge around the door, glide and decorative panels, you should use only a soft warm, damp cloth.

To avoid penetration of water into the door lock and electrical components, do not use a spray cleaner of any kind.

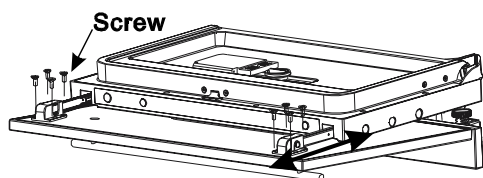

If you want to clean the inner surface of decorative panels,

1) remove the 8 screws between the seat and decorative panels ;

2) then you can clean the surface, please use a damp and soft cloth;

3) then, open the doors and siding to the graph state , pull out the slide, align screw holes into the eight screws removed, please note that efforts to tighten the screws can not be too large, so as not to bore failure.

### **! WARNING!**

- ⚠ Never use a spray cleaner to clean the door panel as it may damage the door lock and electrical components.
- ⚠ Abrasive agent or some paper towel should not be used because of the risk of scratching or leaving spots on the stainless steel surface.

## Protect Against Freezing

please take frost protection measures on dishwasher in winter. Each time after washing cycles, please operate as follows:

1. Cut off electrical power to the dishwasher.
2. Turn off the water supply and disconnect the water inlet pipe from the water valve.
3. Drain water from the inlet pipe and water valve. (Use a pan to catch the water)
4. Reconnect the water inlet pipe to the water valve.
5. Remove the filter at the bottom of the tub and use a sponge to soak up water in




**NOTE:** If your dishwasher cannot work because of the ice, please contact professional service persons.

## Cleaning the Spray Arms

The spray arms can be easily removed for periodic cleaning of the nozzles, to prevent possible clogging. Wash them under running water and carefully replace them in their seats, checking that their rotary movement is in no way impeded.

Grasp the middle of the spray arm, pull it upwards to remove it. Wash the arms under a jet of running water and return them carefully to their seat. After reassembly, check that the spray arms turn freely. Otherwise, check that they have been installed correctly.

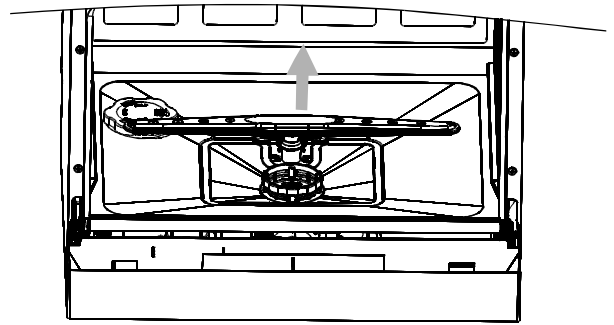

## How to Keep Your Dishwasher in Shape

### ■ After Every Wash

After every wash, turn off the water supply to the appliance and leave the door slightly open so that moisture and odors are not trapped inside.

### ■ Remove the Plug

Before cleaning or performing maintenance, always remove the plug from the socket.

### ■ No Solvents or Abrasive Cleaning

To clean the exterior and rubber parts of the dishwasher, do not use solvents or abrasive cleaning products. Only use a cloth with warm soapy water. To remove spots or stains from the surface of the interior, use a cloth dampened with water with a little vinegar, or a cleaning product made specifically for dishwashers.

### ■ When it is not in need for a long time

It is recommended that you run a wash cycle with the dishwasher empty and then remove the plug from the socket, turn off the water supply and leave the door of the appliance slightly open. This will help the door seals to last longer and prevent odors from forming within the appliance.

### ■ Moving the Appliance

If the appliance must be moved, try to keep it in the vertical position. If absolutely necessary, it can be positioned on its back.

### ■ Seals

One of the factors that cause odors to form in the dishwasher is food that remains trapped in the seals. Periodic cleaning with a damp sponge will prevent this from occurring.


## 7. Installation instruction

### ▲ *Attention:*

The installation of the pipes and electrical equipments should be done by professionals.



### *Warning*

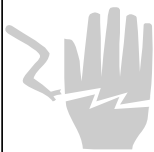

Electrical Shock Hazard  
Disconnect electrical power before installing dishwasher.

Failure to do so can result in death or electrical shock.

## Installation preparation

The installation position of dishwasher should be near the existing inlet and drain hoses and power cord.

One side of the cabinet sink should be chosen to facilitate the connection of drain hoses of the dishwasher.

## Positioning the Appliance

Position the appliance in the desired location. The back should rest against the wall behind it, and the sides, along the adjacent cabinets or wall. The dishwasher is equipped with water supply and drain hoses that can be positioned to the right or the left to facilitate proper installation.

## About Power Connection

### **WARNING!**

- For personal safety:
- DO NOT USE AN EXTENSION CORD OR AN ADAPTER PLUG WITH THIS APPLIANCE.
  - DO NOT, UNDER ANY CIRCUMSTANCES, CUT OR REMOVE THE GROUNDING CONNECTION FROM THE POWER CORD.

## *Electrical Requirements*

Please look at the rating label to know the rating voltage and connect the dishwasher to the appropriate power supply. Use the required fuse 10 amp, time delay fuse or circuit breaker recommended and provide separate circuit serving only this appliance.

## *Electrical Connection*

### **Insure proper ground exists before use**

Ensure the voltage and frequency of the power being corresponds to those on the rating plate. Only insert the plug into an electrical socket which grounded properly. If the electrical socket to which the appliance must be connected is not appropriate for the plug, replace the socket, rather than using adapters or the like as they could cause overheating and burns.



## **GROUNDING INSTRUCTIONS**

- This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local standards and requirements.

### **WARNING!**

- Improper connection of the equipment grounding conductor can result in the risk of an electric shock.
- Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly earthed.
- Do not modify the plug provided with the appliance. If the plug does not fit properly to the outlet, please have a qualified electrician to install a proper outlet.



## Connection of drain hoses

Insert the drain hose into a drain pipe with a minimum diameter of 4cm, or let it run into the sink, making sure to avoid bending or crimping it. Use the special plastic support that comes with the appliance. The free end of the hose must be at a height lower than 75cm and must not be immersed in water to avoid the back flow of it.



### **Attention:**

The special plastic hose support must be solidly fastened to the wall to prevent the drain hose from moving and allowing water to spill outside the drain.

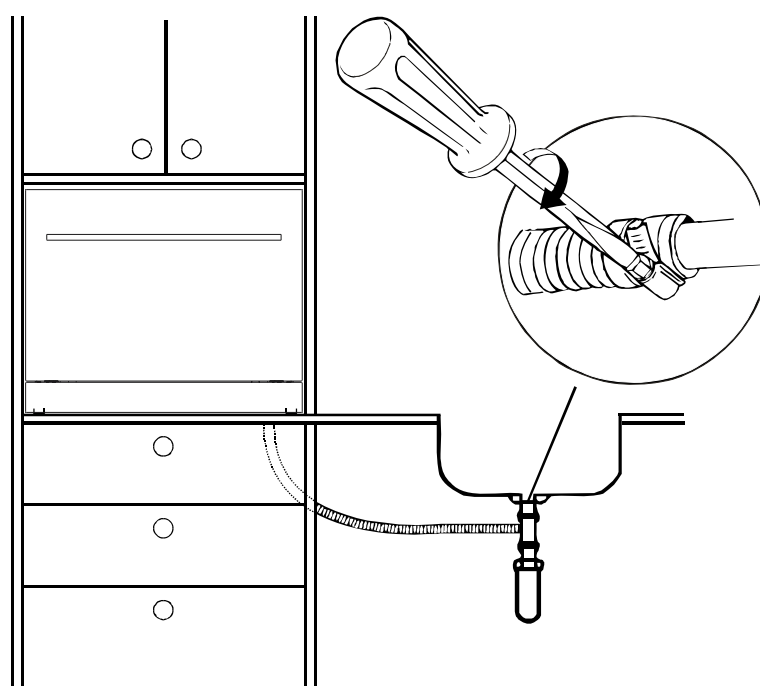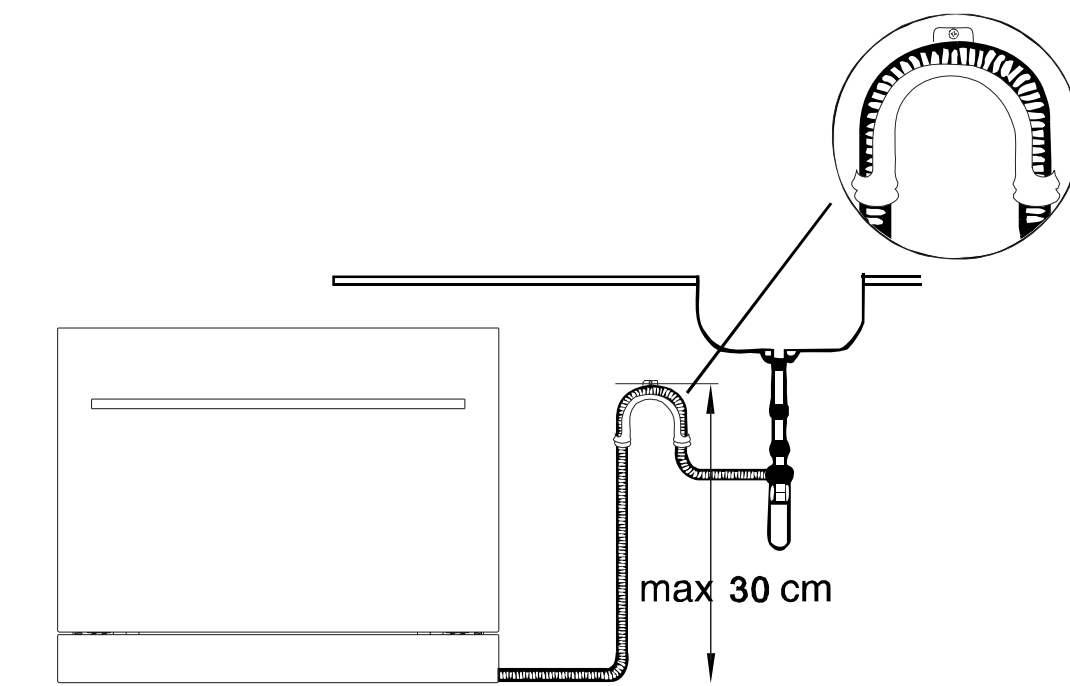

## How to Drain Excess Water From Hoses

If the sink is 1000 higher from the floor, the excess water in hoses cannot be drained directly into the sink. It will be necessary to drain excess water from hoses into a bowl or suitable container that is held outside and lower than the sink.

## Water Outlet

Connect the water drain hose. The drain hose must be correctly fitted to avoid water leaks. Ensure that the water drain hose is not kinked or squashed.

## Extension Hose

If you need a drain hose extension, observe to use a similar drain hose. It must be no longer than 4 metres; otherwise the cleaning effect of the dishwasher could be reduced.

## Start of dishwasher

The following things should be checked before starting the dishwasher.

- 1 The dishwasher is level and fixed properly
- 2 The inlet valve is open
- 3 There is no leakage at the connections of the conducts
- 4 The wires are tightly connected
- 5 The power is switched on
- 6 The inlet and drain hoses are knotted
- 7 All packing materials and printings should be taken out from the dishwasher



**Attention:** *After installation, please make sure to keep this manual.*

*The content of this manual is very helpful to the users.*

## 8. Troubleshooting Tips

### Before Calling for Service

Review the charts on the following pages may save you from calling for service.



|                    | <i>Problem</i>                            | <i>Possible Causes</i>                                                                              | <i>What To Do</i>                                                                                                                                                                                                                                                          |
|--------------------|-------------------------------------------|-----------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Technical problems | <i>Dishwasher doesn't start</i>           | Fuse blown, or the circuit breaker tripped.                                                         | Replace fuse or reset circuit breaker. Remove any other appliances sharing the same circuit with the dishwasher                                                                                                                                                            |
|                    |                                           | Power supply is not turned on.                                                                      | Make sure the dishwasher is turned on and the door is closed securely.<br>Make sure the power cord is properly plugged into the wall socket.                                                                                                                               |
|                    |                                           | Door of dishwasher not properly closed.                                                             | Close dishwasher making sure that door latches.                                                                                                                                                                                                                            |
|                    | <i>Water not pumped from dishwasher</i>   | Kink in drain hose                                                                                  | Check drain hose.                                                                                                                                                                                                                                                          |
| General problems   |                                           | Filter clogged.                                                                                     | Check coarse the filter.<br>(see section titled "Cleaning The Filter ")                                                                                                                                                                                                    |
|                    |                                           | Kitchen sink clogged.                                                                               | Check kitchen sink to make sure it is draining well.<br>If problem is kitchen sink not draining ,you may need a plumber rather than a serviceman for dishwasher.                                                                                                           |
|                    | <i>Suds in the tub</i>                    | Improper detergent                                                                                  | Use only the special dishwasher detergent to avoid suds. If this occurs, open the dishwasher and let suds evaporate. Add 1 gallon of cold water to the tub. Close and latch the dishwasher, then Start the "soak" wash cycle to drain out the water . Repeat if necessary. |
|                    |                                           | Spilled rinse-aid                                                                                   | Always wipe up rinse-aid spills immediately.                                                                                                                                                                                                                               |
|                    | <i>Stained tub interior</i>               | Detergent with colourant was used.                                                                  | Make sure that the detergent is the one without colourant.                                                                                                                                                                                                                 |
|                    | <i>White film on inside surface</i>       | Hard water minerals                                                                                 | To clean the interior, use a damp sponge with dishwasher detergent and wear rubber gloves.<br>Never use any other cleaner than dishwasher detergent for the risk of foaming or suds.                                                                                       |
| Noise              | <i>There are rust stains on cutlery</i>   | The affected items are not corrosion resistant.                                                     |                                                                                                                                                                                                                                                                            |
|                    |                                           | A program was not run after dishwasher salt was added. Traces of salt have got into the wash cycle. | Always run the Quick wash program without any crockery in the dishwasher and without selecting the Turbo function (if present), after adding dishwasher salt.                                                                                                              |
|                    |                                           | The lid of softer is loose.                                                                         | Check the lid .Ensure the fix is fine.                                                                                                                                                                                                                                     |
|                    | <i>Knocking noise in the wash cabinet</i> | The spray arm is knocking against an item in a basket.                                              | Interrupt the program, and rearrange the items which are obstructing the spray arm.                                                                                                                                                                                        |
|                    | <i>Rattling noise in the wash cabinet</i> | Item of crockery are insecure in the wash cabinet.                                                  | Interrupt the program and rearrange the items of crockery.                                                                                                                                                                                                                 |
|                    | <i>Knocking noise in the water pipes</i>  | This may be caused by on-site installation or the cross-section of the piping.                      | This has no influence on dishwasher function. if in doubt, contact a suitably qualified plumber.                                                                                                                                                                           |



Unsatisfactory washing result

| <i>Problem</i>                          | <i>Possible Causes</i>                                                                                                                        | <i>What To Do</i>                                                                                                  |
|-----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| <i>The dishes are not clean</i>         | The dishes were not loaded correctly.                                                                                                         | See notes in "Loading the Dishwasher Baskets".                                                                     |
|                                         | The program was not powerful enough.                                                                                                          | Select a more intensive program. See "Wash Cycle Table".                                                           |
|                                         | Not enough detergent was dispensed.                                                                                                           | Use more detergent, or change your detergent.                                                                      |
|                                         | Items are blocking the path of spray arms.                                                                                                    | Rearrange the items so that the spray can rotate freely.                                                           |
|                                         | The filter combination in the base of wash cabinet is not clean or is not correctly fitted. This may cause the spray arm jets to get blocked. | Clean and/or fit the filter combination correctly. Clean the spray arm jets. See "Cleaning the Spray Arms".        |
| <i>Cloudiness on glassware</i>          | Combination of soft water and too much detergent.                                                                                             | Use less detergent if you have soft water and select a shortest cycle to wash the glassware and to get them clean. |
| <i>Black or gray marks on dishes</i>    | Aluminum utensils have rubbed against dishes.                                                                                                 | Use a mild abrasive cleaner to eliminate those marks.                                                              |
| <i>Detergent left in dispenser cups</i> | Dishes block detergent cups.                                                                                                                  | Re-loading the dishes properly.                                                                                    |

Unsatisfactory drying result

|                                  |                                          |                                                                                                                                                                                                                                                                                              |
|----------------------------------|------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>The dishes are not drying</i> | Improper loading                         | Load the dishwasher as suggested in the directions.                                                                                                                                                                                                                                          |
|                                  | Too little rinse-aid                     | Increase the amount of rinse-aid/Refill the rinse-aid dispenser.                                                                                                                                                                                                                             |
|                                  | Dishes are removed too soon.             | Do not empty your dishwasher immediately after washing. Open the door slightly so that the steam can escape. Begin unloading the dishwasher only once the dishes are barely warm to the touch. Empty the low basket first. This prevents water from dropping off dishes in the upper basket. |
|                                  | Wrong program selection                  | In short programs the washing temperature is lower. This also lowers cleaning performance. Choose a program with a long washing time.                                                                                                                                                        |
|                                  | Using cutlery with a low-quality coating | Water drainage is more difficult with these items. Cutlery or dishes of this type are not suitable for washing in the dishwasher.                                                                                                                                                            |

## Error Codes



When some malfunctions occur, the appliance will display error codes to warn you:

| <i>Codes</i> | <i>Meanings</i>    | <i>Possible Causes</i>                                                              |
|--------------|--------------------|-------------------------------------------------------------------------------------|
| <i>E1</i>    | Longer inlet time. | Faucets is not opened, or water intake is restricted, or water pressure is too low. |
| <i>E4</i>    | Overflow.          | Some element of dishwasher leaks.                                                   |


### ⚠ WARNING!

- If overflow occurs, turn off the main water supply before calling a service.
- If there is water in the base pan because of an overflow or small leak, the water should be removed before restarting the dishwasher.

## 9. Technical Information

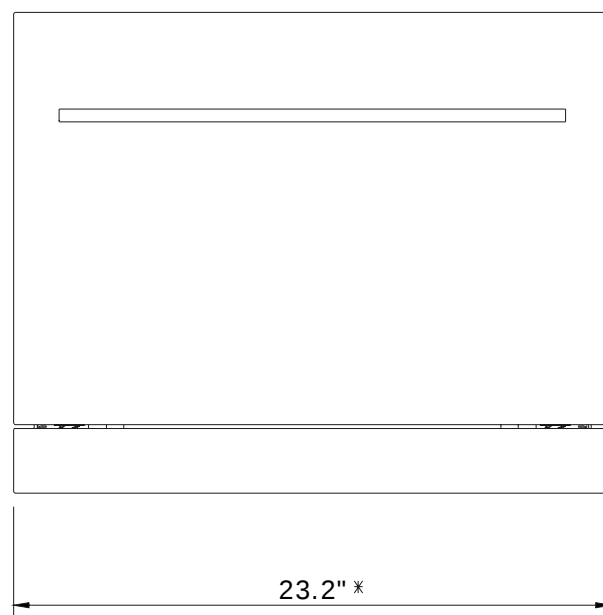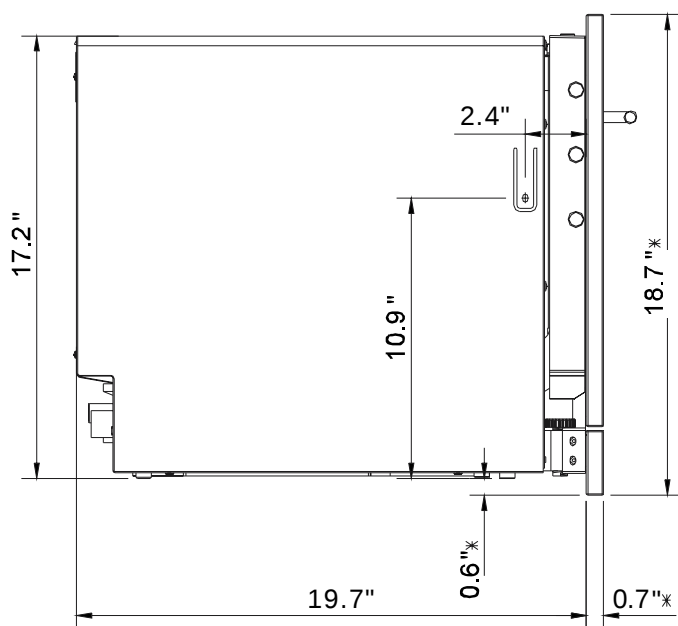


The dimensions with “\*” variable according to actual situation

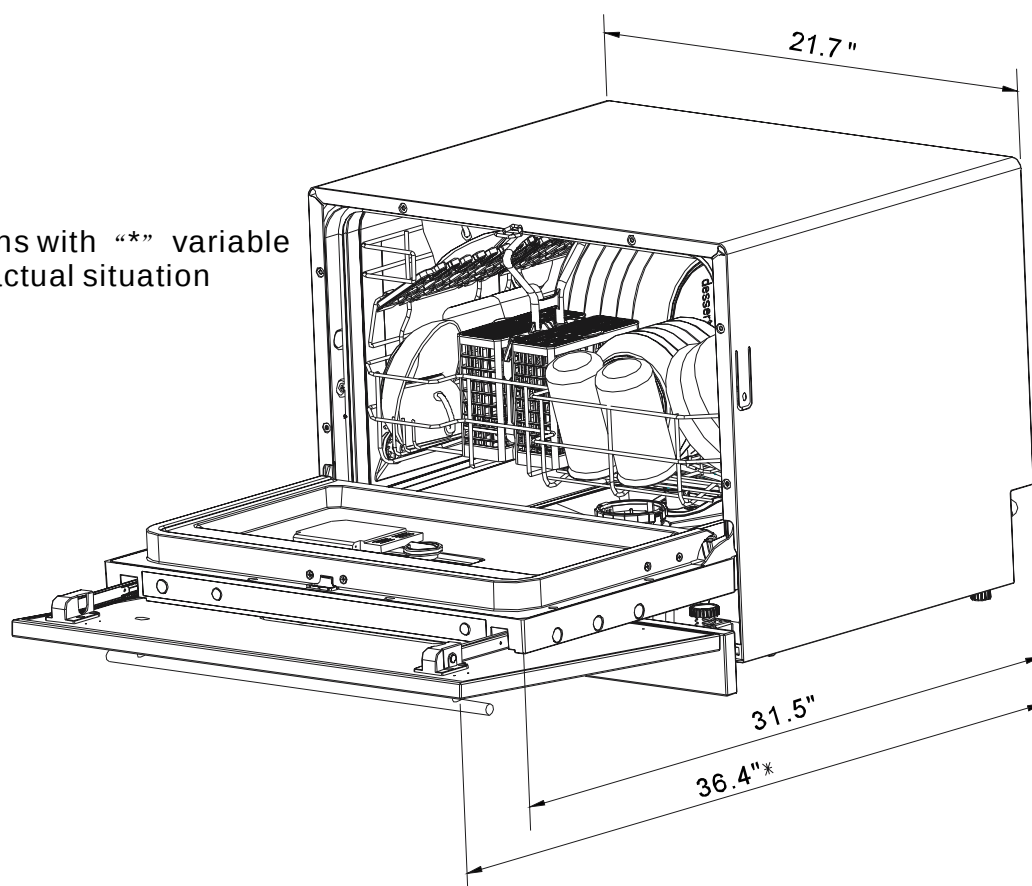


|                      |                  |
|----------------------|------------------|
| Water pressure:      | 0.04-1.0MPa      |
| Hot water connection | Max 60℃          |
| Power supply:        | See rating label |
| Capacity:            | 6 place settings |

## 10. Installation instruction

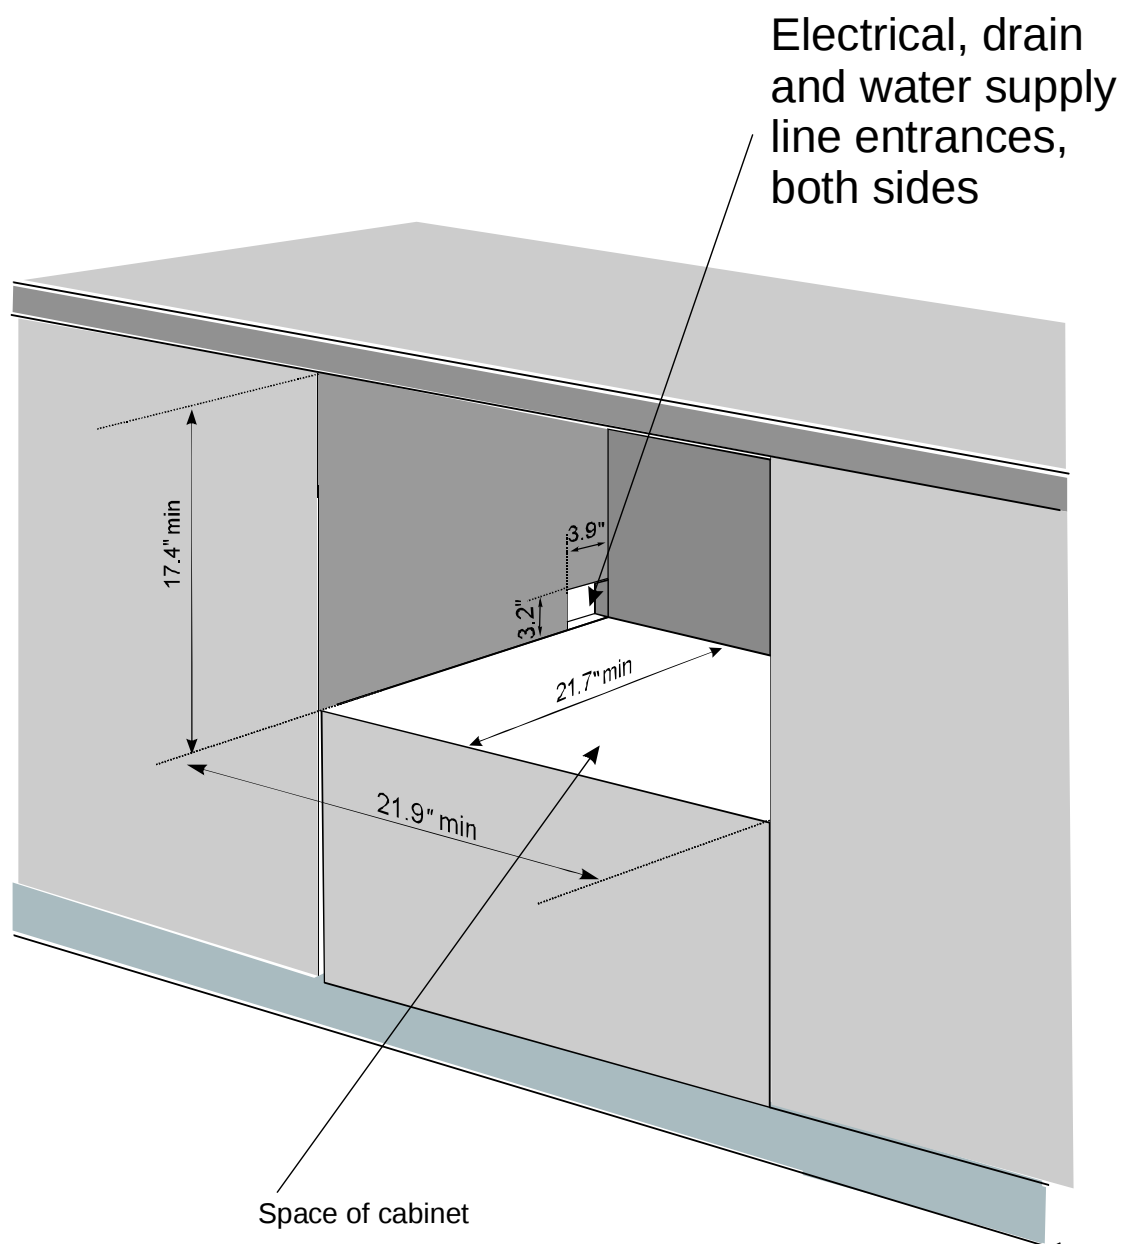


### Step 1a:

If only the body into cabinets, please make this map the size of the cabinet hole.

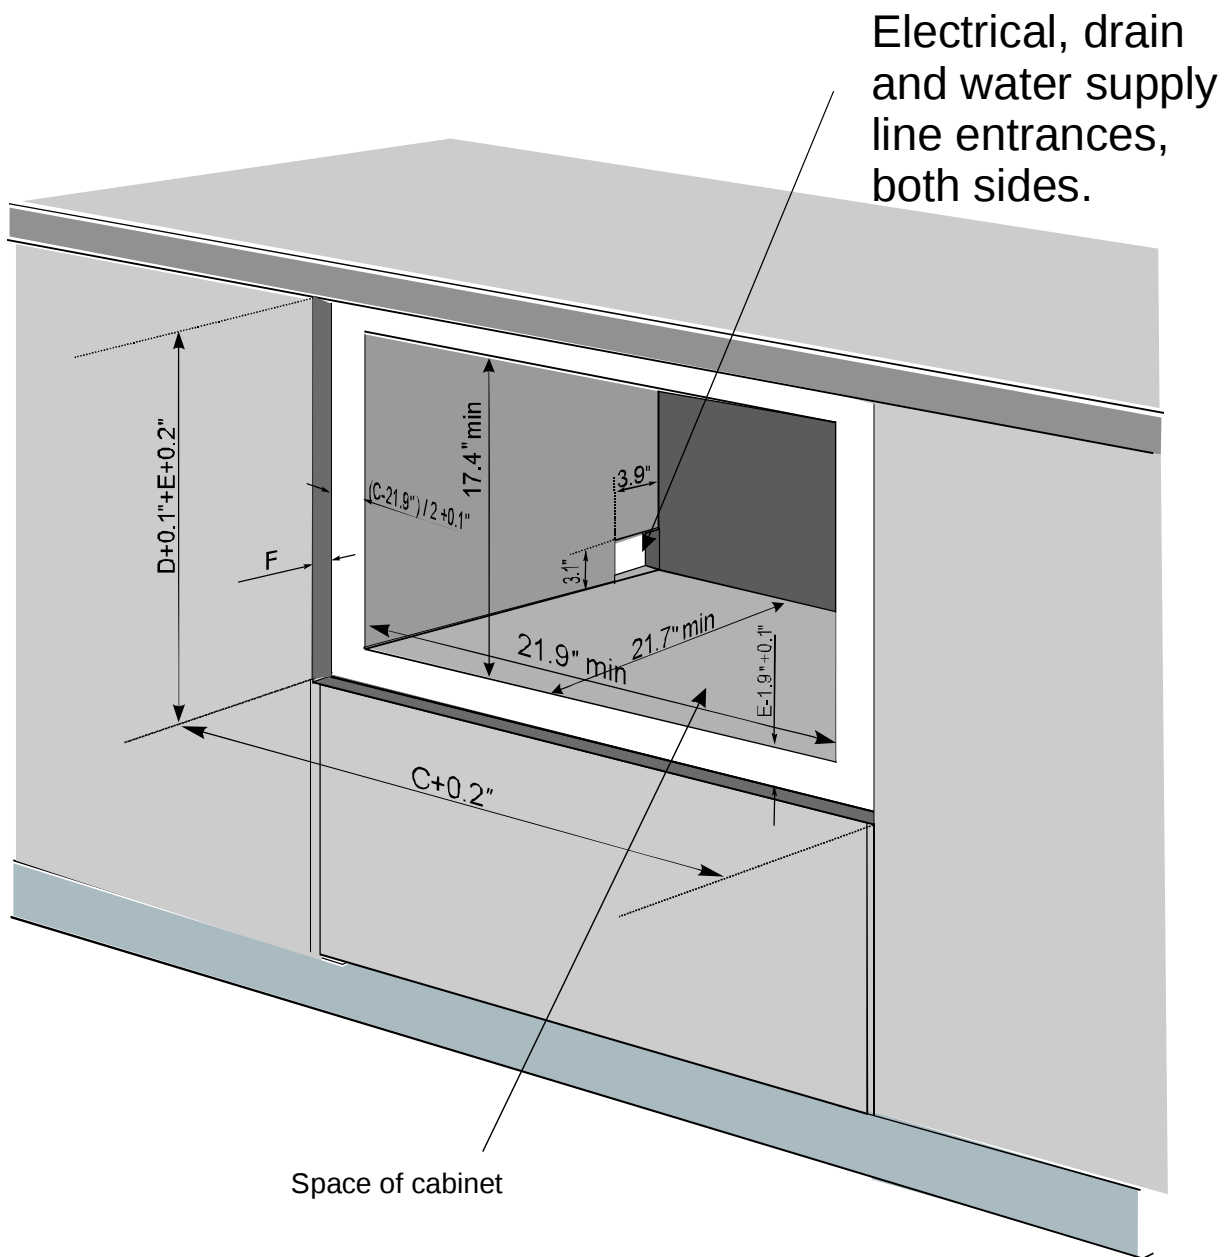

#### Step1b:

If the entire decorative panel into the cabinet also, the size of a should be equal to  $D + 0.1' + E + 0.2'$ ; size b should be equal to  $C + 0.2'$ ; Meanwhile, the cabinet around the inward booster: the bottom of the entire plane for the  $E - 1.9' + 0.1'$ ; both sides of the  $(C - 21.9') / 2 + 0.1'$ ; C, D, E and F as the second step within the relevant size decorative panels;

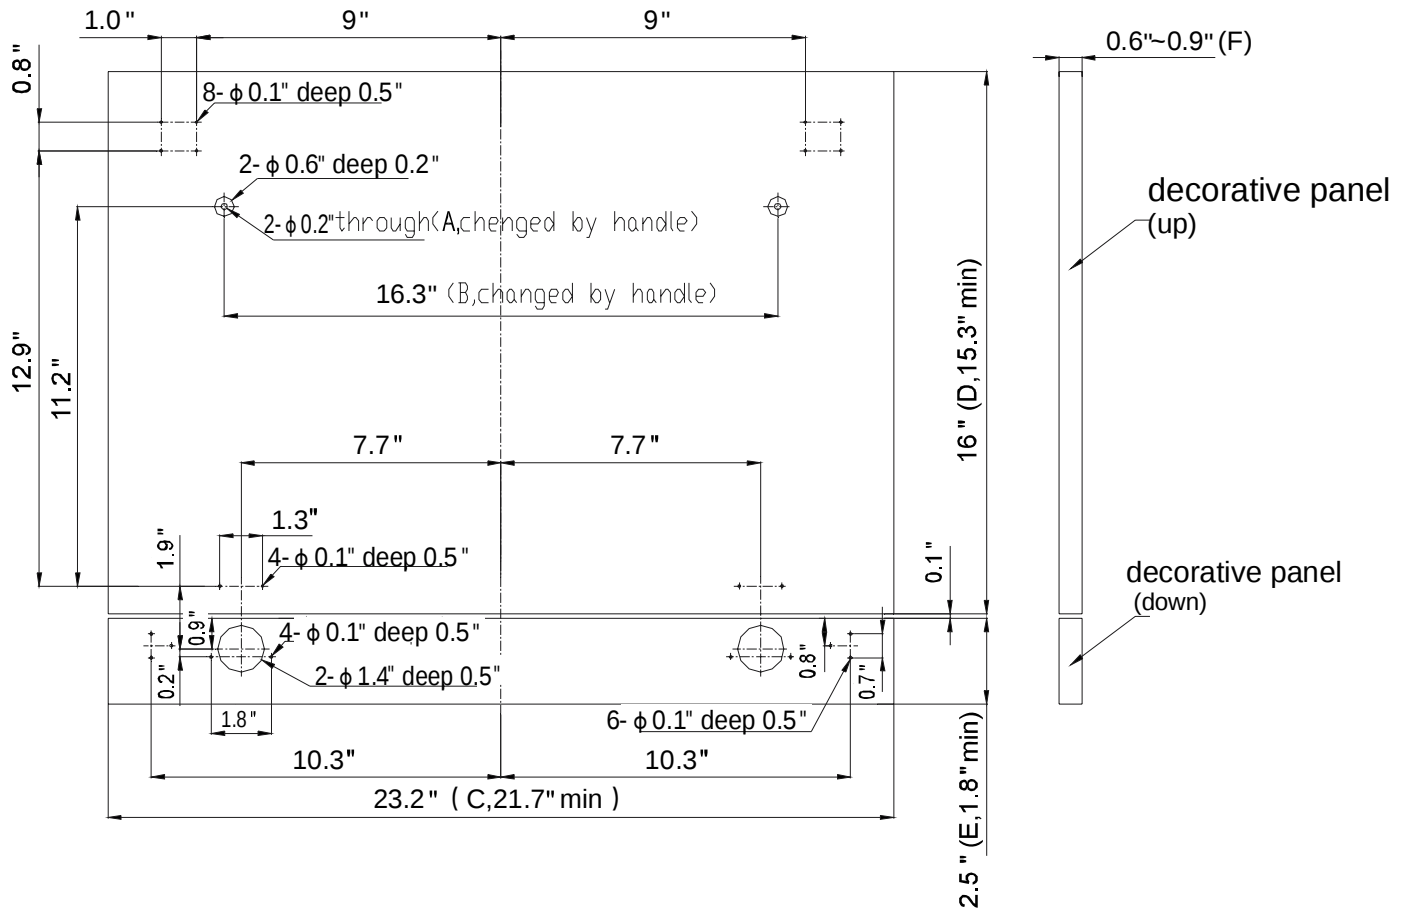

## Step 2 :

Weight of the decorative panel (up) should be min 3Kg-max 4Kg.

Dim.A and B could be alterable by handle,

Dim.C,D,E and F could be alterable by fact,


If you want to make the decorative panels' size same as the front of the machine, please use the minimum size in brackets;

Dim.F should be in range 0.6~0.9",

besides the appliance assembling decorative panels.

## Note:

If the machine has a decorative plate, skip this step.

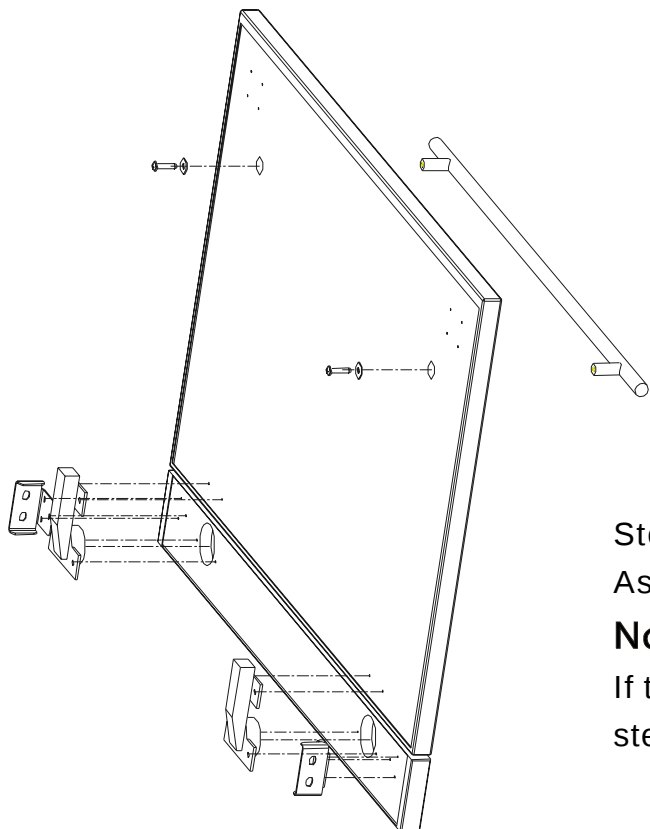

**Step 3:**

Assemble the decorative panels.

**Note:**


If the machine has a decorative plate, skip this step.


**Step 4:**

Assemble the decorative door on the dishwasher, as figure. First install sidepiece screw between base board and decorative panel (down), in all 4; then pull glide from out door groove, case 8-screw between decorative panels and glide .

**Note:**

If the machine has a decorative plate, skip this step .

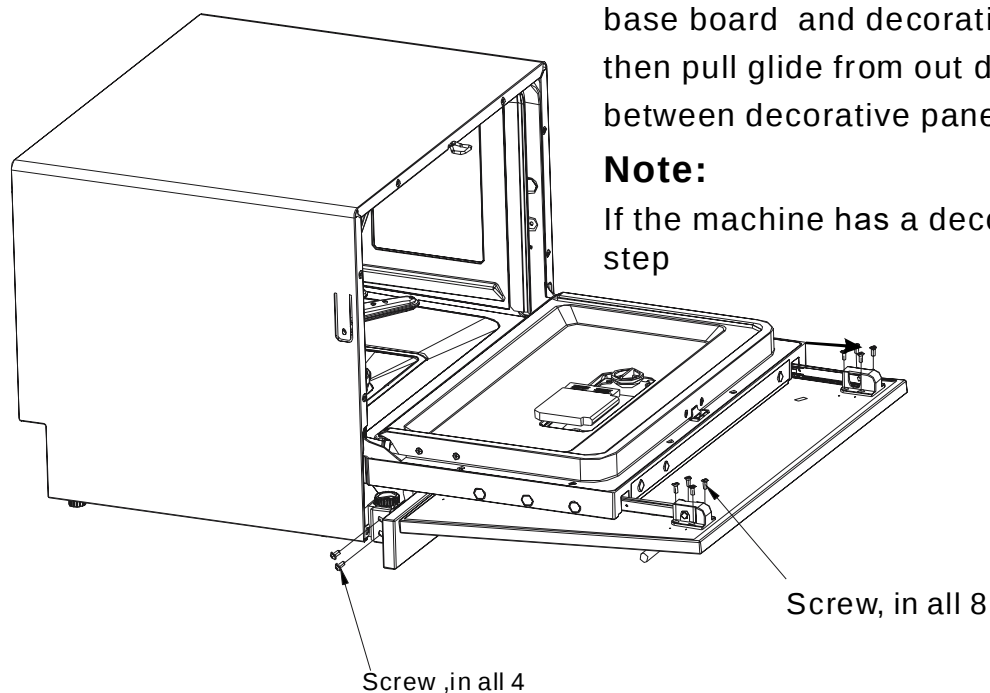

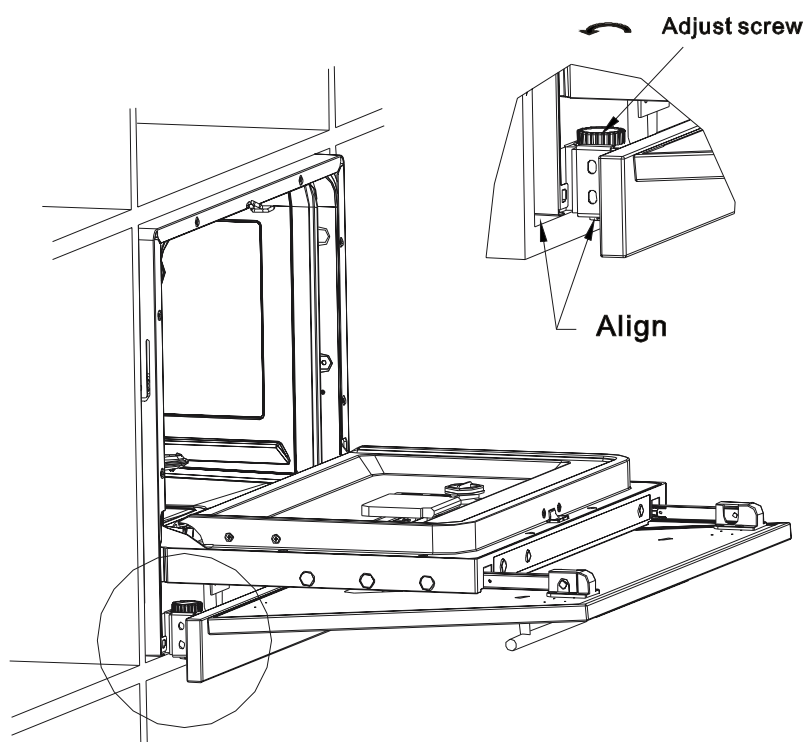


#### Step 5:

Install the dishwasher in aperture, but not all the way, as the figure example shows, adjust screw, let its bottom align aperture's base, then push dishwasher in fully.

#### Step 6:

Take out cap, a hole is revealed, using screwdriver install screw, bothsides. Then recover the cap in hole.

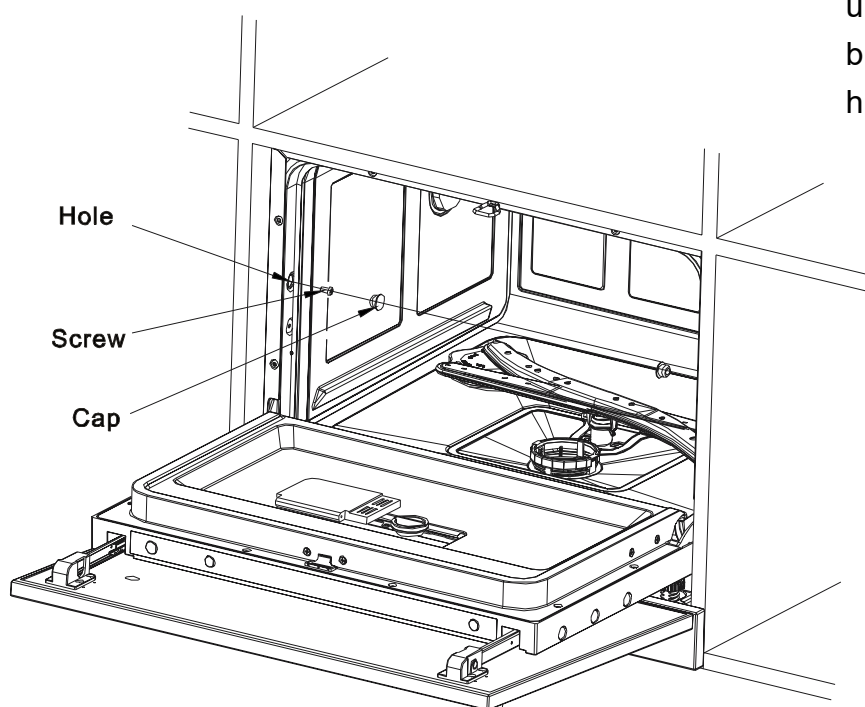



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent for an authorized Lippert representation has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from [lippert.com](http://lippert.com).

Please recycle all obsolete materials.

For all concerns or questions, please contact Lippert  
PhL 432-LIPPERT (432-547-7378) | Web: [lippert.com](http://lippert.com) | E-mail: [customerservice@lci1.com](mailto:customerservice@lci1.com)

■ ■

---



---

# This manual is provided courtesy of **RV Tech Cheat Sheet**



**Professional resources for the whole RV industry — free.**

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.

---



---

**[rvtechcheatsheet.com/manuals](https://rvtechcheatsheet.com/manuals)**

**Find thousands more RV manuals, wiring diagrams and parts lists**

**RV techs:** share fixes, ask questions and learn from each other.

**Join our free Facebook group →**

---



---

Follow proper safety practices. If in doubt, consult a professional RV technician.