

Cargo Light Control


Intellitec's **Cargo Light Control** is designed to control the box lights on service vehicles. It is easy to install, provides multi-point switching and uses momentary switches in parallel to turn the lights on and off.

In addition to this convenient on/off function, the **CLC** offers battery rundown protection from the lights being accidentally left on. If the lights are left on for more than twenty minutes, the **CLC** will blink the lights at a rate of six to ten times per minute alerting the driver of an impending shut off. After one minute, the lights will automatically be turned off, preventing further run down of the battery.

If the driver wants to keep the lights on, he simply turns the **CLC** on again, allowing another twenty minutes of use.

The **CLC** also includes low battery indication. If the battery voltage falls below 12 volts for a period of two minutes while the lights are on, the lights will blink six to ten times per minute and then shut off.

The **Cargo Light Control** is a water proof module, suitable for harsh environments. The electrical connections are made with a Packard Weather pack connector.

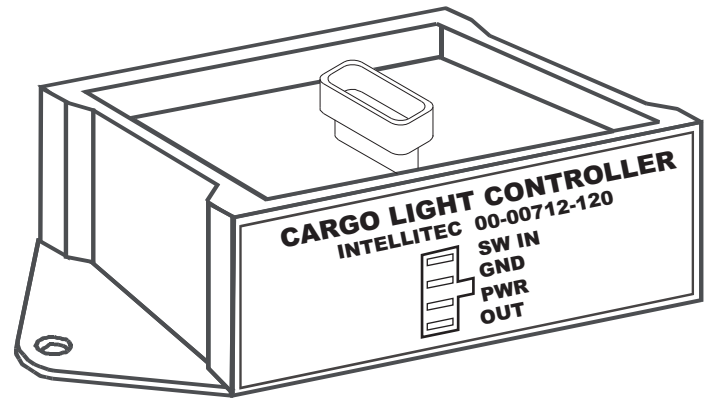


Part Number:

00-00712-120 (12V)

00-00712-240 (24V)

The **Cargo Light Control** is activated by a momentary switch connected to ground. Intellitec offers a companion switch (*below*) to activate this control. This weather tight switch can be used in applications where washing down the interior of the truck is routinely performed.

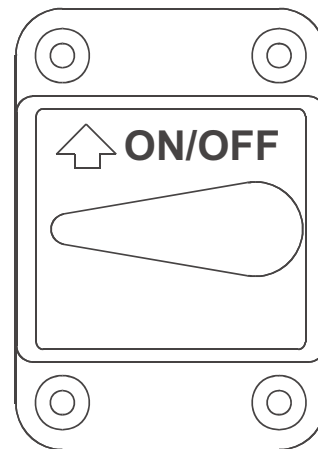

Part Number:

00-01010-000

Actual Size: 3.56" H X 2.5" W

 **Intellitec**
1485 Jacobs Rd.
Deland, FL 32724
386.738.7307

Cargo Light Control

How It Works

Intellitec's **Cargo Light Control** operates as a multi-point controller by sensing the voltage on the Switch input line. When this voltage drops to zero, as would be done by a momentary switch to ground, the system changes the state of the light either to on or off. This allows as many switches as desired, to be used on the system with simple "one wire" and ground connections.

In addition to the multi-point control, the unit includes a timer to automatically shut off the lights in the event the driver forgets. The timer begins its cycle when the lights are turned on. At the end of a twenty minute period, a second timer begins to blink the light six to ten times, alerting the driver the lights are about to go off. If the battery is low, the twenty minute timer is shortened to two minutes. This will alert the driver of the low battery and prevent the lights from further discharging the battery.

Specifications:

Part Numbers:

Nominal Supply Voltage
Maximum Continuous Carry Current
Maximum Ambient Temperature
Minimum Ambient Temperature
Normal Battery Delay Time
Low Battery Delay Time
Approximate Overall Size

00-00712-120

12 volts
10 Amps
185 Degrees F.
-40 Degrees F.
20 minutes
2 minutes

00-00712-240

24 volts
10 Amps
185 Degrees F.
-40 Degrees F.
20 minutes
2 minutes

4 1/4" X 3-3/4" X 1 3/8" high


Typical Wiring Diagram:

00-00712-120

00-00712-240

Connections

D - Switch
C - Ground
B - Power In
A - Output

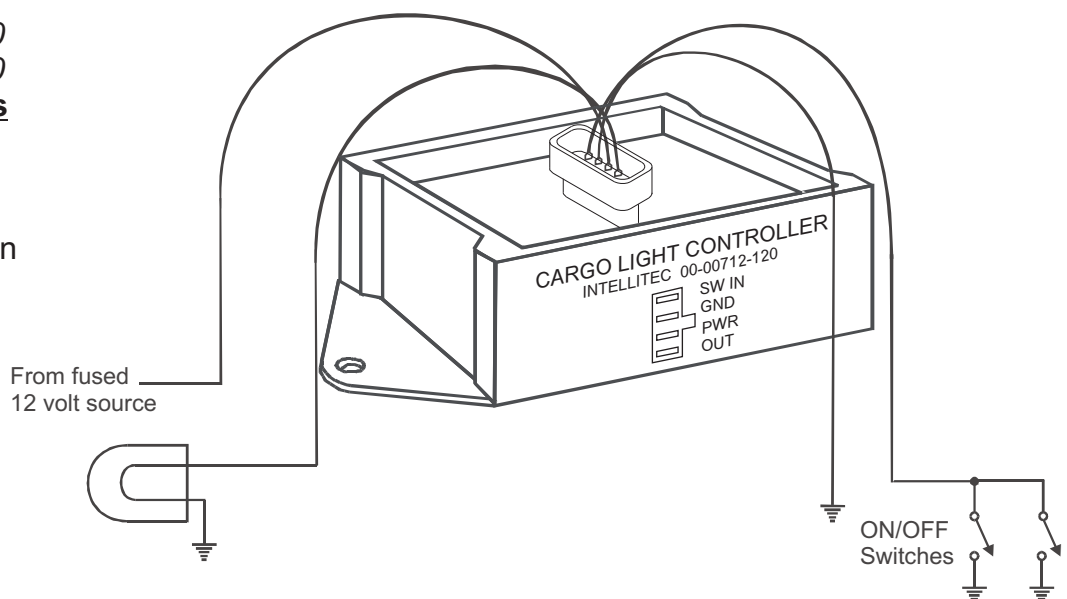

Intellitec
1485 Jacobs Rd.
Deland, FL 32724
386.738.7307

P/N 53-00712-120 Rev. G 050619



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.