



F.A.S.T.

(FAST ASSEMBLY SELF TENSIONING)

TRACK FLUSH FLOOR

SLIDE-OUT

OWNER'S MANUAL

TABLE OF CONTENTS

System Information	2
Major Components	2
Safety Information	3
Prior to Operation	3
Operation	3
Extending the Slide-out Room	3
Retracting the Slide-out Room	4
Troubleshooting	4
Fault Codes	4
Manual Override	6
Maintenance	7
Wiring	8

System Information

The F.A.S.T. (Fast Assembly Self Tensioning) Track® Flush Floor Slide-out is a cable-driven system that is operated by a 12V DC electric motor. The system is designed to actuate rooms up to 700 pounds and 40" of stroke.

Major Components

- Vertical column that mounts into the side wall opening
- Horizontal cables that actuate the room
- A 12V DC gear motor that operates the room using power from the battery
- A specially designed control box that gives the user full control of room movement. The control box has programmable stops. When programmed, the stops limit extend and retract and have the ability to detect faults for ease in troubleshooting.
- Harnesses to connect the rocker switch and motors to the control box.

Additional Information

Additional information about this product can be obtained from lci1.com/support or by downloading the free LippertNOW app. The app is available on Apple App Store® for iPhone® and iPad® and also on Google Play™ for Android™ users.

Apple App Store®, iPhone®, and iPad® are registered trademarks of Apple Inc. Google Play™ and Android™ are trademarks of Google Inc.

Safety Information

WARNING

The "WARNING" symbol above is a sign that a procedure has a safety risk involved and may cause death, serious personal injury, severe product or property damage if not performed safely and within the parameters set forth in this manual.

WARNING

The F.A.S.T. Track Slide-out is intended for the sole purpose of extending and retracting a slide-out room. Its function should not be used for any other purpose. To use the system for any purpose other than its original design may result in death, serious personal injury, severe product or property damage.

WARNING

Do not exceed the maximum loaded room weight of 700 lbs. Overloading the room may result in death, serious personal injury, severe product or property damage.

CAUTION

The "CAUTION" symbol above is a sign that a procedure has a safety risk involved and may cause personal injury, product or property damage if not performed safely and within parameters set forth in this manual.

WARNING

Failure to act in accordance with the following may result in death, serious personal injury, severe product or property damage.

WARNING

Always make sure that the slide-out room path is clear of people, pets and objects before and during operation of the slide-out. Always keep away from the gear racks when the room is being operated to avoid possible serious personal injury.

Prior to Operation

1. To optimize slide-out actuation, the unit **MUST** be parked on solid, level ground.
2. Inspect all connections at the controller and verify they are securely attached.
3. Verify there are no obstructions that could hinder normal movement of the slide-out room.
4. Make sure there is ample voltage being supplied to the slide-out controller.
5. Set the parking brake, if applicable.
6. If applicable, the ignition of the unit **MUST** be turned off in order to operate the slide-out system.

CAUTION

Moving parts can pinch, crush or cut. Keep clear and use caution.

Operation

Extending the Slide-out Room

1. If equipped, remove the transit bars.
2. If equipped, turn "ON" the on/off switch or key.
3. Press and hold the "OUT" or "EXT" button.

NOTE: There will be a slight delay before the slide-out room will begin to move. This is normal.

4. Release the button when the slide-out room is fully extended and stops moving.
5. If equipped, turn "OFF" the on/off switch or key.

Retracting the Slide-out Room

1. If equipped, turn "ON" the on/off switch or key.
2. Press and hold the "IN" or "RET" button.

NOTE: There will be a slight delay before the slide-out room will begin to move. This is normal.

3. Release the button when the slide-out room is fully retracted and stops moving.
4. If equipped, turn "OFF" the on/off switch or key.
5. If equipped, replace the transit bars.

Troubleshooting

The Fault Code Chart outlines some common problems, their causes and possible corrective actions. If any part or serial number information is available, provide it to service technician, when asking for assistance. When something restricts room travel, system performance will be unpredictable. It is very important that the entire slide system be free of contamination and allowed to travel full distance (stroke). Ice or mud build-up during travel is an example of some types of contamination that can occur. When troubleshooting the system, make sure the battery is fully charged, there are no visible signs of external damage to the system and that all connections are secure. During troubleshooting, remember that any change may affect something else. Make sure any change made, will not effect anything else.

Fault Codes

Error Code Chart Control 366701					
Flashes		Fault Type	Description	Why?	What Should Be Done?
Green	Red				
1	1	Minor	Park brake not set	Parking brake (if applicable) is not set.	Set parking brake (if applicable).
				Ground signal is lost at parking brake receptacle at control box.	Check for continuity to ground on wire plugged into parking brake receptacle at control box.
1	2	Minor	Low voltage	Incoming voltage to control is below 12V DC. The room will not move if the voltage is 10.5V DC or below.	Start vehicle, generator, or make sure the unit is plugged in to shore power. Check 2-pin power connector at the control box at BATT + and GND. Consult manufacturer of unit charging system for troubleshooting assistance.
2	4	Major	Motor 1 fault	Bad wire connection.	Refer to Technical Information Sheets: Troubleshooting Control Box for SlimRack Systems 82-S0533 . If necessary, copy and paste or type the following path into a browser; https://www.lci1.com/slide-outs-/support-slimrack then look for the specified document among the listing.
				Bad motor.	
2	2	Major	Motor 2 fault	Bad wire connection.	
				Bad motor.	
1	6	Minor	High voltage	Supply voltage to control box is 17V DC or greater.	Consult manufacturer of unit charging system for troubleshooting assistance.

The controller has the ability to detect and display several faults within the slide-out system. When a fault is detected, the room movement may stop and two different LED lights on the controller will flash in a particular pattern indicating the proper action needed to clear the fault, such as:

1. The Motor LED will flash GREEN 1 or 2 times, indicating which motor is experiencing the associated fault. For example, 1 GREEN flash indicates Motor 1 and 2 GREEN flashes indicates Motor 2.
2. The Fault Code LED will flash RED a number of times, indicating the determined fault. Refer to the troubleshooting chart below to best determine the cause of the fault.

NOTE: When motor movement is not detected by the control box in either direction during room actuation, the controller will automatically enter into "Emergency Jog" mode. When in Emergency Jog mode, the controller will jog both motors in the direction the switch is pressed, i.e. "IN" or "OUT". The switch may need to be pressed multiple times to fully retract or extend the slide-out room. Take the unit to an OEM-authorized dealer for service.

NOTE: The control box will return to normal mode after five minutes of inactivity or by cycling power (turning power off/on) to the control box.

Error Code Chart Controls 697096 & 700156					
Flashes		Fault Type	Description	Why?	What Should Be Done?
Green	Red				
1	1	Minor	Park brake not set	Parking brake (if applicable) is not set.	Set parking brake (if applicable).
				Ground signal is lost at parking brake receptacle at control box.	Check for continuity to ground on wire plugged into parking brake receptacle at control box.
1	2	Minor	Low voltage	Incoming voltage to control is below 12V DC. The room will not move if the voltage is 10.5V DC or below.	Start vehicle, generator, or make sure the unit is plugged in to shore power. Check 2-pin power connector at the control box at BATT + and GND. Consult manufacturer of unit charging system for troubleshooting assistance.
2	4	Major	Motor 1 fault	Bad wire connection.	Refer to Technical Information Sheets: Troubleshooting Control Box for SlimRack Systems 82-S0533 . If necessary, copy and paste or type the following path into a browser; https://www.lci1.com/slide-outs-/support-slimrack then look for the specified document among the listing.
				Bad motor.	
2	2	Major	Motor 2 fault	Bad wire connection.	
				Bad motor.	
1	6	Minor	High voltage	Supply voltage to control box is 17V DC or greater.	Consult manufacturer of unit charging system for troubleshooting assistance.
1	7	Major	Stops	• Stops have not been set • Stops were cleared • Stops were improperly set	Stops need to be programmed according to the programing instructions in this document.
1	8	Major	Fuse	Motor fuse concern	Contact Lippert Representative
1	9	Major	Battery Dropout	Battery dropped below 8.5V while extending or retracting slides.	Charge battery, start vehicle, generator, or make sure unit is plugged into shore power.

Manual Override

In the event that power is lost to the slide-out motor(s), the slide-out room can be manually retracted by following these steps:

1. Disconnect the wire harness from the motor lead (Fig. 1A).
2. Remove the screws (Fig. 2A) anchoring the interior column clamp (Fig. 2B) to the wall.
3. Detach the interior column clamp from the column and set aside.
4. Remove the two screws (Fig. 2C) that hold the motor cover (Fig. 3A) to the column (Fig. 2D) and remove the motor cover.

Fig. 1



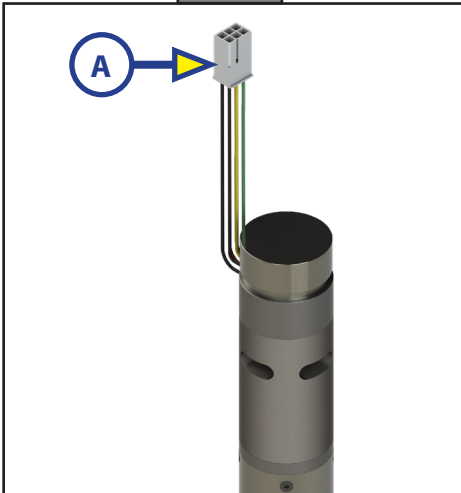


Fig. 2

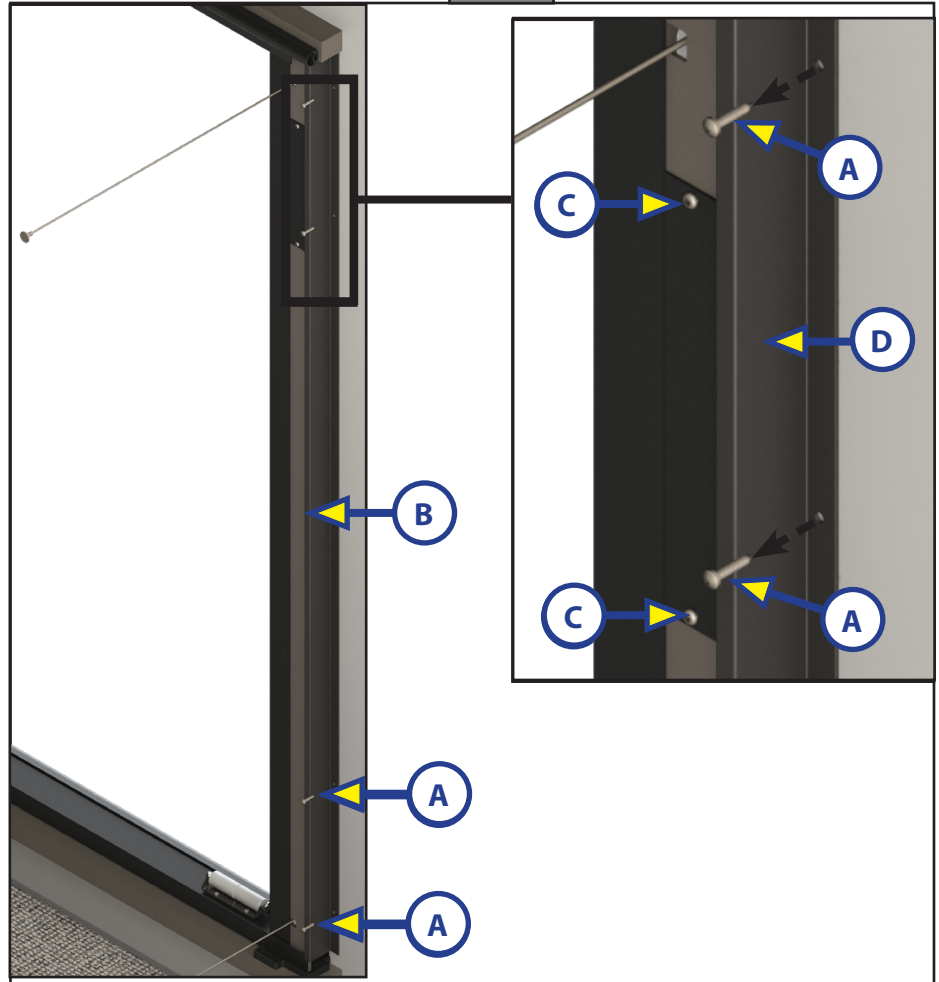

5. Disengage the motor from the drive sprocket assembly (Fig. 4A).
6. Repeat steps 1-5 on the opposite column.
7. The slide-out system should be free to move manually.
8. Once fully, manually retracted, insert the motor into the drive sprocket assembly. This prevents the slide-out from moving freely while the unit is in motion.

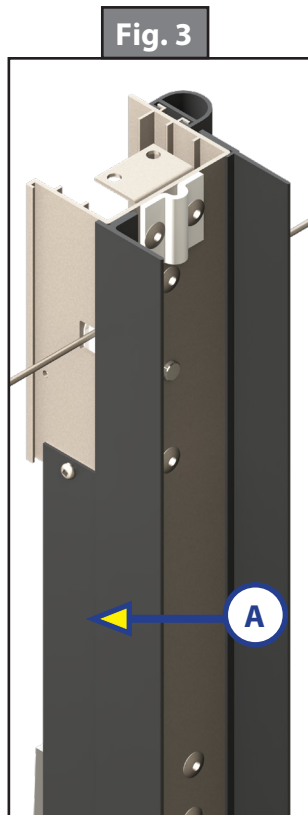


Maintenance

The F.A.S.T. Track® Slide-out has been designed to require very little maintenance. To ensure the long life of your slide-out system, read and follow these few simple procedures:

- When the room is extended, visually inspect the slide system assemblies. Check for excess buildup of dirt or other foreign material. Remove any debris that may be present.
- If the system squeaks or makes any noises, wipe off any debris or dirt from the cables.
- If a slide-out cable is fraying, contact a qualified service center technician.

Wiring


The controller (Fig. 5A & 6A) can be mounted in various locations of the unit. If the controller is not in a waterproof area the controller needs to be relocated to a waterproof area. When identifying motor 1 and motor 2, refer to Fig. 7. On old controls, when the mode switch (Fig. 5E) is in the left position the controller will not operate the slide-out room unless a park brake signal is found. With the mode switch moved to the right position, the controller will bypass the safety feature. For all trailers, the switch will need to be in the right position.

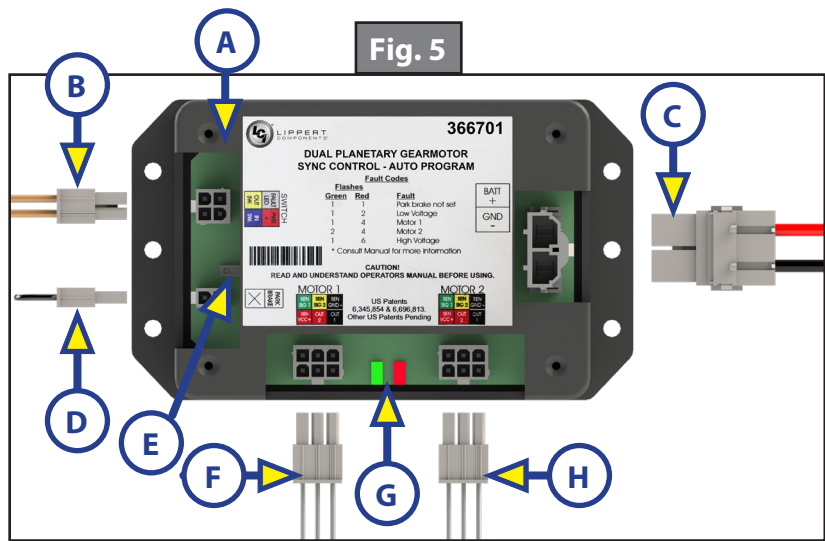

Callout	Description OLDER
A	Controller
B	Switch Harness
C	Power Harness
D	Park Brake Input Harness
E	Mode Switch
F	Motor 1 Harness
G	Indicator Lights
H	Motor 2 Harness


NOTE: New controls do not have a mode switch (Fig. 5E) as referenced above. There are two new control: 697096 for trailers and 700156 (Fig. 6A) for motorized units. Control 700156 requires a park brake signal before it will allow the room to operate, 697096 does not.

NOTE: *Park brake input harness (Fig. 6D) not used on towable unit control.

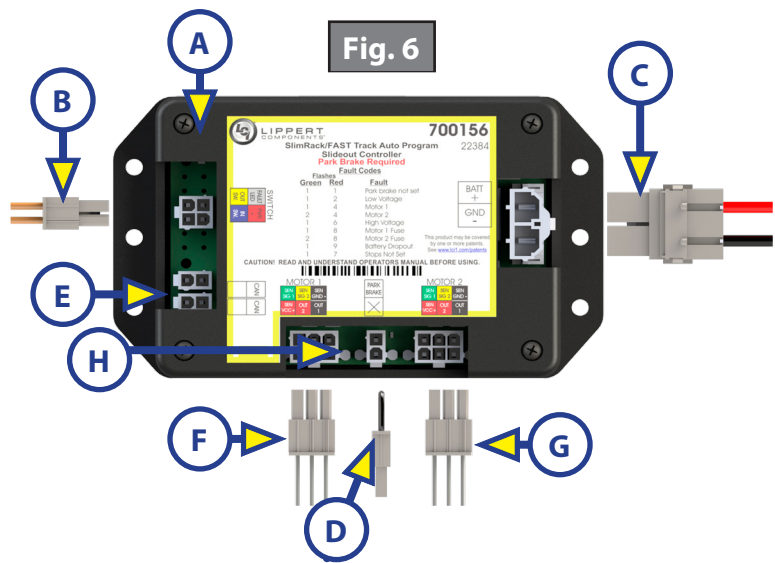

Callout	Description NEW
A	Controller
B	Switch Harness
C	Power Harness
D	Park Brake Input Harness*
E	CANbus data harnesses (Optional)
F	Motor 1 Harness
G	Motor 2 Harness
H	Light Indicators

Fig. 7

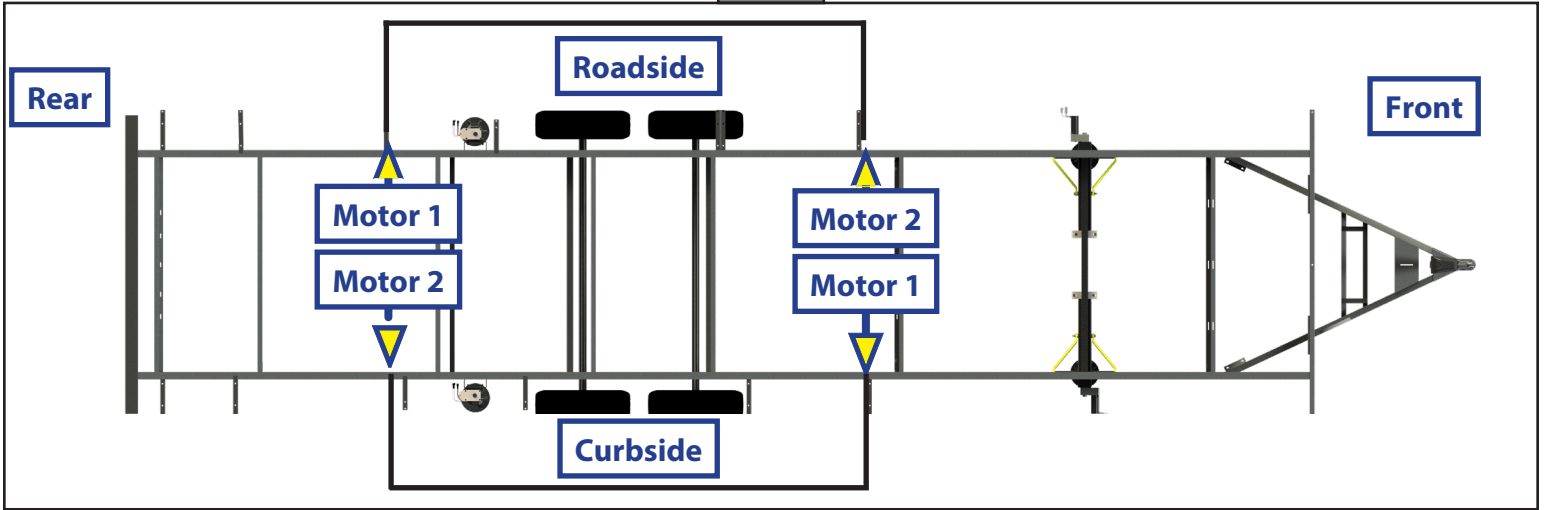



The contents of this manual are proprietary and copyright protected by Lippert Components, Inc. (LCI). LCI prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized LCI representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of LCI. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact
Lippert Components, Inc.

Ph: (574) 537-8900 | Web: lippert.com | Email: customerservice@lci1.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.