



ICE HOUSE
HYDRAULIC LEVELING
OWNER'S MANUAL

L I P P E R T
C O M P O N E N T S®

TABLE OF CONTENTS

Introduction	2
Safety	3
Preparation	4
Operation	4
Cabin Mode	4
Travel Mode	5
Maintenance	5
Grease Specification	5
Grease Application	5
Troubleshooting	6
Manual Override	6
Electrical Routing	8
Electrical Routing - Manifold/Solenoid	11
Hydraulic Routing	12
Hydraulic Routing - Manifold	13

Introduction

The Ice House is equipped with a hydraulic jacks and pivot axles. The pivot axles offer a smooth operation to lower the ice house without disturbing the ice.

Additional information about this product can be obtained from support.lci1.com or by downloading the free myLCI app. The app is available on iTunes® for iPhone® and iPad® and also on Google Play™ for Android™ users.

iTunes®, iPhone®, and iPad® are registered trademarks of Apple Inc.

Google Play™ and Android™ are trademarks of Google Inc.

NOTE: Images used in this document are for reference only when assembling, installing and/or operating this product. Actual appearance of provided and/or purchased parts and assemblies may differ.

For information on the assembly or individual components of this product, please visit:

<https://support.lci1.com/leveling-and-stabilization-support-hydraulic-leveling/>

Safety

Read and understand all instructions before installing or operating this product. Adhere to all safety labels.

This manual provides general instructions. Many variables can change the circumstances of the instructions, i.e., the degree of difficulty, operation and ability of the individual performing the instructions. This manual cannot begin to plot out instructions for every possibility, but provides the general instructions, as necessary, for effectively interfacing with the device, product or system. Failure to correctly follow the provided instructions may result in death, serious personal injury, severe product and/or property damage, including voiding of the LCI limited warranty.

WARNING

The "WARNING" symbol above is a sign that an installation procedure has a safety risk involved and may cause death, serious personal injury and/or severe product or property damage if not performed safely and within the parameters set forth in this manual.

WARNING

Failure to follow instructions provided in this manual may result in death, serious personal injury and/or severe product and property damage, including voiding of the component warranty.

WARNING

The trailer MUST be supported per manufacturer's recommendations before working underneath. Failure to do so may result in death or serious personal injury.

CAUTION

The "CAUTION" symbol above is a sign that an installation procedure has a safety risk involved and may cause personal injury and/or product or property damage if not performed safely and within the parameters set forth in this manual.

CAUTION

Always wear eye protection when performing service, maintenance or installation procedures. Other safety equipment to consider would be hearing protection, gloves and possibly a full face shield, depending on the nature of the task.

CAUTION

Moving parts can pinch, crush or cut. Keep clear and use caution.

Preparation

1. Make sure all battery(ies) are fully charged and test at 12V DC under load.
2. Park the trailer on level and stable ground/ice.
3. Make sure all persons, pets, and property are clear of the trailer before and during operation.

Operation

NOTE: Each jack has an individual extend/retract rocker switch.


NOTE: Some systems may have an optional all-jack extend/retract rocker switch to be utilized as the owner deems appropriate.

NOTE: The trailer should always be raised or lowered incrementally to avoid placing too much stress on any one jack or the chassis.

Cabin Mode

1. Disconnect the trailer coupler from the tow vehicle hitch.
2. Disconnect any chains or electrical wiring connecting the tow vehicle to the trailer.
3. Extend the front jack by pressing the extend end of the front jack rocker switch, which is mounted near the front jack. Keep extending the jack until the coupler clears the hitch ball.
4. Move the tow vehicle safely away from the trailer.
5. Incrementally extend the rear jacks to make contact with the ice and relieve pressure from the spring hitch pin (Fig. 1A) by pressing the extend end of each individual rear jack rocker switch.
6. Remove the cotter pin (Fig. 1B) from each spring hitch pin (Fig. 1A).

Fig. 1

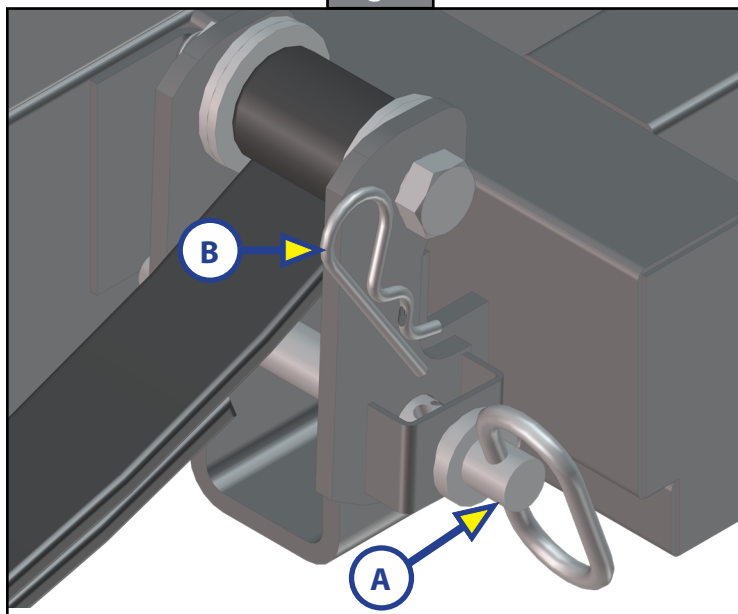

7. Remove the spring hitch pins (Fig. 1A) from the axle assemblies to free the axles.
8. Retract all jacks incrementally by pressing the retract end of each jack rocker switch until the ice house sets flat to the ground or ice.

Travel Mode

1. Incrementally extend all jacks, keeping the trailer as level as possible to obtain travel mode:
 - A. extend tongue jack by pressing the extend button on the rocker switch.
 - B. extend rear jacks by pressing the extend end of each jack rocker switch until the axle assembly is returned to the travel position and the spring hitch pin is in line with the holes.
2. Insert hitch pins (Fig. 1A) into each axle assembly and secure the cotter pins (Fig. 1B).
3. Incrementally retract the rear jacks completely by pressing the retract end of each rear jack rocker switch.
4. Adjust tongue jack as needed to connect the trailer coupler to the tow vehicle hitch.
5. Connect all chains and electrical wires from the tow vehicle to the trailer.
6. Retract the front jack by pressing the retract end of the front jack rocker switch.

Maintenance

⚠ CAUTION

Do not mix lithium, calcium, sodium or barium complex greases. Chemical compatibility problems may occur. If you are changing from one chemical grease to another, make sure all old grease is removed prior to applying new grease. If the old grease is not removed completely, chemical compatibility problems may result in component failure or damage.

Grease Specification


LCI recommends a NLGI Grade 2 lithium EP complex grease for all applications contained within this manual. A molybdenum-based grease is preferred.

Grease Application

This maintenance must be completed every 3,000 miles or 3 months, whichever comes first.

1. Fill the grease gun with a lithium-based multipurpose grease.
2. Use the grease gun to grease the fitting (Fig. 2A) located on the front pivot tube.

Fig. 2

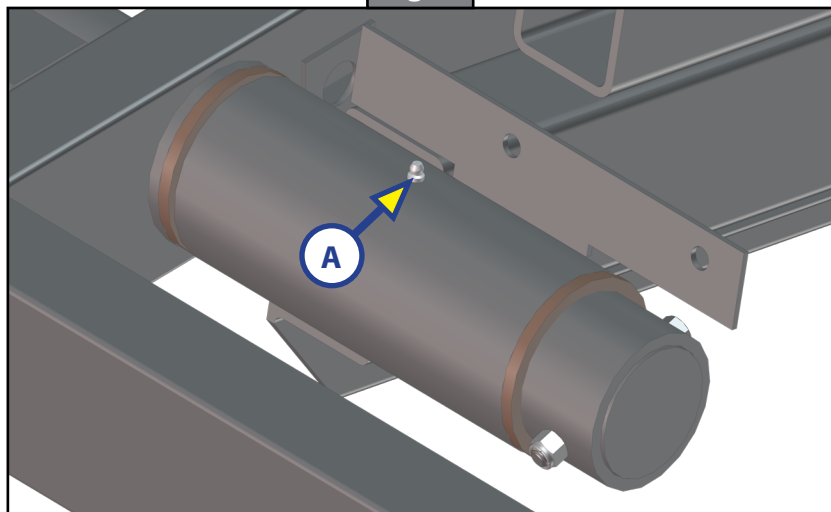

3. Pump grease into the fitting until the grease is overflowing out of the pivot points.
4. Clean off any excess grease with a lint-free shop cloth.
5. Repeat steps 2 through 4 for the other side of the trailer.

Troubleshooting

⚠ CAUTION

Make sure all jacks are fully retracted before travel.

Manual Override

In the event that the jacks do not retract, the cartridge valves can be manually overridden.

NOTE: Cold weather could affect the viscosity of the hydraulic fluid, which may cause the manual override process to take longer than normal.

⚠ CAUTION

Do not overtighten the override screws in either direction as this can damage the cartridge valves.

⚠ CAUTION

Use of an impact gun to perform an override procedure can damage the motor. Use a hex wrench to perform the override procedure.

1. Using a 5/32" hex wrench, open the desired valve(s) on the manifold (Fig. 3) by turning the manual override screw on the end of the valve clockwise (Fig. 4A).

NOTE: Some cartridge valves may take a 5/64" hex wrench.

Fig. 3


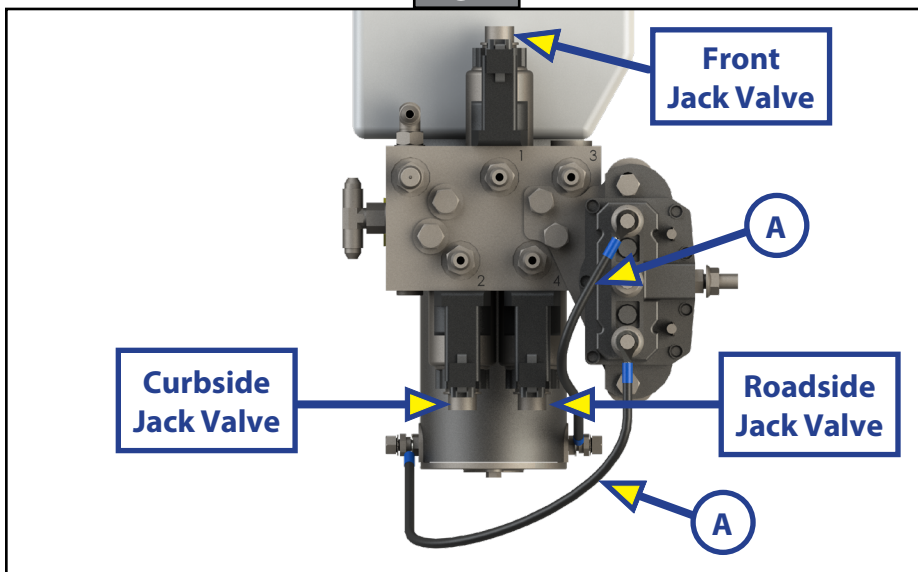


Fig. 4



2. Disconnect or shield power cables (Fig.3A) on the motor.
3. Remove the protective label (Fig. 5A) located on the front end of the hydraulic power unit to reveal the manual override coupler.

Fig. 5

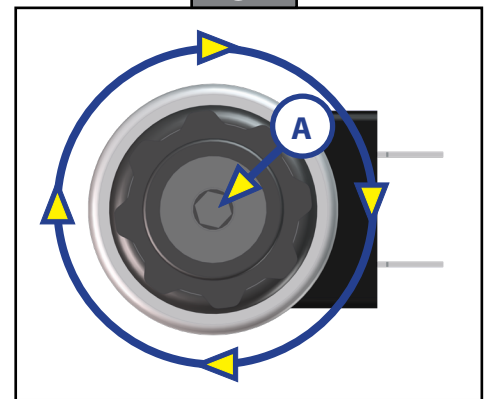

4. Using an electric drill with a 1/4" hex bit, insert the hex bit into the manual override coupler to manually operate the system.
 - A. Run the drill forward (clockwise) (Fig. 6A) to extend/raise the trailer.
 - B. Run the drill in reverse (counterclockwise) (Fig. 6B) to retract/lower the trailer.
5. Make sure to turn the manual override screw on the valve(s) (Fig. 7A) back to the counterclockwise position (Fig. 7) after the manual override procedure is complete.

Fig. 6


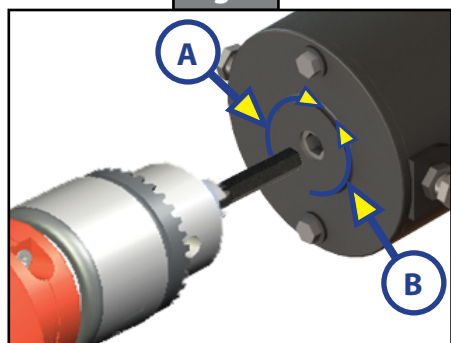


Fig. 7

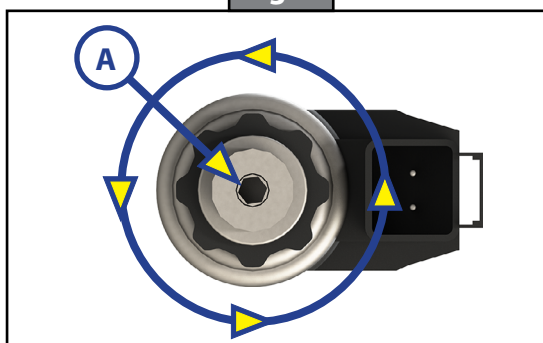


Pivot Axle and Brake Maintenance Schedule

Item	Function Required	Weekly	3 Months / 3,000 Miles	6 Months / 6,000 Miles	12 Months / 12,000 Miles
Brakes	Test that they are operational.	At Every Use			
Breakaway System	Check battery charge and switch operation.	At Every Use			
Brake Adjustment	Adjust to proper operating clearance.		◆		
Brake Magnets	Inspect for wear and current draw.			◆	
Brake Linings	Inspect for wear or contamination.				◆
Brake Controller	Check for correct amperage and modulation.			◆	
Trailer Brake Wiring	Inspect wiring for bare spots, fray, etc.				◆
Hub/Drum	Inspect for abnormal wear or scoring.				◆
Wheel Bearing	Inspect for corrosion or wear. Clean and repack.				◆
Seals	Inspect for leakage. Replace if removed.				◆
Springs	Inspect for wear, loss of arch.				◆
Suspension Parts	Inspect for bending, loose fasteners, wear.			◆	
Hangers	Inspect welds.				◆
Wheel Nuts and Bolts	Tighten to specified torque values.		◆		
Wheels	Inspect for cracks, dents, or distortion.			◆	
Tire Inflation Pressure	Inflate tires to manufacturer's specifications.	◆			
Tire Condition	Inspect for cuts, wear, bulging, etc.		◆		
Pivot Shaft	Apply grease through grease fitting (See Grease Specifications Section).		◆		



Electrical Routing

NOTE: Electrical routing shown is for reference only. OEM wiring colors may vary.

Fig. 8


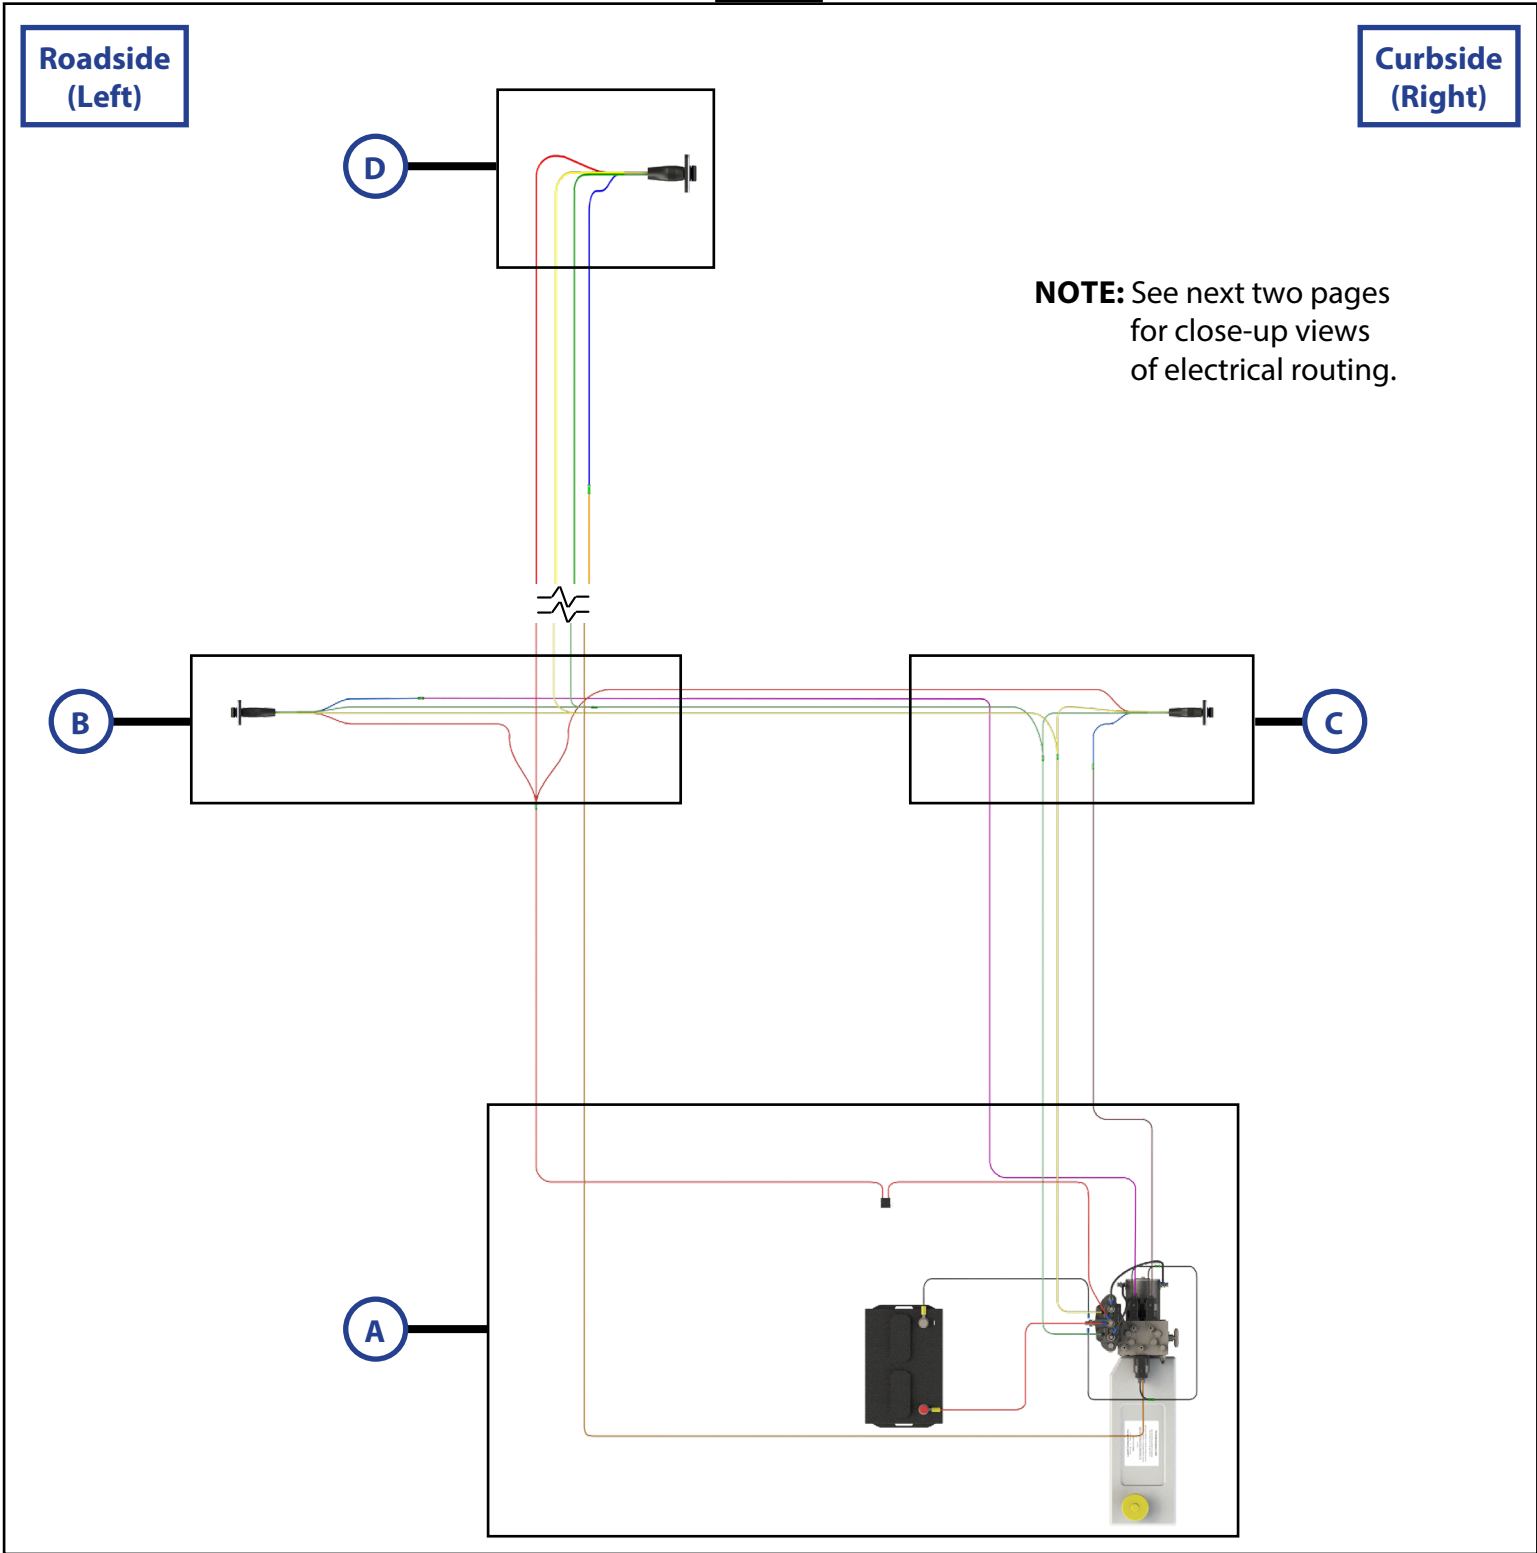


Electrical Routing (Cont'd)

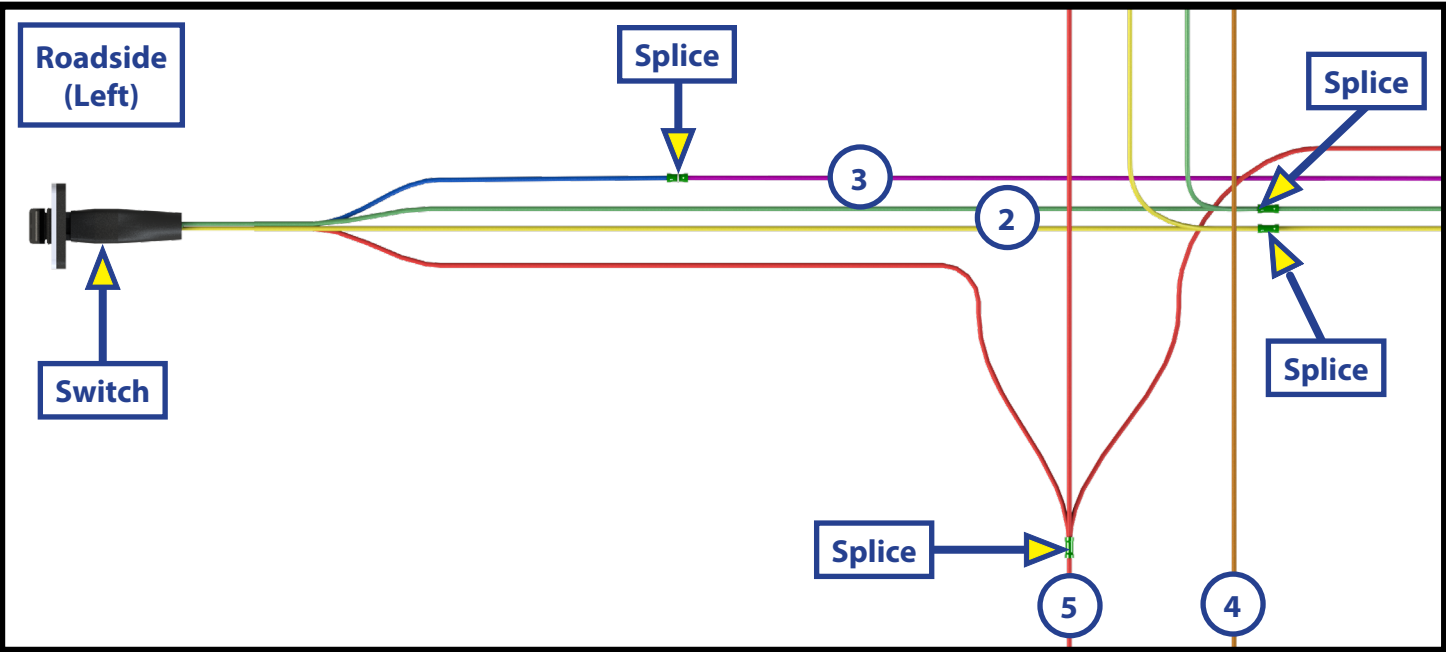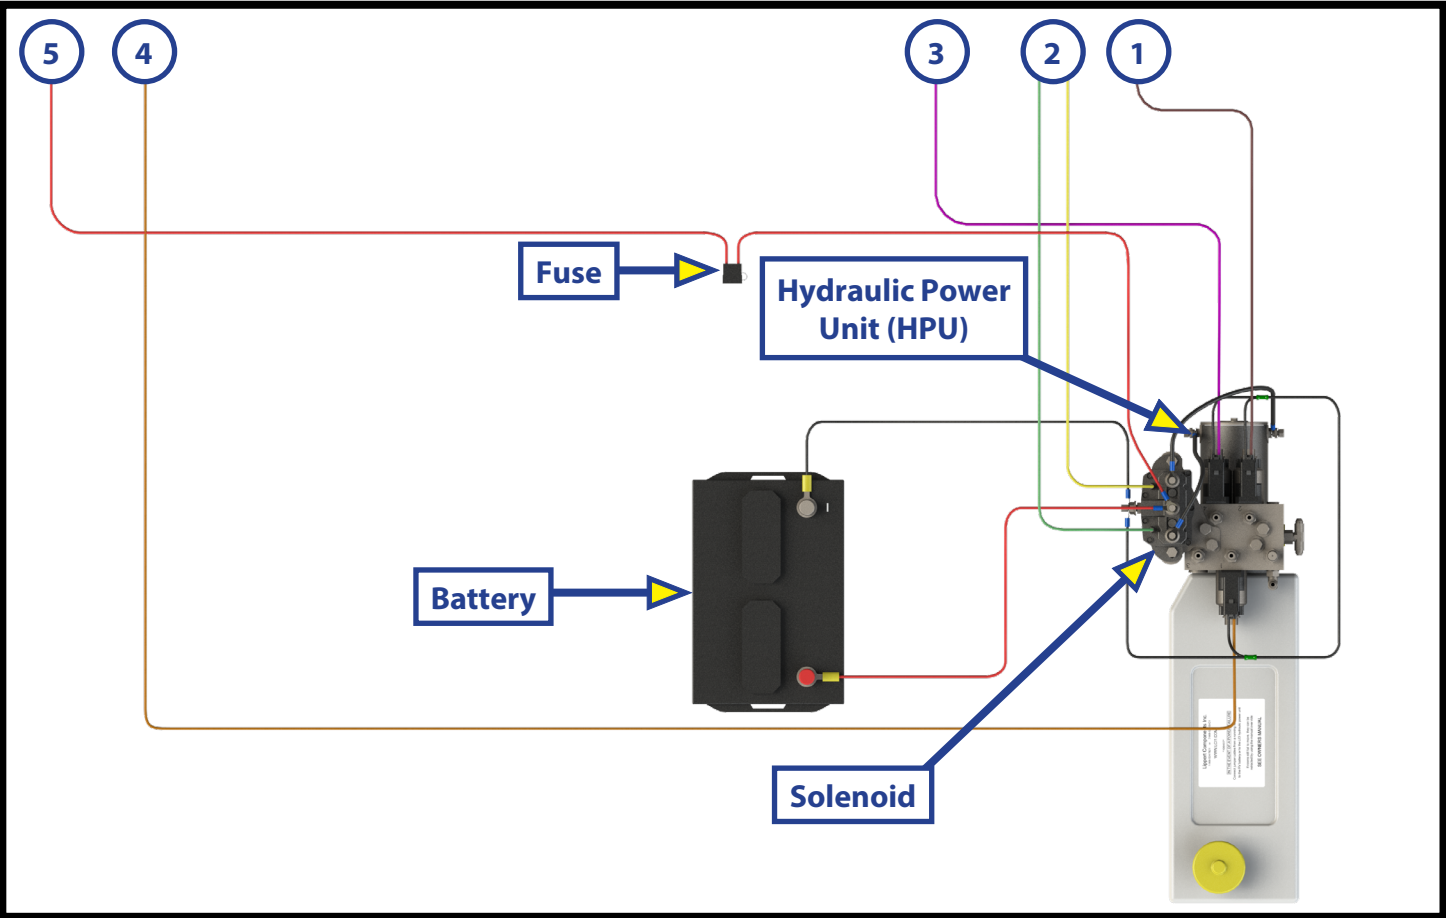


Wiring Diagram Legend		
Callout Number	Routing From	Routing To
1A-1C	HPU	Curbside switch
2A-2B-2C-2D	Solenoid	All switches
3A-3B-3C	HPU	Roadside switch
4A-4B-4D	HPU	Front switch
5A-5B-5C-5D	Solenoid	All Switches

Electrical Routing (Cont'd)

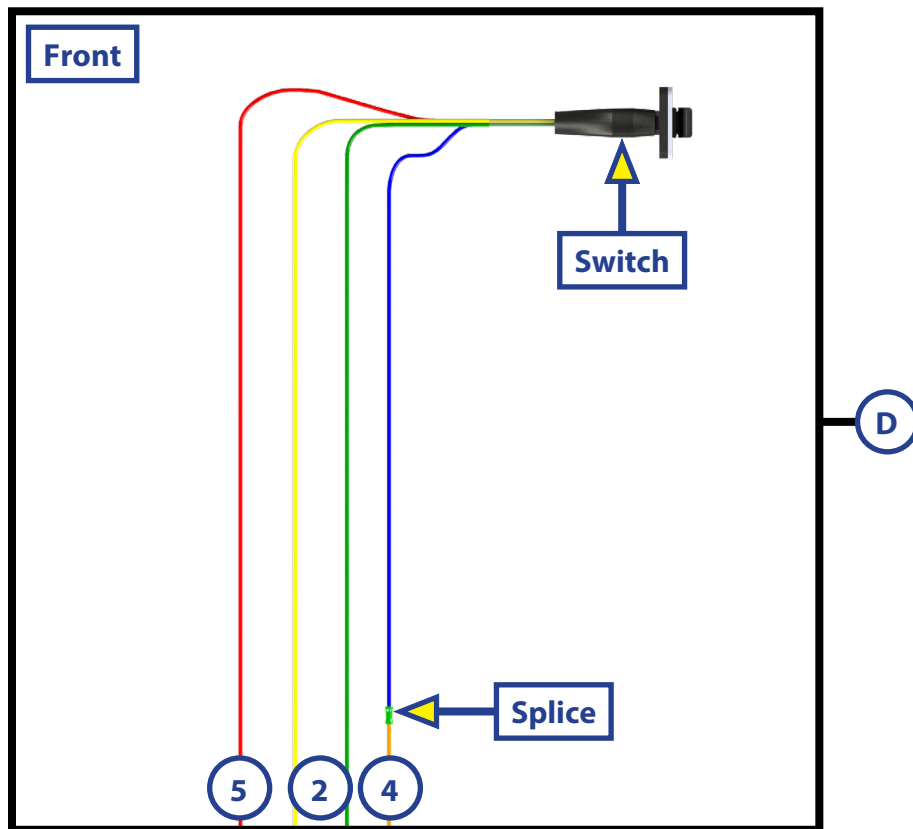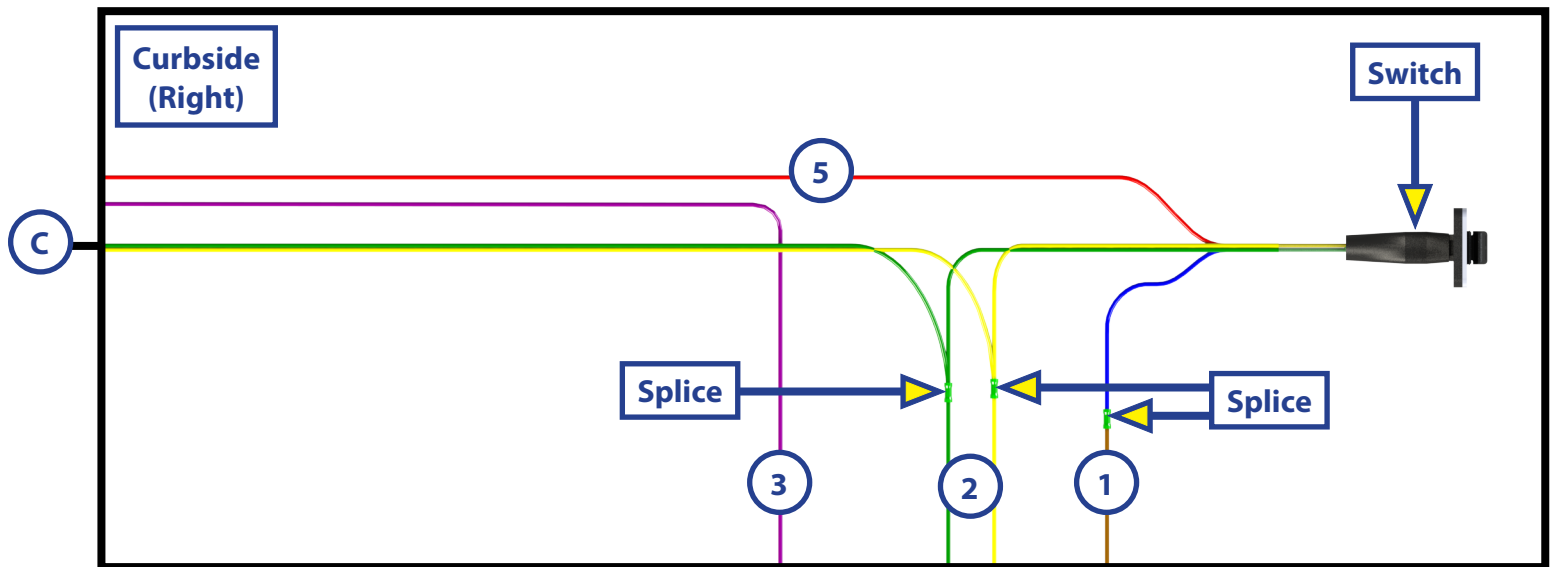

Electrical Routing - Manifold/Solenoid

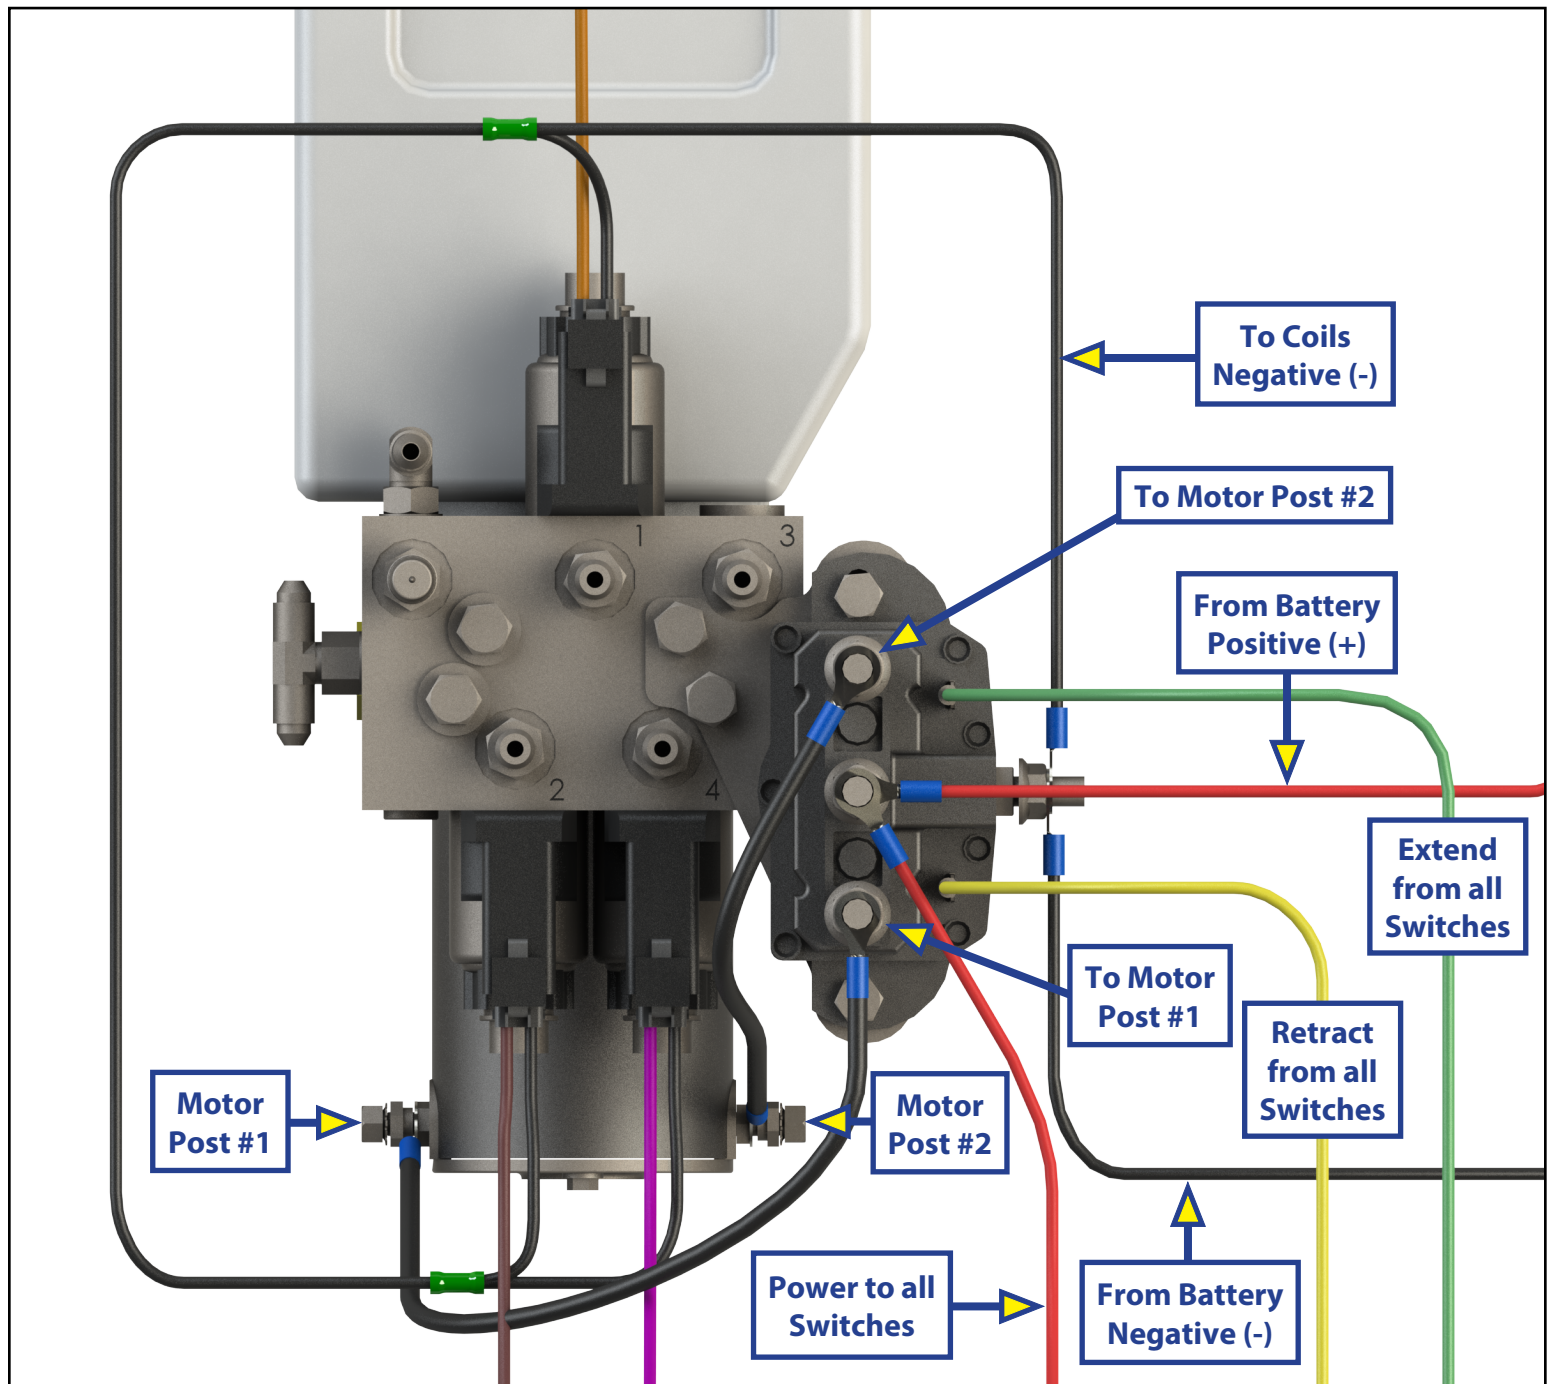

Hydraulic Routing


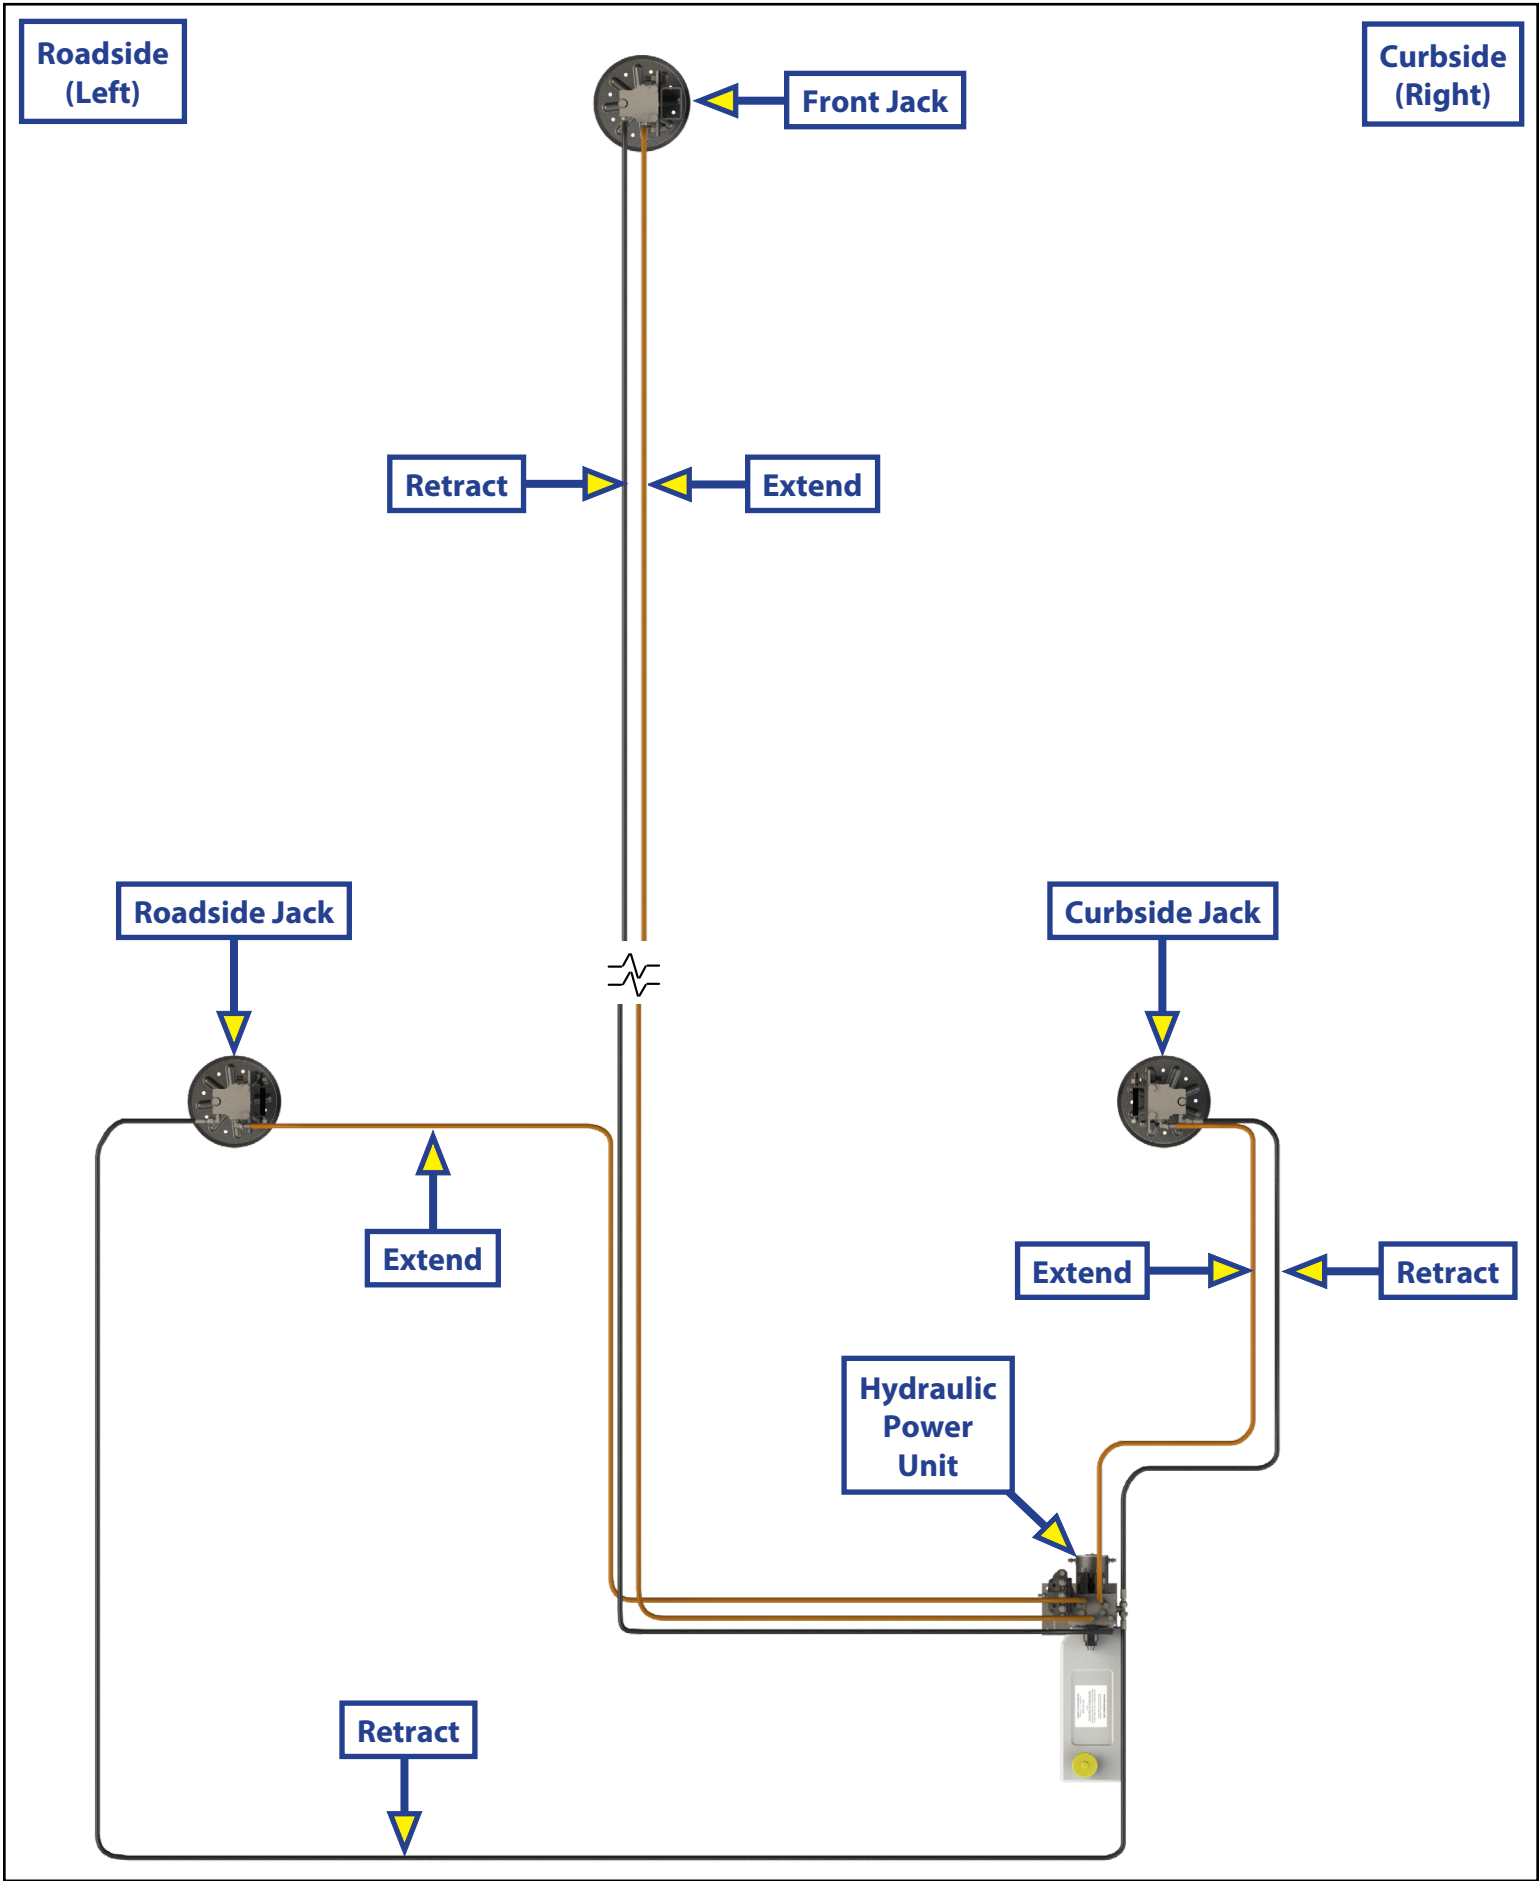


Fig. 9



Hydraulic Routing - Manifold		
Callout	Manifold Port	Description
A	1	Extend hose to front jack
B	4	Extend hose to roadside (left) jack
C	2	Extend hose to curbside (right) jack
D	—	Retract hose to curbside (right) jack
E	—	Retract hose to roadside (left) jack
F	—	Retract hose to front jack

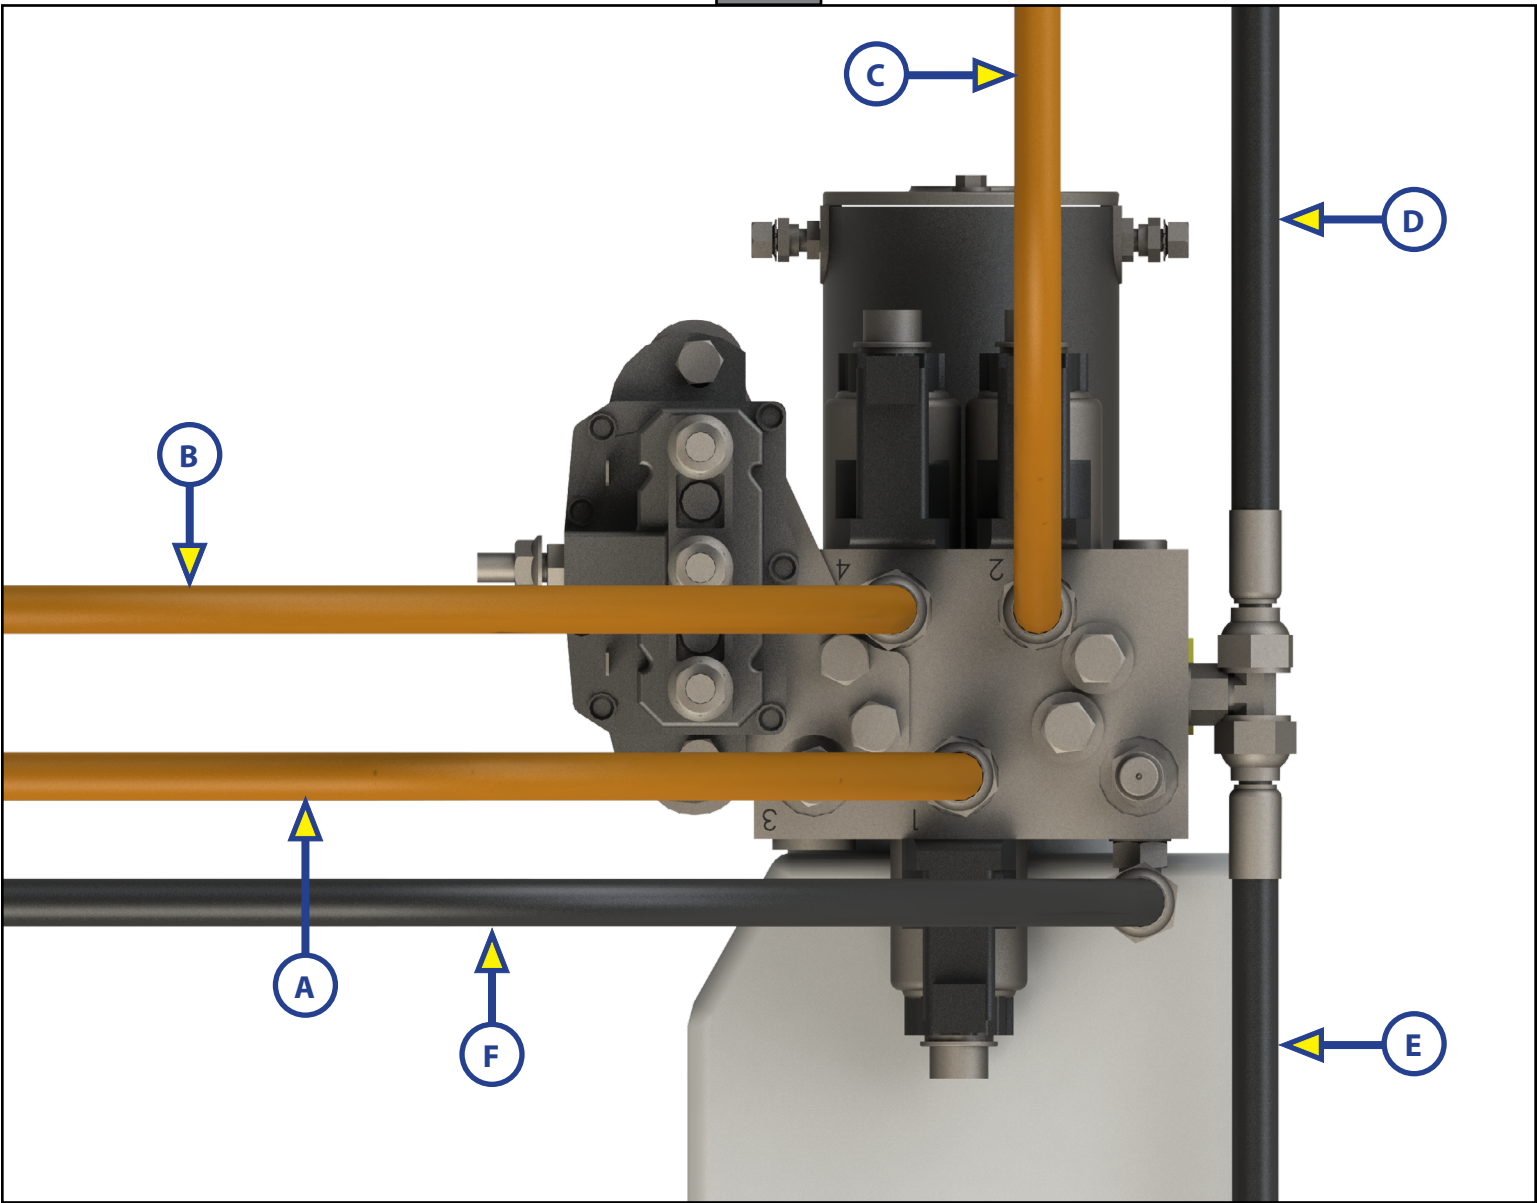

LIPPERT COMPONENTS®

The contents of this manual are proprietary and copyright protected by Lippert Components, Inc. ("LCI"). LCI prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized LCI representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of LCI.

Revised editions are available for free download from lci1.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact
Lippert Components, Inc.

Ph: (574) 537-8900 | Web: lci1.com | Email: customerservice@lci1.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.