



SOLERA[®] 5000
SERIES AWNING
OWNER'S MANUAL

TABLE OF CONTENTS

Introduction	2
Safety	3
Operation	4
Extending the Awning	4
Retracting the Awning	4
Adjusting Pitch - All Solera Awnings	5
Troubleshooting	6
Manual Override	6
Maintenance	7
Resources Required	7
Fabric Care	7

Introduction

The Solera® 5000 Series Awning features easy access to an internal motor to steadily operate the awning. Additionally, the friction joint allows for rain dump and adjustable pitch features, and there is no rafter arm to lock in place. The friction joint also provides added stability.

Additional information about this product can be obtained from [lci1.com/support](https://support.lci1.com/support) or by downloading the free LippertNOW app in Apple App Store® for iPhone® and iPad® and also on Google Play™ for Android™ users. App Store® and iPad® are registered trademarks of Apple Inc. Google Play™ and Android™ are trademarks of Google Inc.

For information on the assembly or individual components of this product, please visit:

<https://support.lci1.com/awnings/>

NOTE: Images used in this document are for reference only when assembling, installing and/or operating this product. Actual appearance of provided and/or purchased parts and assemblies may differ.

Safety

Read and understand all instructions before installing or operating this product. Adhere to all safety labels. This manual provides general instructions. Many variables can change the circumstances of the instructions, i.e., the degree of difficulty, operation and ability of the individual performing the instructions. This manual cannot begin to plot out instructions for every possibility, but provides the general instructions, as necessary, for effectively interfacing with the device, product or system. Failure to correctly follow the provided instructions may result in death, serious personal injury, severe product and/or property damage, including voiding of the Lippert limited warranty.

WARNING

The “WARNING” symbol above is a sign that a procedure has a safety risk involved and may cause death or serious personal injury if not performed safely and within the parameters set forth in this manual.

CAUTION

The “CAUTION” symbol above is a sign that a safety risk is involved and may cause personal injury and/or product or property damage if not safely adhered to and within the parameters set forth in this manual.

CAUTION

This manual provides operational procedures for Solera® 5000 Series Awning. Operating the Solera® 5000 Series Awning in any other manner than described may result in personal injury, damage to the recreational vehicle or the awning assembly as well as voiding the Lippert Components Limited Warranty.

Operation

NOTE: Some units may not use the Lippert switch (Fig. 1).

Extending the Awning

1. Verify the RV battery is fully charged and connected to the electrical system.

NOTE: if the unit is equipped with a locking latch, be sure to unlock the latch prior to extending the awning.

2. Press and hold EXTEND (Fig. 1A) until the awning is extended completely.

NOTE: Extension is considered complete when the fabric is completely unrolled, the valance is hanging down from the roll tube and the awning's single polycord is visible between the 9 and 12 o'clock positions as viewed from the end of the drive head (Fig. 2).

NOTE: The awning fabric should always be above the roll tube. However, if the extend switch is engaged too long or extend is hit inadvertently instead of retract, the awning will roll up backward. This is not a defect. To correct the fabric orientation, press the RETRACT button. The awning will then extend to its correct orientation and normal operation can resume.

⚠ CAUTION

Tying down the roll tube once the awning is extended will not allow the free-floating support arms to work as designed and may cause damage to the awning or unit.

Fig. 1


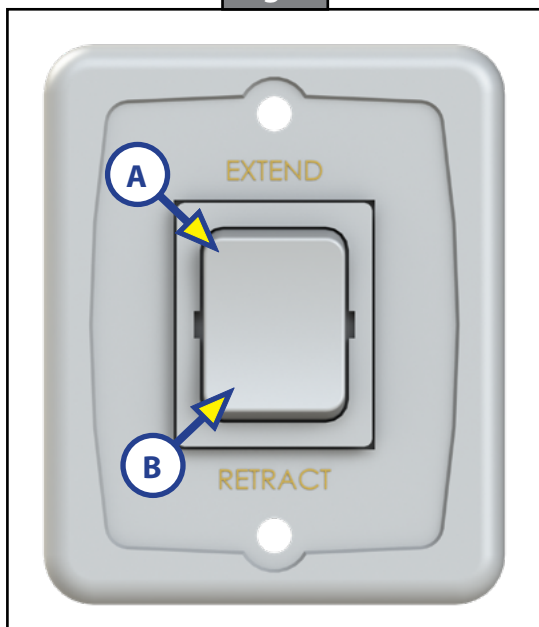


Fig. 2

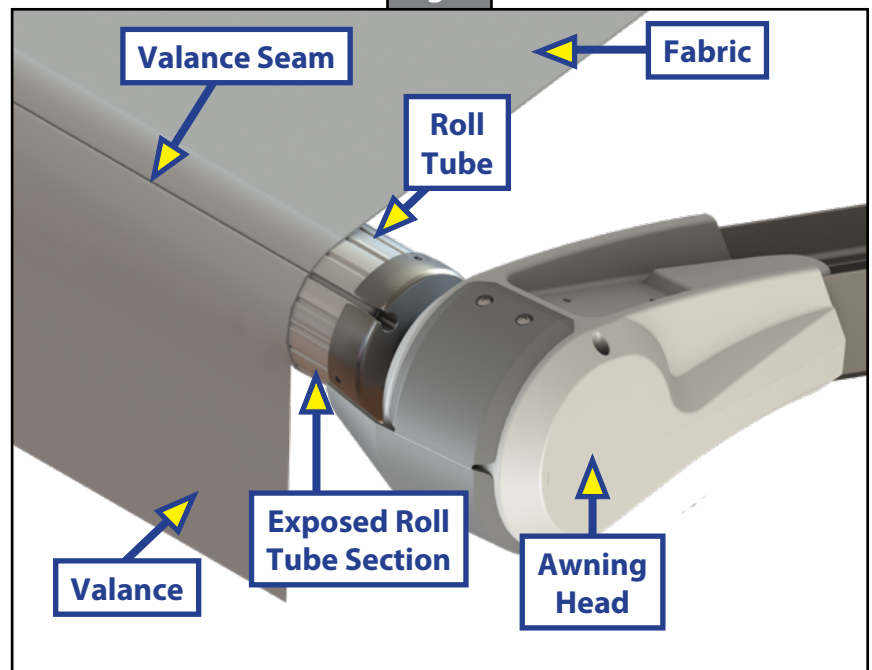

Retracting the Awning

1. Verify the coach battery is fully charged and connected to the electrical system.

NOTE: The awning can be retracted without resetting the pitch.

2. Press and hold RETRACT (Fig. 1B) until the awning is retracted completely.

NOTE: If the unit is equipped with a locking latch, be sure to engage the latch after retracting the awning.

Adjusting Pitch - All Solera Awnings

NOTE: The awning will pitch itself to purge the pooling of excess water and may dump a significant amount of water without notice.

1. Pitch can be set by adjusting the articulating arm to tip one side of the awning to allow water runoff.
2. Extend the awning to desired position.
3. Choose the side of the awning for optimum shade or convenient water runoff. Pull downward on the joint of the pitch arm until desired pitch is set (Fig. 3). Belleville washers and bolt (Fig. 5A) allow for the joint to remain in the position set by the operator.

NOTE: Do not push the joints of the articulating arms up past a straight line (Fig. 4). This will put tension on the gas strut, which can cause the strut to break.

NOTE: The awning can be retracted without resetting the pitch.

NOTE: If the articulating arm does not hold position, it can be tightened by adjusting the bolt (Fig. 5A) in the center of the articulating arm.

NOTE: When tightening the bolt do not tighten more than $\frac{1}{4}$ turn at a time and do not tighten to the point of crushing the pitch arm.

NOTE: Existing Belleville washers and bolt are installed in a specific orientation for tensioning. Removal of these components or modification of the orientation will cause adverse effects on the pitch arm functionality.

Fig. 3

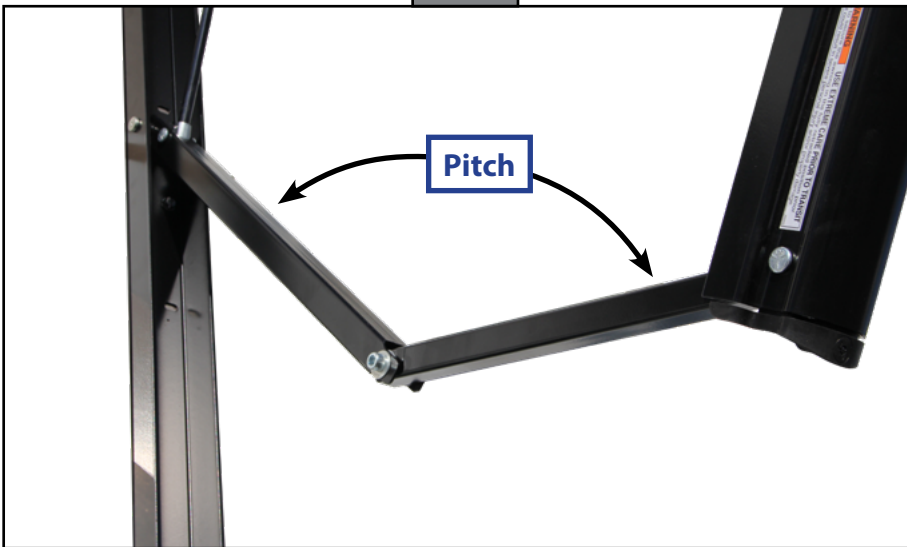


Fig. 4

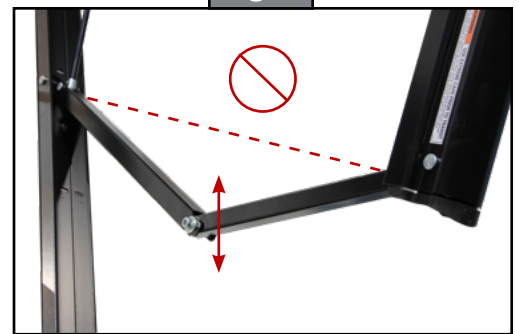


Fig. 5



Troubleshooting

Manual Override


In the event of power loss or motor failure, the awning can be extended or retracted manually. Perform the following procedure to manually extend or retract the awning.

NOTE: This procedure may also be performed to extend or retract the awning in the event of dry camping or camping without a battery.

1. Lift the decorative cover (Fig. 6A) by unlatching and lifting cover up from the bottom (Fig. 6B and 6C) exposing the manual override nut on the motor (Fig. 6D)

NOTE: The drive head assembly is always located on the right side of the awning as it is viewed from outside of the unit.

Fig. 6

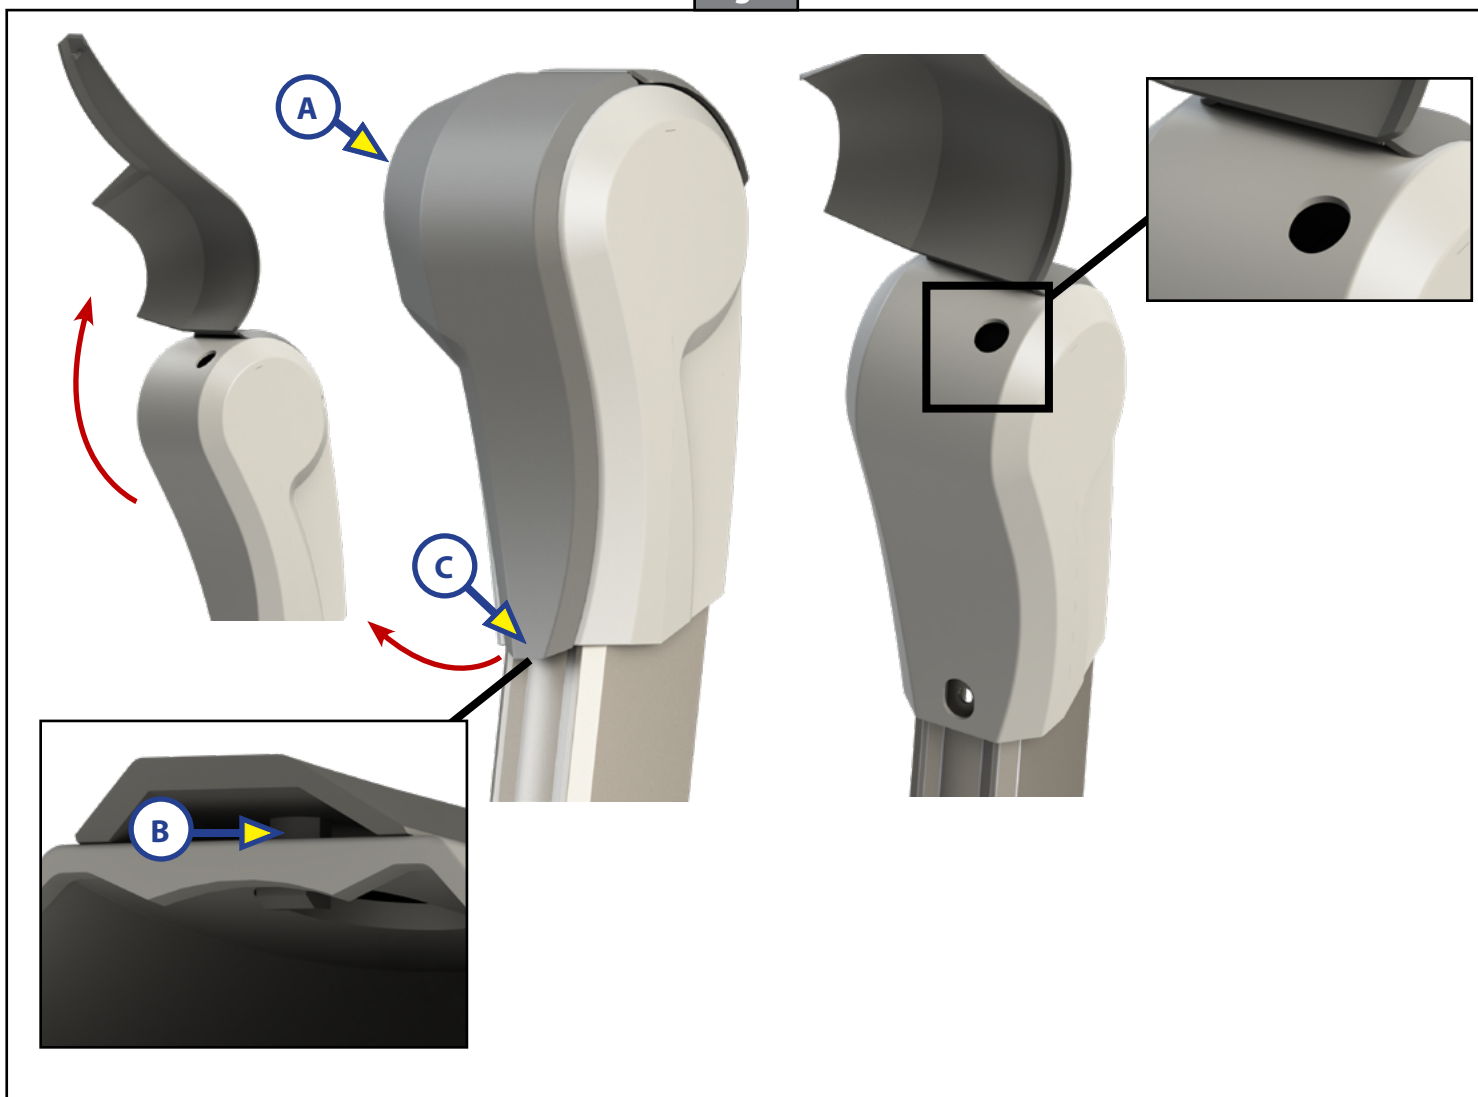

2. Using a $\frac{7}{16}$ " socket and cordless power drill, spin the manual override nut clockwise to extend or counterclockwise to retract the awning. (Fig. 7).

Fig. 7



NOTE: Use caution when extending or retracting the awning manually. The use of a step stool or ladder may be required to completely extend or retract the awning.

3. When the awning is completely extended or retracted, remove socket or drive device and replace the decorative cover on drive head assembly.

⚠ CAUTION

During incidents of high wind, heavy rain or extended time away from the unit, it is advisable to retract the awning completely to prevent damage to the awning and the unit.

Maintenance

Resources Required

- 5 gallon bucket
- Clean water
- $\frac{1}{4}$ cup of dish soap

Fabric Care

⚠ CAUTION

Over-spray of cleaning solution can cause eye and sensitive skin irritation. Flush affected area with clean water and seek medical attention, if necessary. Wear eye protection and appropriate protective clothing to avoid personal injury.

⚠ CAUTION

Moving parts can pinch, crush or cut. Keep clear and use caution.

If the awning is retracted while wet, extend the awning and let it dry as soon as conditions allow before retracting. This will help prevent the formation of mildew and add greatly to the life of the awning.

NOTE: Mildew does not form on the fabric itself, but on the accumulated dust, dirt and grime. Periodically clean vinyl or woven acrylic fabric using a mixture of $\frac{1}{4}$ cup of dish soap and five gallons of warm water.

1. Liberally apply the mixture on the top of the fabric and retract the awning for five minutes. This will apply the mixture to the bottom of the fabric as well.
2. Extend the awning and hose off with fresh water.
3. Repeat if necessary.
4. Allow to dry before retracting.



The contents of this manual are proprietary and copyright protected by Lippert Components, Inc. (LCI). Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized Lippert representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact
Lippert Components, Inc.

Ph: 432-LIPPERT (432-547-7378) | Web: lippert.com | Email: customerservice@lci1.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.