



Encoder Test 2

Dual Sync Slide Controllers (M2): 1510000122, 1510000143, and 1510000198

Tip Sheet # 82-S0522, Rev. OC 06/2013

© Copyright Power Gear 2/2012

! WARNING

Always make sure that the slide out room path is clear of people and objects before and during operation of the slide-out room. Always keep away from the slide-out rails when the room is being operated. The gear assembly may pinch or catch on loose clothing.

When the encoder is unplugged and the motor shafts moving, the room stops will need to be reset. Consult the correct manual or TIP sheet for the proper procedure.

! NOTE

Power Gear will not be liable for excessive labor time required to gain access to Power Gear components.

! Warning

12 volt automotive batteries contain sulfuric acid which can cause severe burns. Avoid contact with the skin, eyes and clothing. 12 volt automotive batteries produce hydrogen gas which is explosive; keep cigarettes, open flames and sparks away from the battery at all times.



Read, understand, and follow all instructions in this test before starting.

Test 2: This is to be used when the slide-out room will not operate normally with the wall switch or if the room is already retracted in and the emergency retract mode (see owner's manual # 3010001344 for emergency retract mode) cannot be performed. If the room will operate with the wall switch or the room is extended and the emergency retract mode can be performed, proceed to Test 1 (Document # 82-S0521), available on our website at www.lci1.com.

Fault Code: Code 8, 9, or 10 on control 1510000122

4 Wire Internal Encoder Testing

Means no signal on sensor wire. On the wall switch, the Green LED flashes to identify which encoder is in fault (see owner's manual 3010001344)

Fault Code: Code 5 on control 1510000143 and 1510000198

4 Wire Internal Encoder Testing

Means no signal on sensor wire. On the wall switch, the Green LED flashes to identify which encoder is in fault (see owner's manual 3010001344)



Internal Encoder



Figure 1

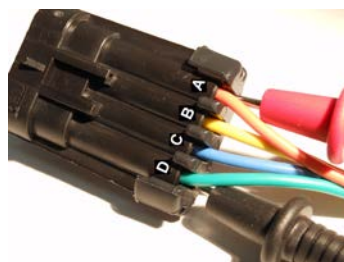


Figure 2

STEP 1: Removing the Motor/Encoder Assembly from the rail assembly.

NOTE: Depending on the accessibility, it may be necessary to remove the entire rail assembly from the coach.

For questions on supporting the room or accessing the rail assembly, contact the OEM.

STEP 2: Applying 12V DC and Ground to the Motor Plug and to the Encoder Plug.

Using a fully charged +12V DC battery: Apply 12V DC to the Encoder Plug labeled "A".

Apply a good Ground to the encoder plug labeled "D".

See Figure 1. This will provide power to the encoder.

Using a multi-meter, back probe between Pin A and Pin D at the Encoder Plug to verify there is 12VDC and Ground going to the encoder. **See Figure 2.**

Apply 12V DC to the Motor Plug on the red wire. Apply a good Ground to the Motor Plug on the black wire. This will provide power to the motor and will cause it to operate.

Caution: The motor shaft will turn when the motor is operating.

! WARNING

Always make sure that the slide out room path is clear of people and objects before and during operation of the slide out room. Always keep away from the slide out rails when the room is being operated. The gear assembly may pinch or catch on loose clothing.

! NOTE

Power Gear will not be liable for excessive labor time required to gain access to Power Gear components.

! Warning

12 volt automotive batteries contain sulfuric acid which can cause severe burns. Avoid contact with the skin, eyes and clothing. 12 volt automotive batteries produce hydrogen gas which is explosive; keep cigarettes, open flames and sparks away from the battery at all times.



STEP 3: Checking for the encoder signal.

Using a multi-meter set on AC Volts, back probe between Pin "D" and Pin "B" at the Encoder Connector. **See Figure 3** Check for a steady AC voltage reading.

Using a multi-meter set on AC Volts, back probe between Pin "D" and Pin "C" at the Encoder Connector. **See Figure 4** Check for a steady AC voltage reading.

If there is a steady AC voltage, proceed to **Step 4**.

If there is NOT a steady AC voltage reading, or there is no voltage reading, replace the motor assembly. See the motor label or the rail assembly label for the Power Gear part number for replacement.

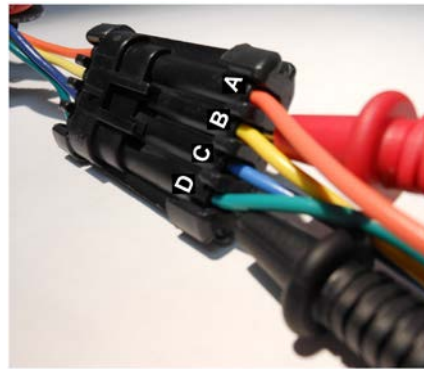


Figure 3 Encoder Plug

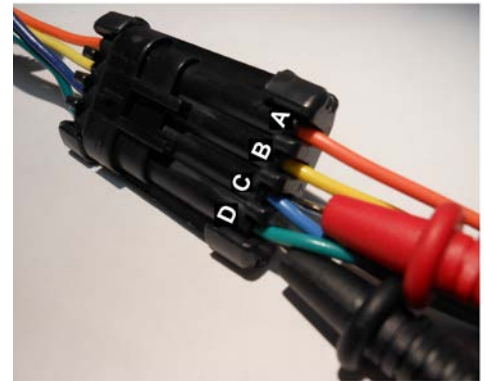


Figure 4 Encoder Plug

Step 4: If the test in STEP 3 showed a steady AC Voltage at the Encoder Connector, contact Power Gear Technical Serviced at www.powergearus.com for further diagnostic before proceeding.

Additional Reference Publication located at
www.lci1.com

Document #	Description:
3010001344	Owner's Manual M2 Sync Room Slide-Out Systems: for Slide-Out Control boxes 1510000122, 1510000143 and 1510000198
3010001343	Installation and Service Manual for M2 Sync Slide-Out Control Box 1510000122
30100002088	Installation and Service Manual M2 Sync Room Slide-Out System Without Room Locks for Slide-Out Control Boxes 1510000143 and 1510000198
82-S05021	Encoder Test 1 Dual Sync Slide Controllers (M2), 1510000122, 1510000143, and 1510000198



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.