


Detailed Wiring Diagram

Note: Some factory installed wiring not shown for clarity

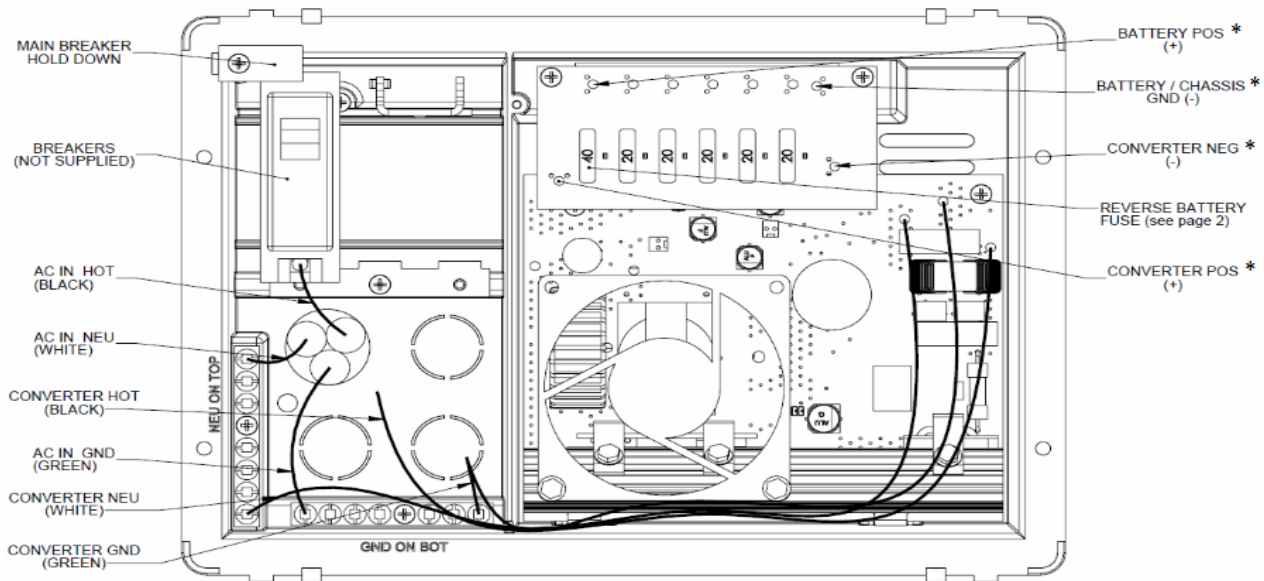

1. Turn off the power to the converter .
2. Remove the reverse Battery fuse.
3. Turn on the converter
4. With a DC voltmeter measure from converter POS to Converter NEG
Reading should be 13.6 VDC +- .2
5. If there is no voltage , verify that there is 120VAC coming into the converter.
With a meter on an AC range measure between the converter
black wire on the AC breaker to the AC in Neu bar (white wires)
There should be 100 - 125 VAC for the converter to operate properly.
6. If the DC converter is correct verify that the battery voltage is present.
With a meter on the DC range check for the battery voltage between the Battery POS
and Battery / Chassis GND (-)
If the battery voltage is not present there is a problem with the battery connections,
often an inline fuse near the battery.
7. Turn off the power to the converter and replace the reverse battery fuse.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.