

# TRUELINE LEVELING SYSTEM

## Operation Guide

Air/Hydraulic

FIRMWARE VERSIONS:

CONTROLLER 2.18

FRONT SENSOR 2.6

REAR SENSOR 2.9

PNEUMATIC I/O MODULE 2.4



**Valid Manufacturing Ltd.**

*Advanced Technologies... Simple Solutions*

Last revision: 2/22/05

Copyright © 2011 Valid Manufacturing Ltd. All rights reserved.


Information in this document is subject to change without notice. No part of this document may be reproduced or transmitted, in whole or in part, in any form, or by any means, electronic or mechanical, for any purpose, without the express written permission of Valid Manufacturing Ltd.

# LEVELING SYSTEM OPERATION

There are three main operating modes of the Trueline Leveling System:

- **Auto Level Mode (Air or Hydraulic):** Auto mode should be used by default when the vehicle is at a stop. This mode is the easiest to use and is suitable for most situations. Note that hydraulic control in Auto mode can only be used when the vehicle is parked and the ignition is on.

- **Manual Level Mode (Air or Hydraulic):** Manual mode allows you to raise or lower each corner of the vehicle individually, to the level you want. This mode lets you have more control over the leveling process.

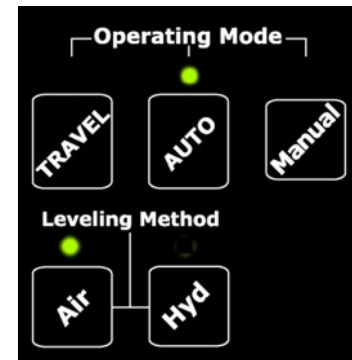

Level mode indicators

- With air leveling, manual mode can also be used at low traveling speeds when an uneven surface must be negotiated.
  - With hydraulic leveling, manual leveling can only be used when the vehicle is parked and the ignition is on.
- **Travel Mode:** Travel mode is used when the vehicle is in motion. By default, this mode will initiate when the vehicle moves at a speed higher than the designated speed limit (set in the initial configuration of the system). However, it is best for the operator to enter this mode before the vehicle begins moving. The leveling system can only be switched to travel mode if the ignition is turned on. Placing the vehicle in travel mode causes the hydraulic jacks to retract and the suspension to go to ride height.


**Note:** If the vehicle engine is started and either the park brake is released or the vehicle is put in gear, the jacks leveling system will go into 'Emergency Retract' which retracts and stores the jacks and puts the air suspension in travel mode.

Since the Trueline Leveling System collects information on the ground speed of the vehicle, the operational mode may change automatically depending on the state of the vehicle.

To activate any operational mode, the Trueline Leveling System must first be turned on by pressing and releasing **POWER**.

In each mode, the three level indication displays can be viewed as a building level, with the indicator lamp as the level's "bubble." The lamp displays red if not level, and green if level.


*For example: If the indicator lamp is to the left of center on either of the axle displays, then the left side of that axle is high. If the indicator lamp is forward of center on the longitudinal display, then the front of the vehicle is high.*

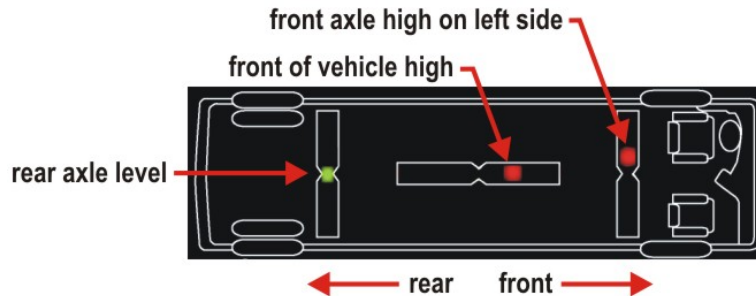

## Auto Level Mode

As stated earlier, Auto Level Mode is the easiest to use and is suitable for most situations where you wish to level the vehicle when it is at a stop.

Depending on the Auto Mode setting of your leveling system (in the initial configuration), when the vehicle has been put into Auto mode, it will go through one of the following procedures:

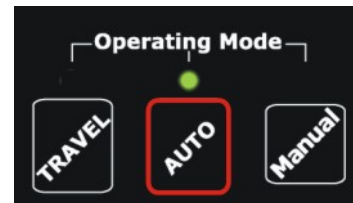

### Level then lower

In the rear and then the front, the leveling system detects the lowest side and lowers the higher side to match. When the two ends are level, the system then lowers the higher end to the height of the lower end. Next, the vehicle continues to lower, and then is leveled by the system.

If hydraulic control is enabled, the vehicle is leveled with hydraulic jacks after having been lowered with the air system.

### Level at height (raise)

The leveling system detects the highest corner of the vehicle, then levels the remaining corners to it.

### Level at height (lower)

The leveling system detects the lowest corner of the vehicle, and then levels the remaining corners to it. If, after a preset amount of time, the system determines that it is unable to lower the vehicle to level, any corners that are low will then be raised so that the vehicle levels.

### Lower then level

The leveling system releases all the air out of the airbags. It then detects the highest corner of the vehicle and raises the other three to that height. Finally, it levels the vehicle.

### Raise to level

This procedure uses hydraulic jacks, and it will raise the lowest corner to level, then raise/lower the other three corners. Then it will level the vehicle.

## Using Auto Level Mode (Air)

By default, Auto mode uses air only, and this method is described below. To use Auto mode with hydraulic control, refer to page 7.

### To use Auto Level Mode (air only):

1. Ensure that:
  - a. The vehicle's engine is running and the air system is at full pressure,
  - b. The parking brake has been engaged,
  - c. The front wheels are straightened, and
  - d. The control panel is turned on. (If the **POWER** indicator is not lit, press and release **POWER**. If the **POWER** indicator is flashing, the ignition switch is off, and must be turned on.)
2. Press **AUTO** to initiate a leveling cycle. If the level controller will not go into Auto mode it is most likely because the vehicle's parking brake has not been applied (Fig 1). Apply the parking brake to have the system go into Auto mode.

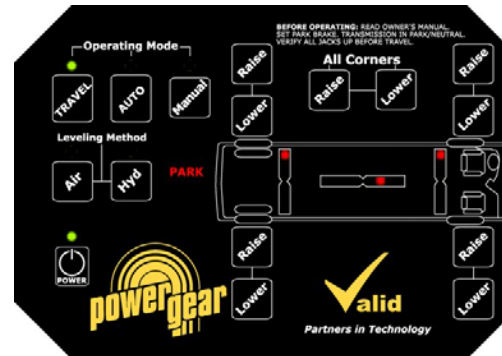


Fig 1

**Note:** The **PARK** indicator will flash if the park brake is on but the vehicle is still in gear. Once the vehicle has been put in neutral with the park brake on, the **PARK** indicator will stop flashing and remain lit.

3. If you wish to level the vehicle at its current height (e.g. if it hasn't finished raising or lowering), press and hold **AUTO** for 3 seconds. Ensure that the vehicle is at a reasonable height before doing this, or it may be unable to level successfully.

**Note:** Due to the sensitivity of the leveling sensors, any noticeable movements within the coach can cause difficulty while leveling is in process. Therefore, if you are inside the vehicle while it is leveling, please sit quietly or walk lightly.

**What happens during the leveling cycle:**

1. During the entire cycle, the **POWER** indicator lamp remains on and the **AUTO** indicator lamp flashes until a level state has been achieved. Then the indicator remains on.
2. Once the vehicle is fully raised or lowered or the raising/lowering has been interrupted by the operator, the Trueline Leveling System will begin three leveling cycles. In each cycle, the rear axle, front axle, and longitudinal axis are leveled.  
If the vehicle achieves a level state at any time during these cycles, the Trueline Leveling System will simply skip to the next cycle and continue.
3. After the three cycles are complete, the vehicle should be level and all three level displays should be indicating green (Fig 2).

**Once the vehicle has been leveled:**

1. After 15 seconds, the two level sensors go into “sleep” mode in order to minimize parasitic current draw on the vehicle’s battery system.
2. After 20 seconds, the level controller goes into “low power” mode indicated by the occasional flashing of the **AUTO** and **POWER** indicator lamps.
3. After a period of time\* in low power mode, the level controller automatically wakes the two sensor units and checks to see if re-leveling is required.  
(\*depending on the Re-level Interval setting in the initial configuration.)
  - If no leveling is required, the two sensors are allowed to go back to sleep and the level controller drops back into low power mode after 20 seconds.

**OR**

- If leveling is required, the Trueline Leveling System again goes through the 3 cycles to properly level the coach.

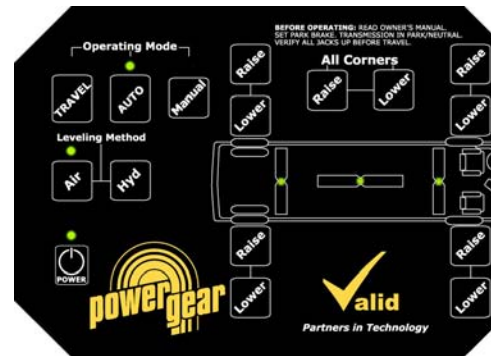


Fig 2

**Auto Mode – Notes**

- Once a leveling cycle has been completed, you can perform additional leveling cycles if the leveling controller is in Auto mode or low power mode. Simply press and release **AUTO** once.
- If the vehicle begins to move and exceeds a speed of 2 MPH, the Trueline Leveling System automatically switches from Auto mode to Manual mode and sounds a warning tone. If the vehicle continues to accelerate, the leveling system automatically switches from Manual mode to Travel mode at speeds above the designated speed limit set in the initial configuration.

### Changing the Height of a Leveled Vehicle:

A leveled vehicle can be raised or lowered to adjust the entry doorstep height.

1. To ensure an adequate amount of air, the coach's engine should be running and its air system should be at full pressure.
2. Press the **ALL CORNERS RAISE** or **ALL CORNERS LOWER** button. This causes the vehicle to move up or down while still level.

### Using Auto Level Mode (Hydraulic)

1. Ensure that:
  - a. The ignition switch is on and the vehicle's engine is running,
  - b. The front wheels are straightened,
  - c. The vehicle is in 'Neutral' or 'Park' with the parking brake engaged, and
  - d. The control panel is turned on. (If the **POWER** indicator is not lit, press and release **POWER**. If the **POWER** indicator is flashing, the ignition switch is off, and must be turned on.)

2. Press and release **HYD**.

3. Press and release **AUTO**.

If the level controller will not go into Auto mode it is most likely because the vehicle's parking brake has not been applied (see Fig 1 on page 5). Apply the parking brake to have the system go into Auto mode.

**Note:** The **PARK** indicator will flash if the park brake is on but the vehicle is still in gear. Once the vehicle has been put in neutral with the park brake on, the **PARK** indicator will stop flashing and remain lit.

### What happens during the leveling cycle:

1. During the entire cycle, the **POWER** indicator lamp remains on and the **AUTO** indicator lamp flashes until a level state has been achieved.
2. The airbags are deflated and the coach is lowered. The jacks come down on the low side of the coach, and then on the other side.
3. The lateral level is adjusted on the coach's front, and on the coach's rear. Then, the longitudinal level is adjusted. These three procedures are repeated until the coach is level.
4. Now the vehicle should be level and all three level displays should be indicating green (Fig 3). The **AUTO** indicator stops flashing and stays lit.

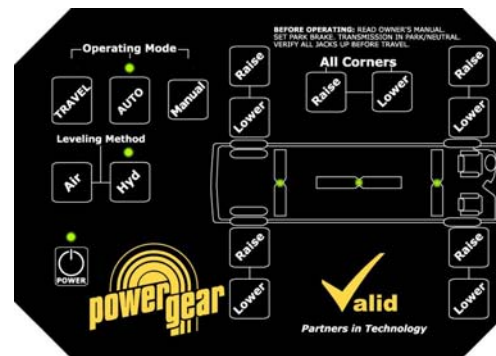


Fig 3


**Once the vehicle has been leveled:**

1. After 15 seconds, the two level sensors go into “sleep” mode in order to minimize parasitic current draw on the vehicle’s battery system.
2. After 20 seconds, the level controller goes into “low power” mode indicated by the occasional flashing of the **AUTO** and **POWER** indicator lamps.

## Manual Level Mode

Use manual leveling mode if you wish to have control over the leveling process. Manual control of the air system can be used while traveling at low speed when an uneven surface must be negotiated.

By default, Manual mode uses air only, and this method is described below. To use Manual mode with hydraulic control, refer to page 10.

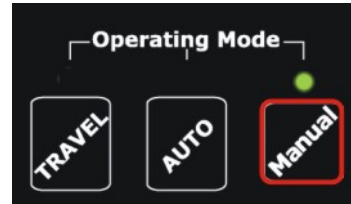

## Using Manual Level Mode (Air)

1. Ensure that the leveling system is turned on. If the **POWER** indicator is not lit, press and release **POWER**.
2. With the vehicle either parked (but still running) or traveling slower than the Travel mode speed limit, press **MANUAL**. If the vehicle is parked, make sure the front wheels are straightened.
3. Press **RAISE** or **LOWER** for each of the four corners you wish to manually adjust.  
**OR**  
 To control all 4 corners simultaneously, use the **ALL CORNERS RAISE** and **ALL CORNERS LOWER** buttons. This can be useful if you wish to raise or lower the entry step height.

### All Corners Raise

When in manual mode, you may raise your vehicle while either parked or moving slowly. To allow you greater freedom, the **ALL CORNERS RAISE** button has a ‘lock’ feature that keeps the button activated after you have pressed it.

### To lock the All Corners Raise button:

In manual mode, hold **ALL CORNERS RAISE** for 3 seconds. This ‘locks’ the button on for a period of one minute.

- During this time, the coach elevates continuously and the control panel sounds a repeated beeping tone.
- After one minute is over, the coach stops elevating.

- You may repeat this process until the coach is at the height you want.
- To stop the elevating process during the one-minute period, press and release **MANUAL**.

**Note:** Because of the risk of damage to your coach, the **ALL CORNERS LOWER** button does not have this lock feature.

### Manual Mode – Notes

- If the Trueline Leveling System detects an excess amount of twist in the vehicle frame during the manual adjustments, any further actions that may cause more twist are not permitted by the leveling controller.

*For example: if the vehicle is in a state as indicated by Fig. 4, the leveling controller will not allow the right front to be raised, the left front to be lowered, the right rear to be lowered, or the left rear to be raised.*

- If the vehicle begins to move, the Trueline Leveling System automatically switches from Manual mode to Travel mode at speeds higher than the designated speed limit set in the initial configuration.

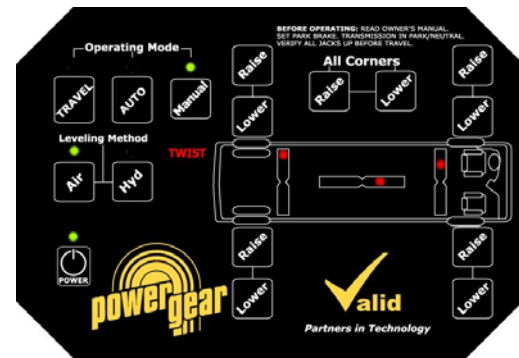


Fig 4

**Note:** If you are in Manual mode and wish to go to Auto mode with hydraulic control, you must first put the leveling system into Travel mode. This stores the hydraulic jacks, which is necessary before they can be used.

## Using Manual Level Mode (Hydraulic)

1. Ensure that:
  - a. The vehicle's engine is running,
  - b. The vehicle is in 'Park' or 'Neutral' and the parking brake is engaged,

**Note:** The **PARK** indicator will flash if the park brake is on but the vehicle is still in gear. Once the vehicle has been put in neutral with the park brake on, the **PARK** indicator will stop flashing and remain lit.

- c. The front wheels are straightened, and
  - d. The control panel is turned on.  
(If the **POWER** indicator is not lit, press and release **POWER**. If the **POWER** indicator is flashing, the ignition switch is off, and must be turned on.)
2. Press and release **HYD**.
3. Press and release **MANUAL** (if not already selected).

Once you are in manual leveling mode with hydraulic control, you may use the individual **RAISE** or **LOWER** buttons to raise and lower each corner of coach. You may also use the **ALL CORNERS RAISE** and **ALL CORNERS LOWER** buttons.

### Air Dump


The **AIR DUMP** button allows you to dump air in all the airbags.

1. Press and hold **AIR DUMP** to lower vehicle by emptying the airbags. The **AIR DUMP** indicator will light up.
2. Release **AIR DUMP** any time you wish to stop the lowering process.

## Travel Mode

Travel mode is the operational mode used when the vehicle is in motion. This mode gives control of the vehicle's air suspension system to the ride height valves located on the frame of the vehicle.

The hydraulic controls do not work in Travel mode; instead, the hydraulic jacks are stored away when the vehicle is in motion.

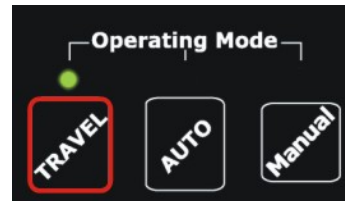

### To use Travel Mode:

Press **TRAVEL**.

- If the Trueline Leveling System is turned off or in any mode other than Travel, it will automatically turn on and switch to Travel mode if the vehicle speed exceeds its designated Travel mode speed limit.

- In Travel mode, the three level displays are scaled to indicate +/-0.75g of acceleration at full scale.

**Warning:** The time required to achieve travel height varies with coach design. It is the operator's responsibility to ensure that the coach is at an adequate height before driving. If the coach is too low, severe damage can result to the fenders when the wheels are turned.

---



---

# This manual is provided courtesy of **RV Tech Cheat Sheet**



**Professional resources for the whole RV industry — free.**

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.

---



---

**[rvtechcheatsheet.com/manuals](https://rvtechcheatsheet.com/manuals)**

**Find thousands more RV manuals, wiring diagrams and parts lists**

**RV techs:** share fixes, ask questions and learn from each other.

**Join our free Facebook group →**

---



---

Follow proper safety practices. If in doubt, consult a professional RV technician.