

EN

This quick start guide will help you install and use the device properly. For further support and to download the complete user manual please visit www.furrion.com/support.

WHAT'S IN THE BOX


- DV3350 Unit
- Remote Control
- Harness
- Audio RCA Adapter Cable
- Hang Tag
- Warning Card
- Quick Start Guide
- Warranty Card

NOTE: Product design and packaging may change without notice.


SETUP

STEP 1: CONNECT YOUR DEVICE

Please connect according to following diagram for proper functionality.

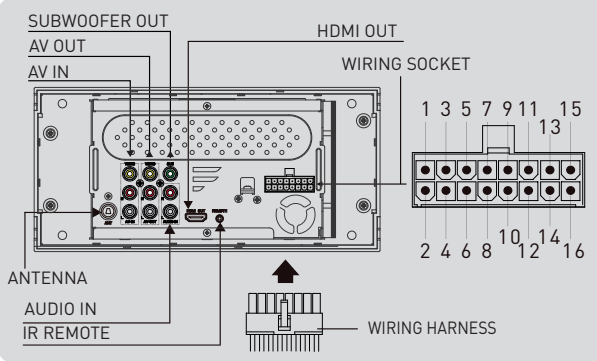


PIN NO.	COLOR	FUNCTION
1	/	/
2	/	/
3	/	/
4	/	/
5	GRAY	ZONE1 RIGHT SPEAKER (+)
6	GRAY/BLACK	ZONE1 RIGHT SPEAKER (-)
7	WHITE	ZONE1 LEFT SPEAKER (+)
8	WHITE/BLACK	ZONE1 LEFT SPEAKER (-)
9	GREEN/BLACK	ZONE2 LEFT SPEAKER (-)
10	GREEN	ZONE2 LEFT SPEAKER (+)
11	PURPLE/BLACK	ZONE2 RIGHT SPEAKER (-)
12	PURPLE	ZONE2 RIGHT SPEAKER (+)
13	BLUE	AUTO ANTENNA
14	/	/
15	RED	POWER +12VDC
16	BLACK	GROUND

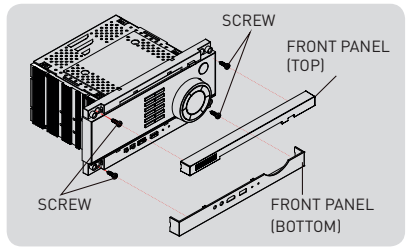

STEP 2: INSTALL YOUR DEVICE

IMPORTANT: Before final installation, check by powering the stereo on to make sure unit operates properly.

- Remove top and bottom front panels.
- Slide the device into a prepared opening and fix with 4 #8 pan head self-tapping screws.
- Reattach the top and bottom front panels and push slightly until it locks into place.

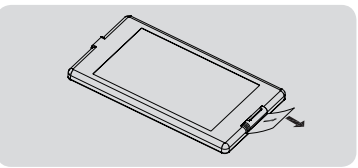

STEP 3: Prepare the Remote Control

Before use, remove the insulating sheet from the remote control as indicated.

BASIC OPERATION

TURN ON/OFF OR SWITCH TO STANDBY MODE

Press on the front panel to turn on the unit or enter standby mode. Press and hold to turn off the unit.

MUTE

Press on the front panel to mute the sound. The icon flashes on the LCD. Press again to restore the sound.

SELECT A SOURCE

Press **DISC/USB, AM/FM, AUX,** or **BT** on the front panel to select Disc (with a disc loaded), USB (with a USB storage device connected), Tuner, AUX or Bluetooth mode.

ADJUST VOLUME

Rotate the **VOLUME -/+** knob on the front panel to adjust the volume.

SELECT A FEATURE/SETTING

Press **SEL^{EQ}** on the front panel once or more to select VOL, BAS (without EQ preset), TRE (without EQ preset), BAL, LOUD ON/OFF, LOC ON/OFF, ST ON/OFF, BEEP ON/OFF, SUB ON/OFF, or CLOCK. Then rotate the **VOLUME -/+** knob on the front panel to select a feature / setting.

SELECT A PRESET EQ

Press and hold **SEL^{EQ}** on the front panel once or more to select CINEMA, ROCK CLASSIC, FLAT, or EQ OFF.

SET CLOCK

Press **CLOCK** on the remote control to display the clock on the LCD. Press **SEL^{EQ}** on the front panel once or more to enter clock setup mode. Press **◀/▶** on the front panel to switch between hour and minute setting. Rotate the **VOLUME -/+** knob on the front panel to adjust the hour/minute. The time on the clock is set automatically after a few seconds of inactivity.

SET ALARM

Press and hold on the front panel once or more to enter ALARM CLOCK and ALARM SOURCE settings. Repeat the operations in clock setting to set the alarm. Two alarm sources are available for selection: TUNER and USB.

ALARM ON/ OFF

Press on the front panel to turn on or off the set alarm. When the alarm is set, the icon will display on the LCD.

ADJUST BRIGHTNESS

Press on the front panel once or more to select a brightness level for LCD screen: **LOW, MIDDLE** or **HIGH**.

TURN ON / OFF LOUDNESS EFFECT

Press **SEL^{EQ}** on the front panel once or more to select LOUD ON/LOUD OFF mode.

SELECT SPEAKERS

Press and hold **ZONE 1 / ZONE 2** on the front panel to select speaker output. The corresponding zone number will be displayed on the LCD once selected.

RESET

Press **RESET** on the front panel with a pointed object to reset the unit to factory default settings.

FR

Ce guide de démarrage rapide vous aidera à installer et à utiliser l'appareil correctement. Pour obtenir de l'assistance et pour télécharger le manuel de l'utilisateur complet, veuillez visiter le site www.furrion.com/support.

CE QU'IL Y A DANS LA BOÎTE


- Unité DV3350
- Télécommande
- Harnais
- Câble adaptateur audio RCA
- Étiquette volante
- Carte d'avertissement
- Guide de démarrage rapide
- Carte de garantie

REMARQUE : La conception et l'emballage peuvent à l'occasion changer sans préavis.


CONFIGURATION

ÉTAPE 1 : Branchez votre appareil

Suivez les schémas de câblage ci-dessous pour connecter correctement tous les fils et câbles.

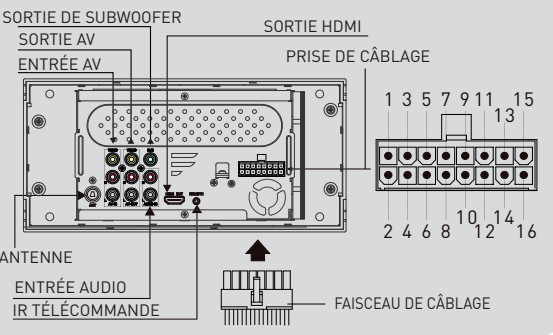


Broche No.	Couleur	Fonction
1	/	/
2	/	/
3	/	/
4	/	/
5	GRIS	ZONE 1 DROIT HAUT-PARLEUR (+)
6	GRIS/NOIR	ZONE 1 DROIT HAUT-PARLEUR (-)
7	BLANC	ZONE 1 GAUCHE HAUT-PARLEUR (+)
8	BLANC/NOIR	ZONE 1 GAUCHE HAUT-PARLEUR (-)
9	VERT/NOIR	ZONE 2 GAUCHE HAUT-PARLEUR (-)
10	VERT	ZONE 2 GAUCHE HAUT-PARLEUR (+)
11	VIOLET/NOIR	ZONE 2 DROIT HAUT-PARLEUR (-)
12	VIOLET	ZONE 2 DROIT HAUT-PARLEUR (+)
13	BLEU	ANTENNE D'AUTO
14	/	/
15	ROUGE	ALIMENTATION+12 VCC
16	NOIR	MASSE

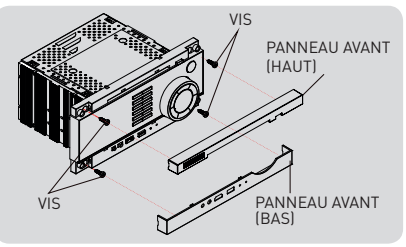

ÉTAPE 2: Installez votre appareil

IMPORTANT : Avant l'installation finale, confirmez le bon fonctionnement du système audio en le mettant sous tension.

- Retirez les panneaux avant du haut et du bas.
- Glissez l'appareil dans l'ouverture préparée et fixez-le à l'aide de quatre vis autotaraudeuses à tête cylindrique bombée n° 8.
- Fixez de nouveau les panneaux avant du haut et du bas, puis poussez légèrement pour les bloquer en place.

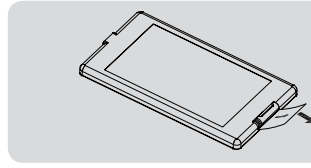

ÉTAPE 3 : Préparer la télécommande

Pour la première utilisation, retirez la feuille isolante de la télécommande, comme indiqué.

OPÉRATION DE BASE

ALLUMER/ÉTEINDRE OU PASSER EN MODE VEILLE

Appuyer sur sur le panneau avant pour mettre l'appareil en marche ou passer en mode veille. Appuyer et maintenir enfoncé pour éteindre l'appareil.

SOURDINE

Appuyer sur **MUTE** sur le panneau avant pour couper le son. L'icône clignote sur l'écran ACL. Appuyer sur **MUTE** de nouveau pour rétablir le son.

SÉLECTIONNER UNE SOURCE

Appuyez **DISC/USB, AM/FM, AUX,** ou **BT** sur le panneau avant pour sélectionner DISC (avec un disque inséré), USB (avec un périphérique de stockage USB inséré), Tuner, AUX ou Bluetooth.

RÉGLER LE VOLUME

Tournez le bouton **VOLUME -/+** sur le panneau avant pour régler le volume.

SÉLECTIONNER UNE FONCTION / UN PARAMÈTRE

Appuyez sur **SEL^{EQ}** sur le panneau avant une ou plusieurs fois pour sélectionner VOL,BAS (sans EQ pré-réglé), TRE (sans EQ pré-réglé), BAL, LOUD ON/OFF, LOC ON/OFF, ST ON/OFF, BEEP ON/OFF, SUB ON/OFF, ou CLOCK.

Tournez le bouton **VOLUME -/+** sur le panneau avant pour sélectionner une fonction / un paramètre.

SÉLECTIONNEZ UN ÉGALISEUR PRÉRÉGLÉ (PRESET EQ)

Maintenez la touche **SEL^{EQ}** enfoncée sur le panneau avant une ou plusieurs fois pour sélectionner CINEMA, ROCK CLASSIC, FLAT, ou EQ OFF.



This manual is provided courtesy of RV Tech Cheat Sheet



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.