

Slow-Roll RV Replacement Shower Door Installation Instructions

Part No. 015-3301 - 36" x 64" Shower Door

Part No. 015-3302 - 48" x 64" Shower Door


1. Peel/stick shower screen cartridge to shower wall jamb. Secure with **2 - #8 x 1-1/4"** screws through end cap screw slots.
2. Measure bottom of opening. Cut bottom track 2-1/2" shorter than opening measurement. Insert track into shower end cap.
3. Insert bottom track into slide rail end cap. Peel and stick side rail to wall jamb. (**NOTE:** swing peeled side rail onto wall jamb).
4. Slide round leadrail carrier into back side of top track. Insert top track into shower door upper end cap.
5. Press top track into side rail end cap. Secure top track and side rail with **1 - #6 x 1/2"** screw.
6. Silicone seal inside and outside of left and right side wall jamb and bottom threshold.



Step 1




Step 2

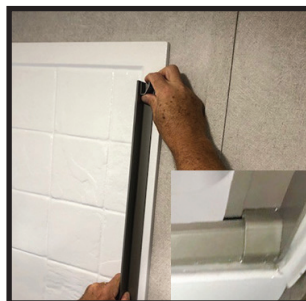


Step 3



Step 4

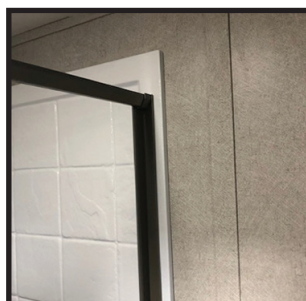

Step 5

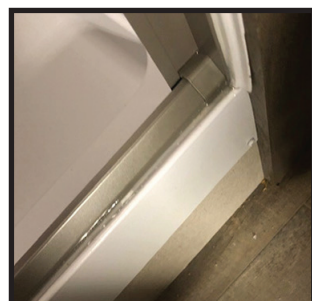

Step 6



200 Jay Street, Coldwater, MI 49036
517-278-8521 • 800-417-2477 • Fax: 517-278-2457
www.approducts.net





This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.