


Assembling a Norco Accu-slide Cast Corner



Step One: Layout the system into the rough square shape.

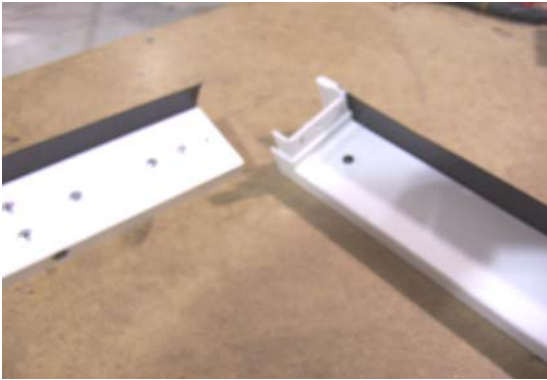

Step Two: Insert the cast corner piece into the open jamb.



Step Three: Make sure the corner is fully inserted and the wipe is not in the way.



Step Four: Place a screw into the pre-punched hole in the jamb.



Step Five: Treat the area of wipe with alcohol and primer and remove the tape backer.



Step Six: Press down firmly to securely seal the tape to the cast corner.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.