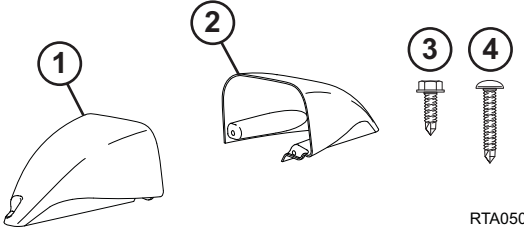



APEX BULLET ENDCAPS

The Apex Bullet Endcaps are designed to provide an aerodynamic contour to the ends of the Apex box awning.

COMPONENT CHECK LIST

				COMPONENT	QTY
	1	Endcap, LH			
	2	Endcap, RH			
	3	Screw, HWH, Self Drilling	#10 x 5/8	4	
	4	Screw, PPH, Self Drilling	#10 x 1 1/4	2	

1. Position the endcap on the end of the awning. Drill two (2) 9/64" pilot holes in the end plate to match the mounting holes in the endcap.
2. Attach endcap using two (2) each #10 x 5/8 hex washer head self-drilling screws.
3. Attach the endcap to the coach roof using one (1) #10 x 1 1/4 self-drilling screw.

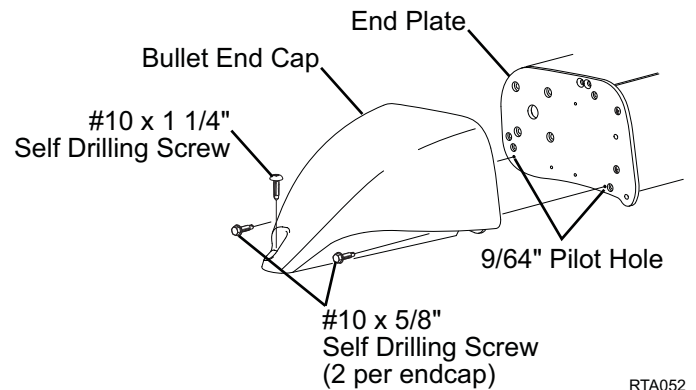



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.