



FREESTYLE RM ADAPTOR BRACKETS


Kit No: BS0015

Kits


FORD TRANSIT FULL LENGTH BRACKET KIT

The BS0015 mounting bracket is used for the Ford Transit. The bracket is available in three convenient lengths: -118 for 3m awnings, -138 for 3.5m awnings and -157 for 4m awnings.

PACKAGE CONTENTS:

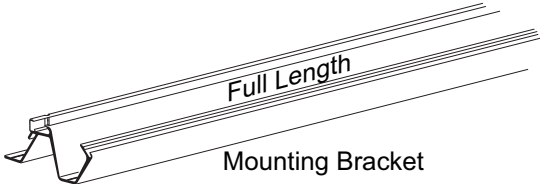				
	Mounting Pad	M8 x 25 Socket Head Screw	M8 Lock Washer	M8 Flat Washer
	-118 → (x4)	(x4)	(x4)	(x4)
	>118 → (x5)	(x5)	(x5)	(x5)
				
	M6 x 16 Screw	M6 Washer	M6 Lock Washer	M6 Square Nut
	-118 → (x15)	(x12)	(x12)	(x3)
	>118 → (x18)	(x15)	(x15)	(x3)

BS0015b

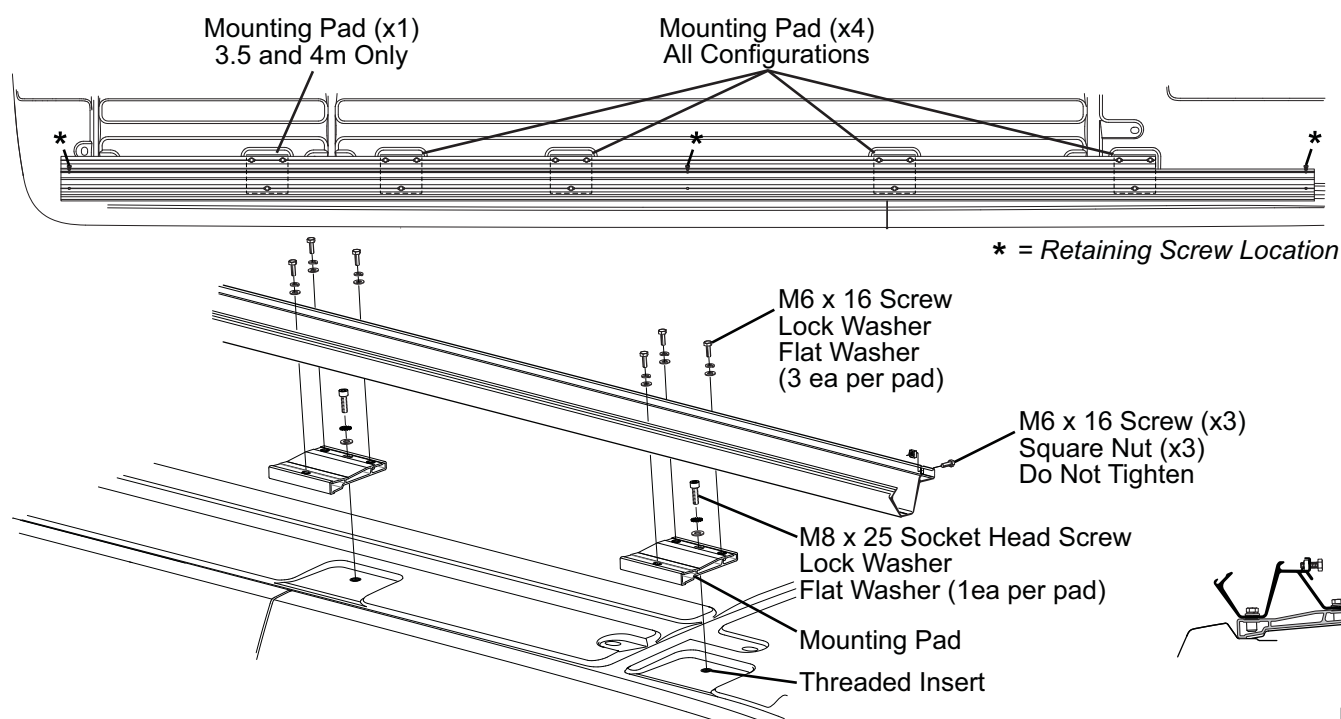

BS0015c

1. Locate the threaded inserts in the roof. Coat the holes with a quality silicone sealant.
2. Attach the mounting pads using one (1) each M8 x 25 socket head screw, star lock washer and flat washer for each pad.
3. Position the mounting bracket on the pads. The predrilled holes in the bracket will line up with the threaded holes in the pads.
4. Attach the bracket to the pads using three (3) each M6 x 16 screws, flat washers and lock washers for each pad.
5. In the rear track of the mounting bracket, start three (3) M6 x 20 screws and square nuts through the retaining screw holes (these are marked with an "*" in the illustration above). Do not tighten at this time.
6. Refer to the Freestyle RM installation manual to complete the awning installation.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.