







FREEDOM RM ADAPTOR BRACKETS

Kit No: BS0009

Kits



DODGE PROMASTER AND FIAT DUCATO

PACKAGE CONTENTS:

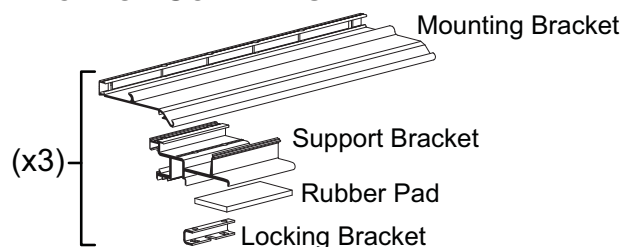




BS0009b

BRACKET INSTALLATION

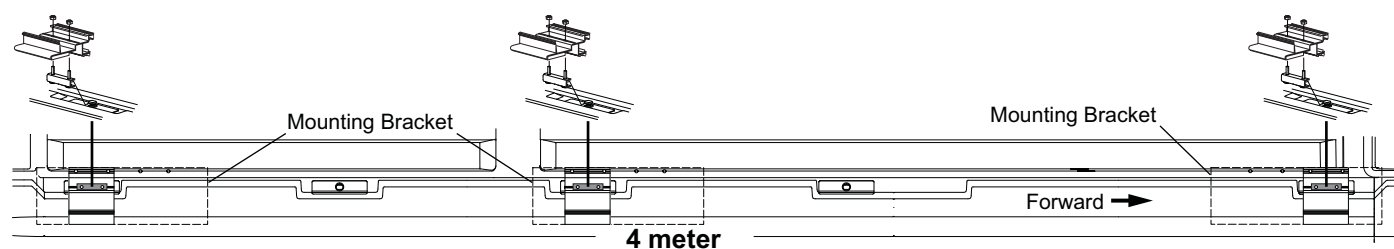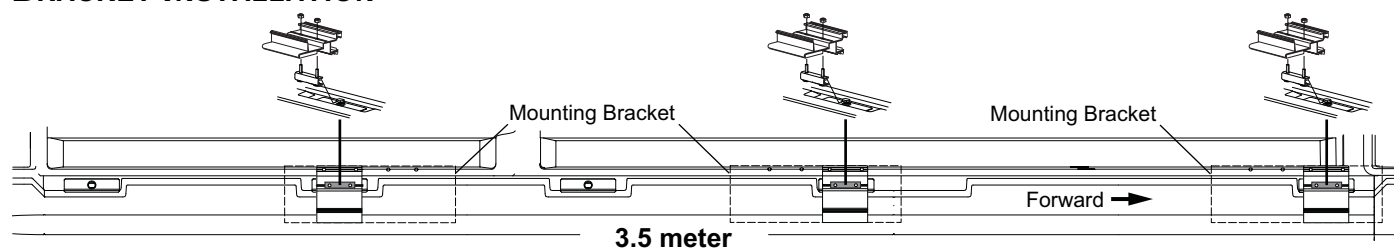

BS0009c

1. Attach the self-adhesive rubber pad to the bottom of the brackets.
2. Place two (2) M6 x 35 carriage bolts through the locking brackets.
3. Place the locking brackets onto the studs on the roof. Note the orientation of the slot toward the center of the vehicle.
4. Position the support brackets over the carriage bolts. Ensure that the support brackets are positioned on the locking brackets as shown above.
5. Loosely secure each bracket with two (2) nylock nuts.
6. Ensure that the brackets are in-line then tighten the nylock nuts.
7. Slide the mounting bracket onto the support bracket and center.
8. Attach each bracket using two (2) each M6 x 35 screws and square nuts. The nuts slide into the rear channel of the support bracket.
9. In the rear track of the mounting brackets, start two (2) M6 x 20 screws and square nuts through the retaining screw holes on the outside ends of the end brackets. Start a third set in one hole of a center bracket. Do not tighten at this time.
10. Mount the awning according to the installation manual for the awning.

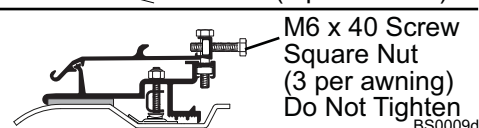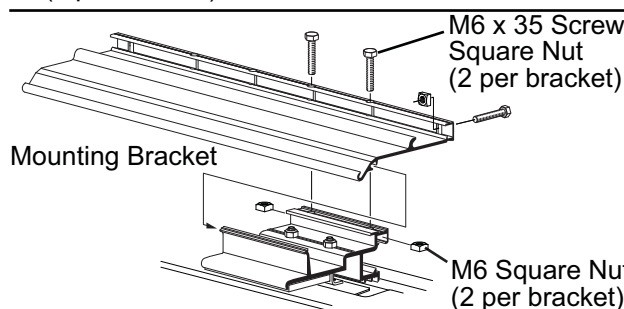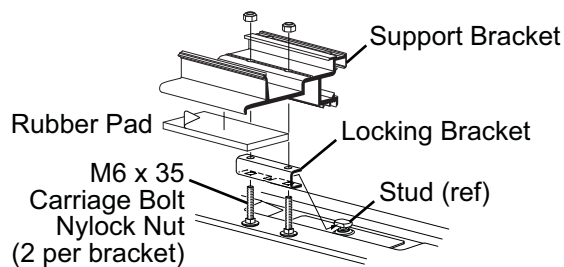

BS0009d



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.