



INSTALLATION


FREEDOM WM VAN ADAPTOR BRACKETS

KIT NO: 019861-003


FIAT DUCATO, CITROEN JUMPER, PEUGEOT BOXER

Kits


PACKAGE CONTENTS:

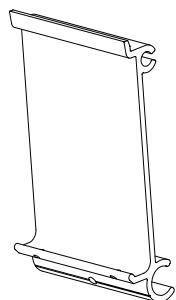

A (x 2)

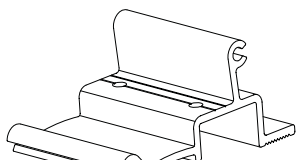


B (x 2)



C (x 2)



D (x 2)

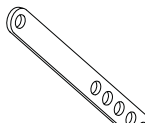

E (x 4)



F (x 4)

M6 x 90



G (x 8)

M6



J (x 4)

M6 x 30



H (x 4)

.25"x.75" OD




K (x 2)

#10 x 1/2"

BR003a

INSTALLATION

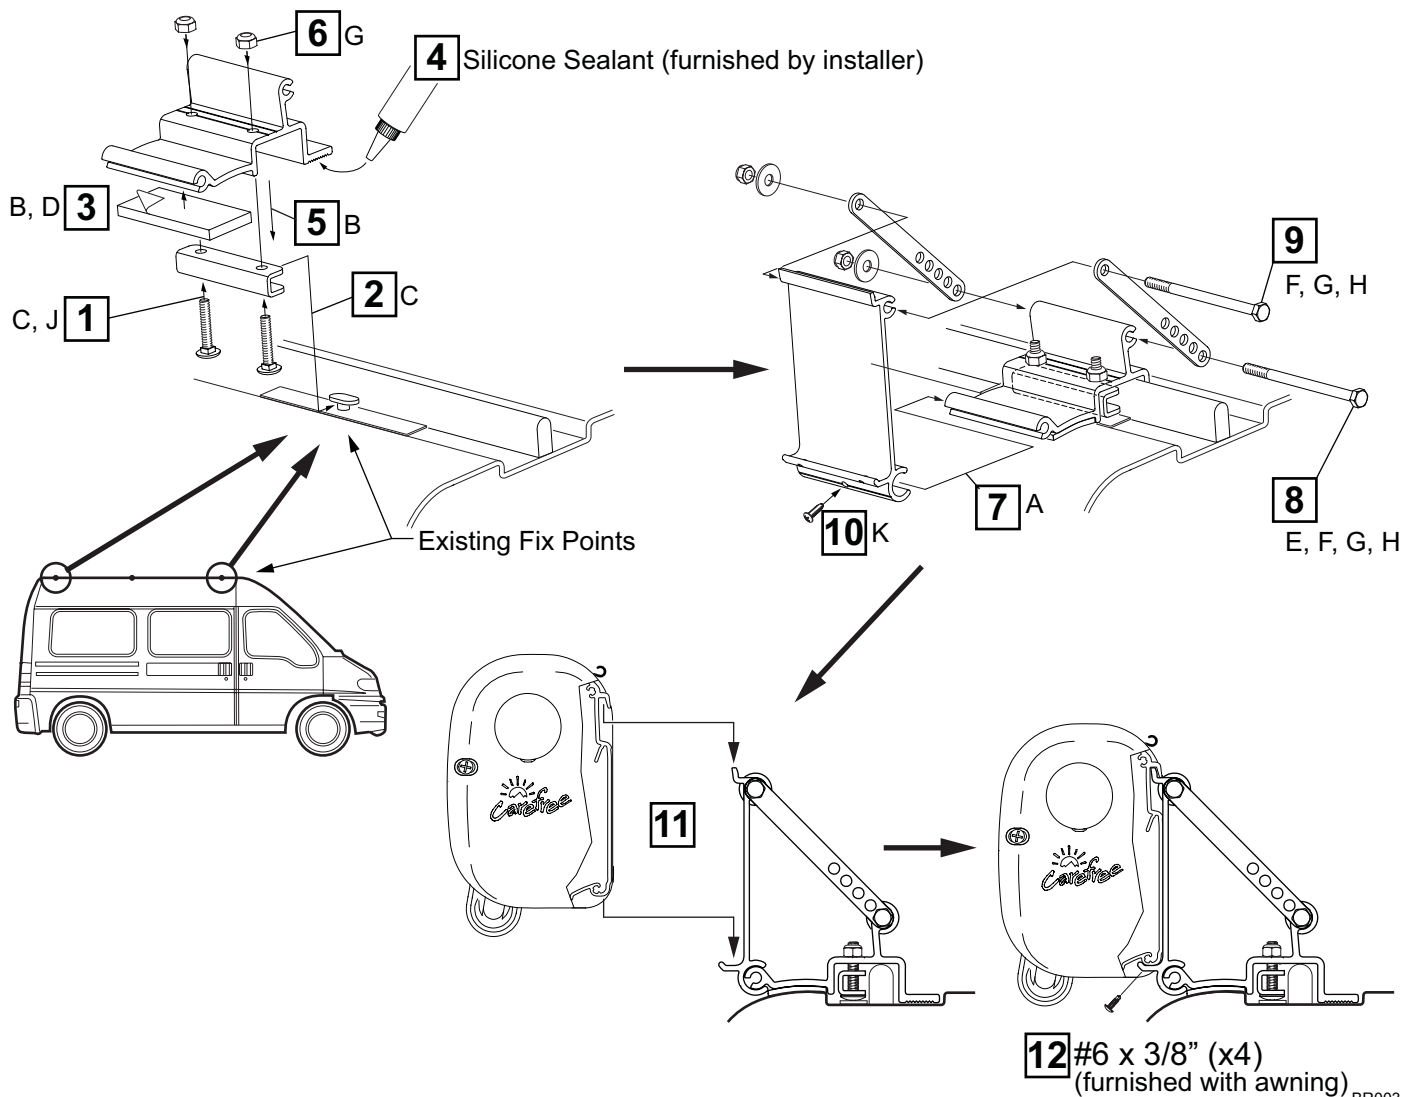



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.