



INSTALLATION


FREEDOM WM VAN ADAPTOR BRACKETS

KIT No: 019861-001



Kits

MERCEDES VITO

PACKAGE CONTENTS:

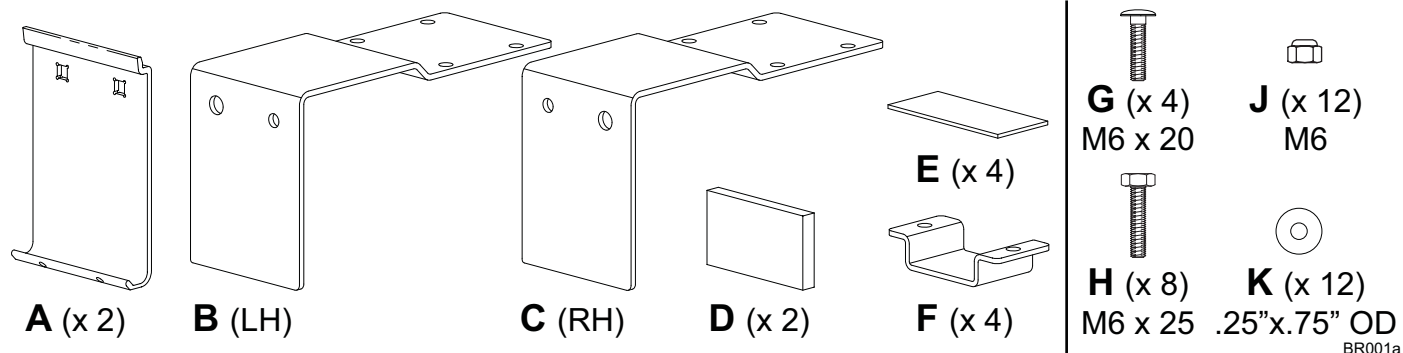


INSTALLATION

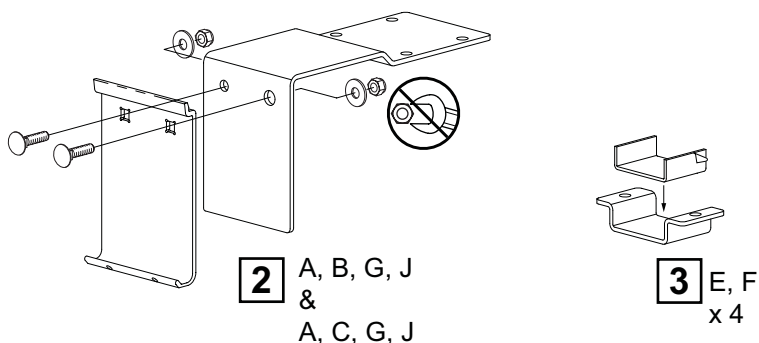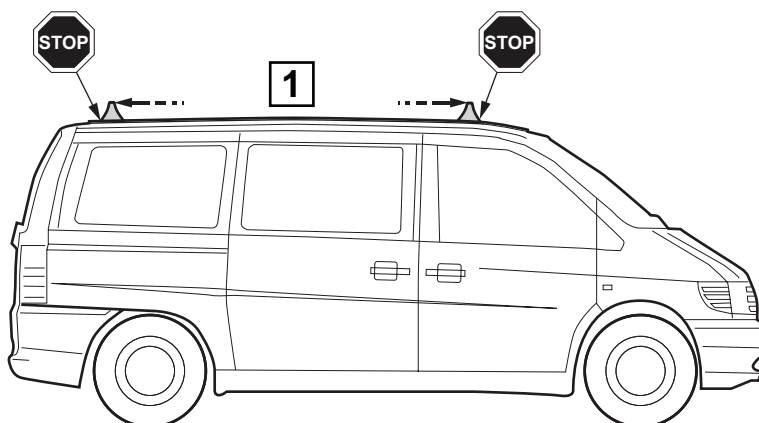

BR001

INSTALLATION (CONT)

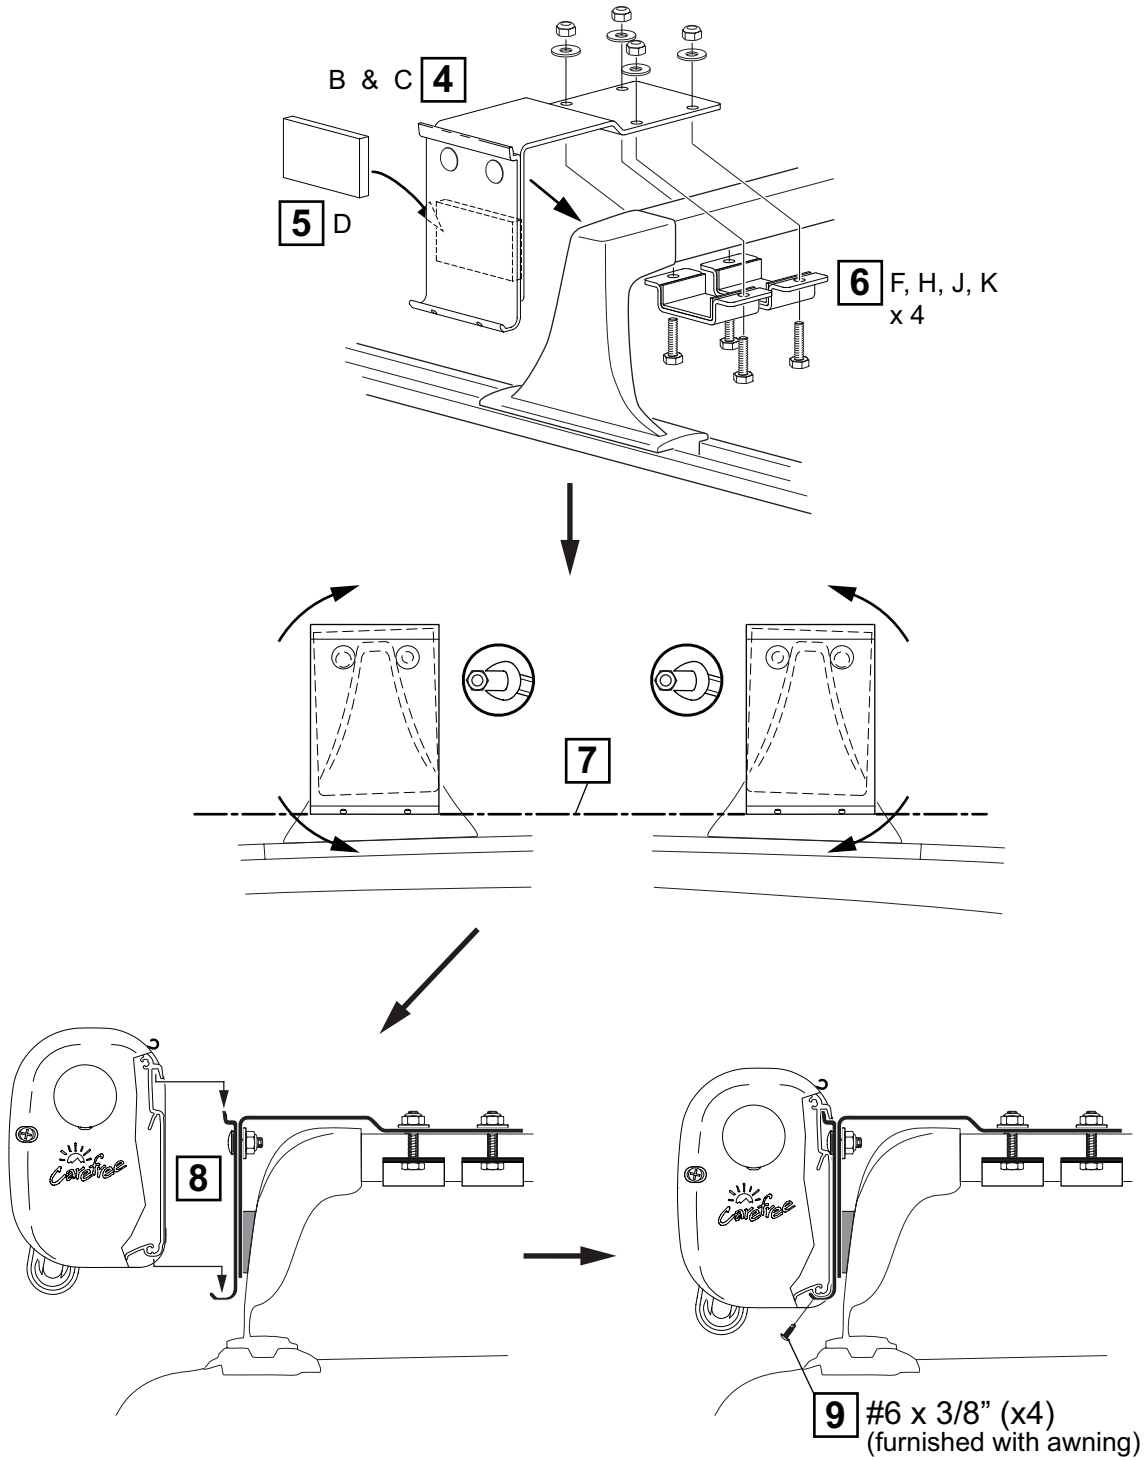

BR001b



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.