
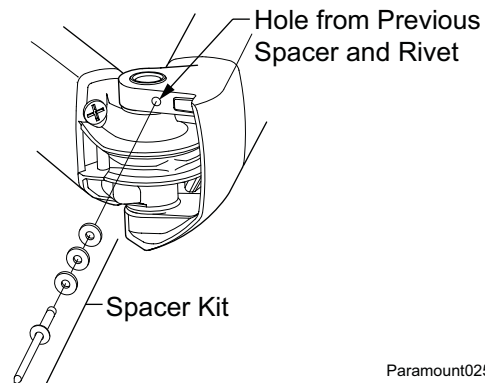


Models: Paramounts built prior to September 1, 2008.
Purpose: To prevent the awning from over extending causing the arm elbows to lock out.
Summary of Work: For each arm: Remove existing spacer from elbow, add additional spacers.

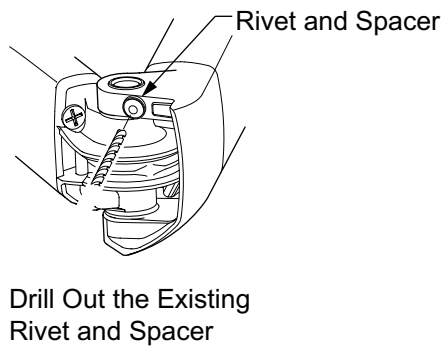

1. Open the awning 12"-14" past the slide out room position to provide access to the long arm elbows.
2. Using an 1/8" drill bit, drill out the existing rivet and spacer and discard.

⚠ CAUTION

DO NOT ATTEMPT TO PULL THE ELBOW JOINT OUT OF THE ARM EXTRUSION. THE SPRINGS ARE UNDER TENSION.

3. In the existing hole, attach the three (3) spacers to the elbow using the furnished pop rivet.
4. Repeat for both arms.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.