


1) Temporarily remove the condenser fan blade and mount the EasyStart to the base pan with self-taping sheetmetal screws (5/8" long or less).

2) Temporarily remove the top half of this evaporator shell cover and route the EasyStart harness wires up through this narrow passage.

3) Make all of the wire connections in this tight electric box area.

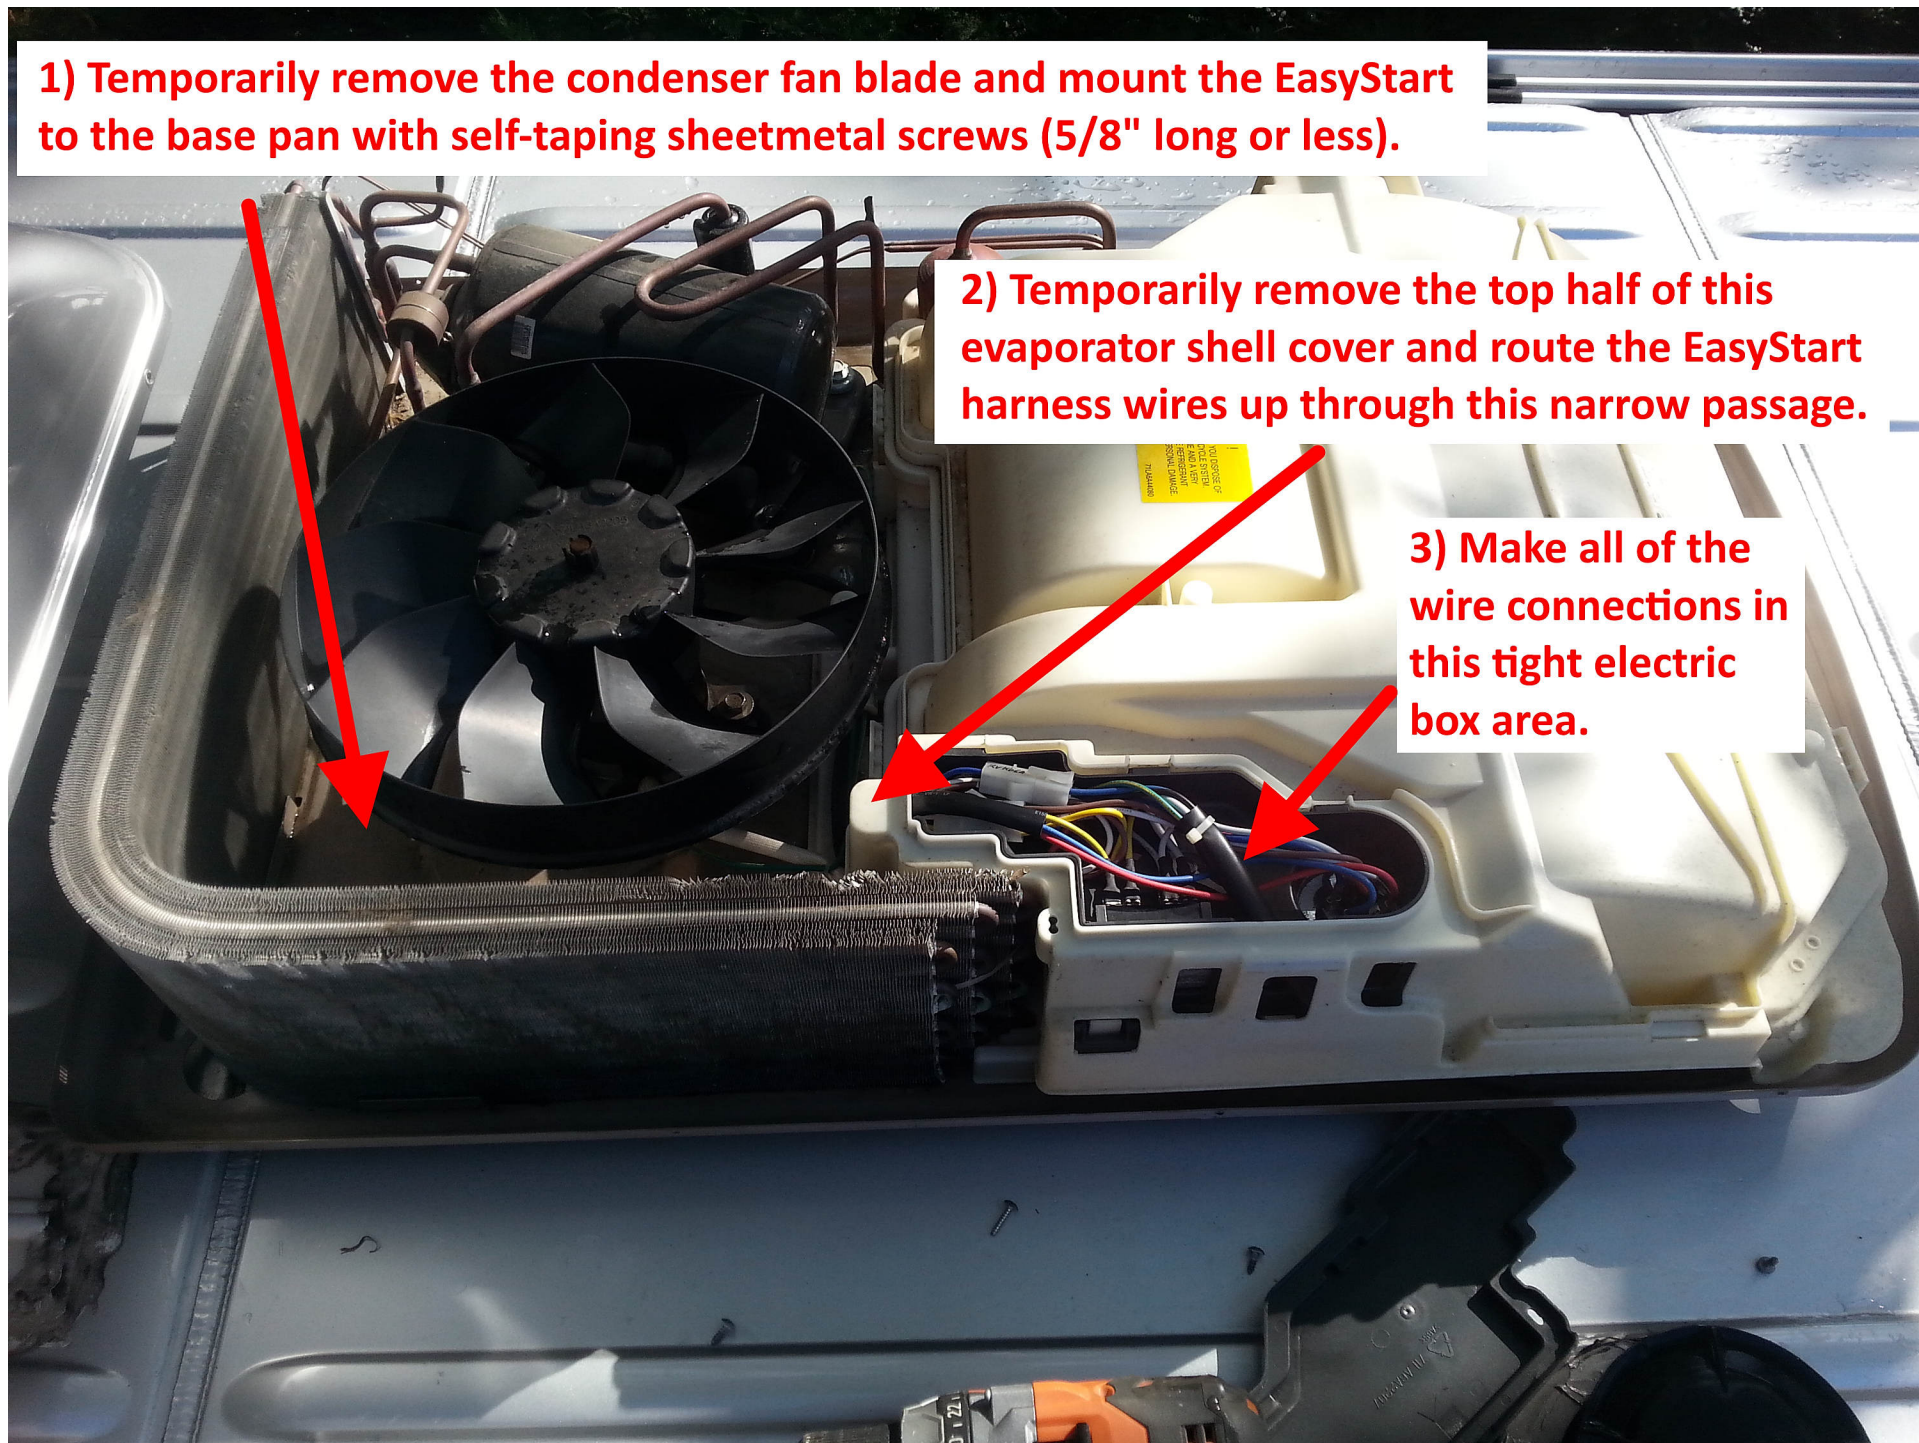



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.