



1) Remove old air conditioner shroud and set aside

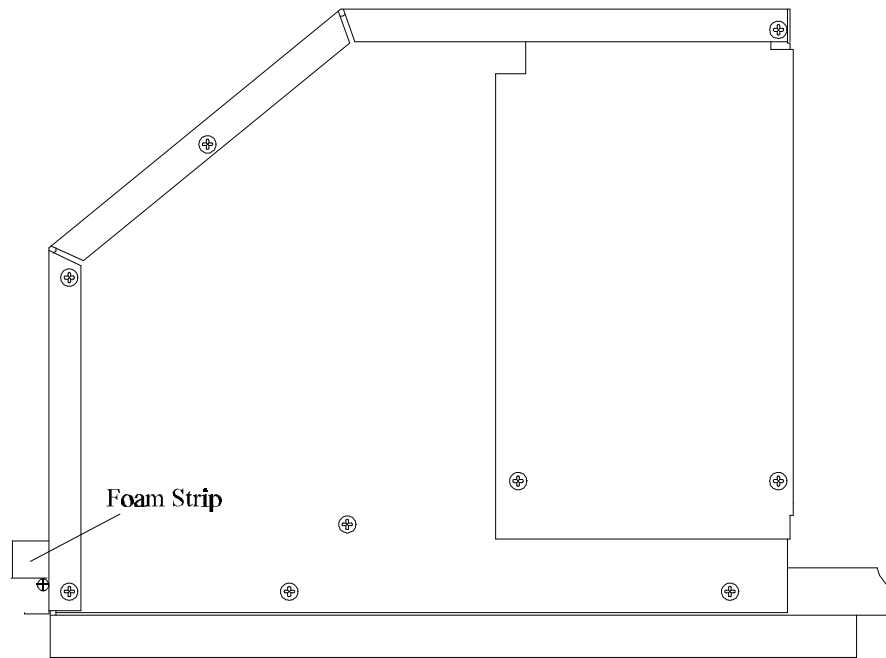

2) Install foam strip on the front of the evaporator housing just above the screw heads as shown above

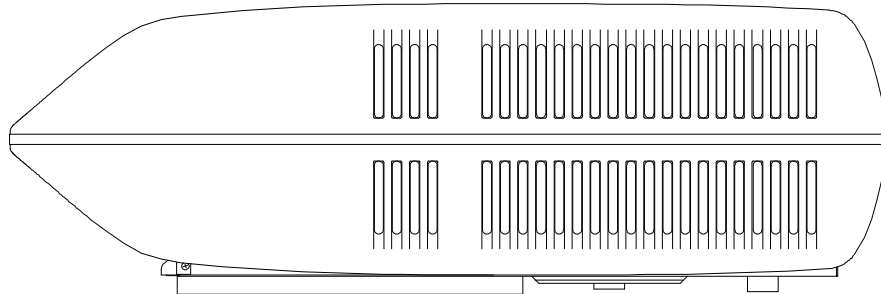

3) When installing shroud, work front lip over foam strip. Next pull shroud toward rear of unit and slide down over metal framework.

**RV Products
A Division of Airxcel, Inc.
P.O. Box 4020
Wichita, KS 67204**



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.