

TUFFMAXX

INSTALLATION INSTRUCTIONS

A/C REPLACEMENT COVER • P/N: 00-325001

1. Remove old A/C Cover and old foam at rear of unit.
2. Clean old foam tape off A/C unit and replace with furnished double sided foam tape. **See C in Figure 1.**
3. Apply the new FOAM pieces furnished in this kit. **See D in Figure 1.** Press them firmly to achieve proper adhesion.
4. Install TUFFMAXX cover by sliding the TUFFMAXX cover down and gently over the foam pieces.
5. Align the cover by pressing it forward to compress the foam.
6. Align cover with existing mounting holes or studs. **See A & B in Figure 1.**
7. Install Stainless Steel Fender Washers and nuts or existing bolts. **See A in Figure 1.**
8. Tighten hardware to secure TUFFMAXX in place.

CONGRATULATIONS ON INSTALLING YOUR NEW TUFFMAXX A/C REPLACEMENT SHROUD.

Should you require any assistance, please call customer service at 316.832.3400 or visit www.AIRXCEL.com.

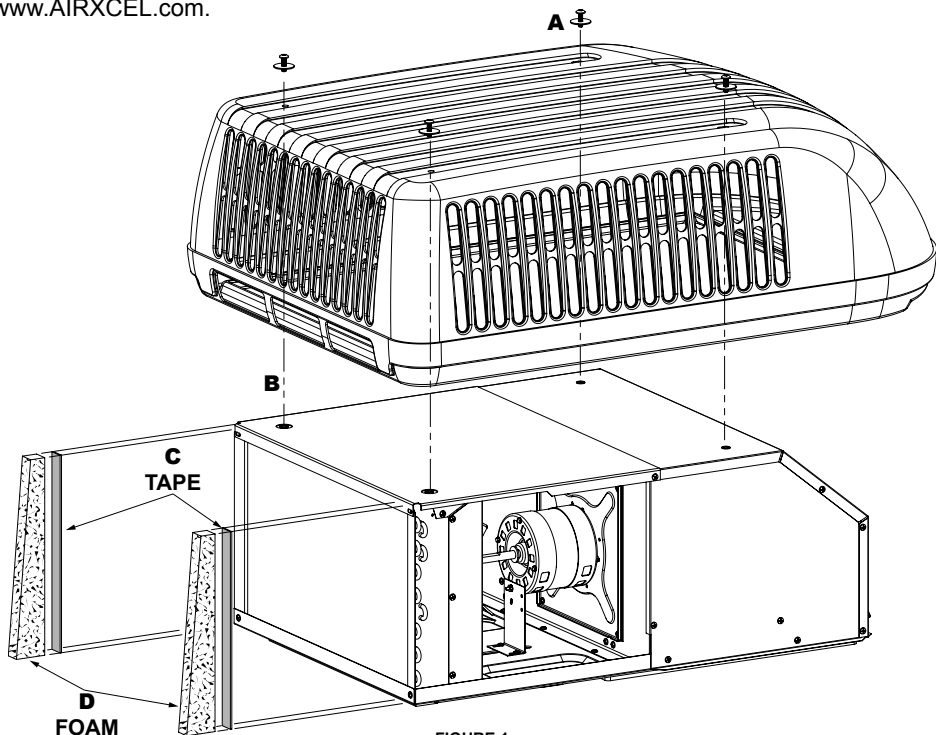


FIGURE 1

KIT INCLUDES:

- (1) TUFFMAXX COVER
- (4) FENDER WASHERS
- (2) PIECES OF FOAM TAPE
- (2) PIECES OF FOAM
- (4) 1/4 - 20 SS NUTS

PLEASE NOTE: This product has a limited **LIFETIME WARRANTY** to the original purchaser. Please retain proof of purchase should you need to call.





This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.