


ATTACHMENT TO THE COACH

Fasten the Power C-Jack assembly to the frame or frame brackets with (4) 3/8"-16 Grade 5 bolts, flat washers, and nylock or top lock nuts. The bolt must be long enough to ensure the threads and the locking portion of the nut are fully engaged. Torque bolts to 30±3 ft*lbs.

WIRING


Wire the switch, breaker and motors per one of the diagrams below. Wire per RVIA specifications with a minimum of 10GA wire.

OPTION 1

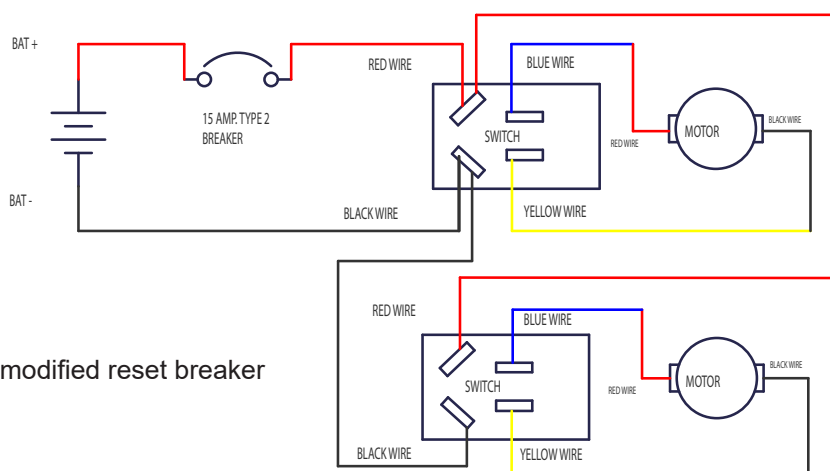


° Must be Type 2 modified reset breaker

OPTION 2

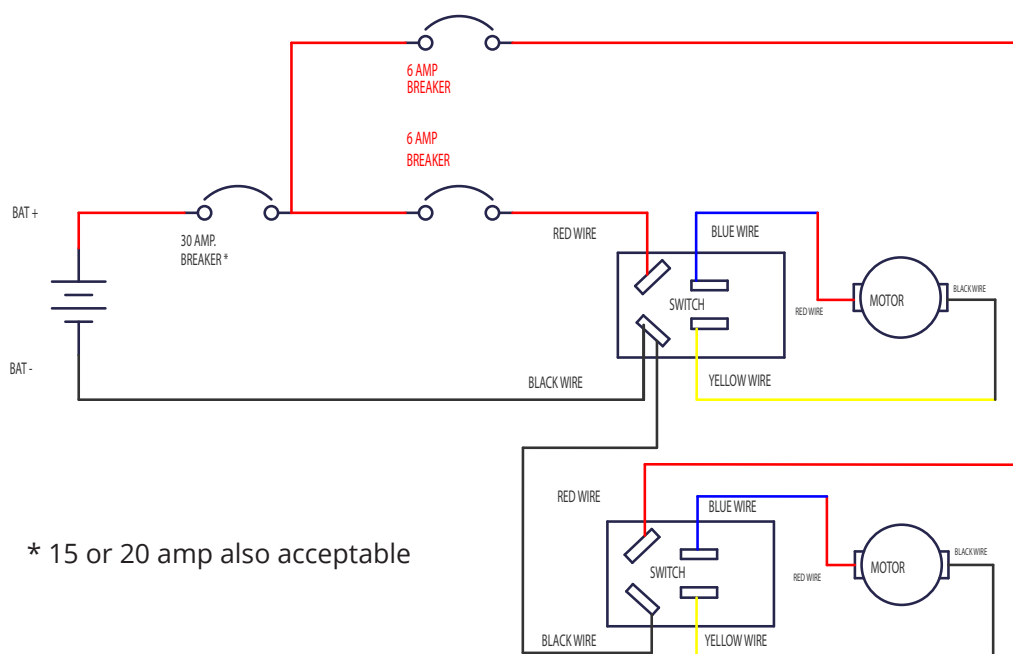


* 15 or 20 amp also acceptable

OPTION 3

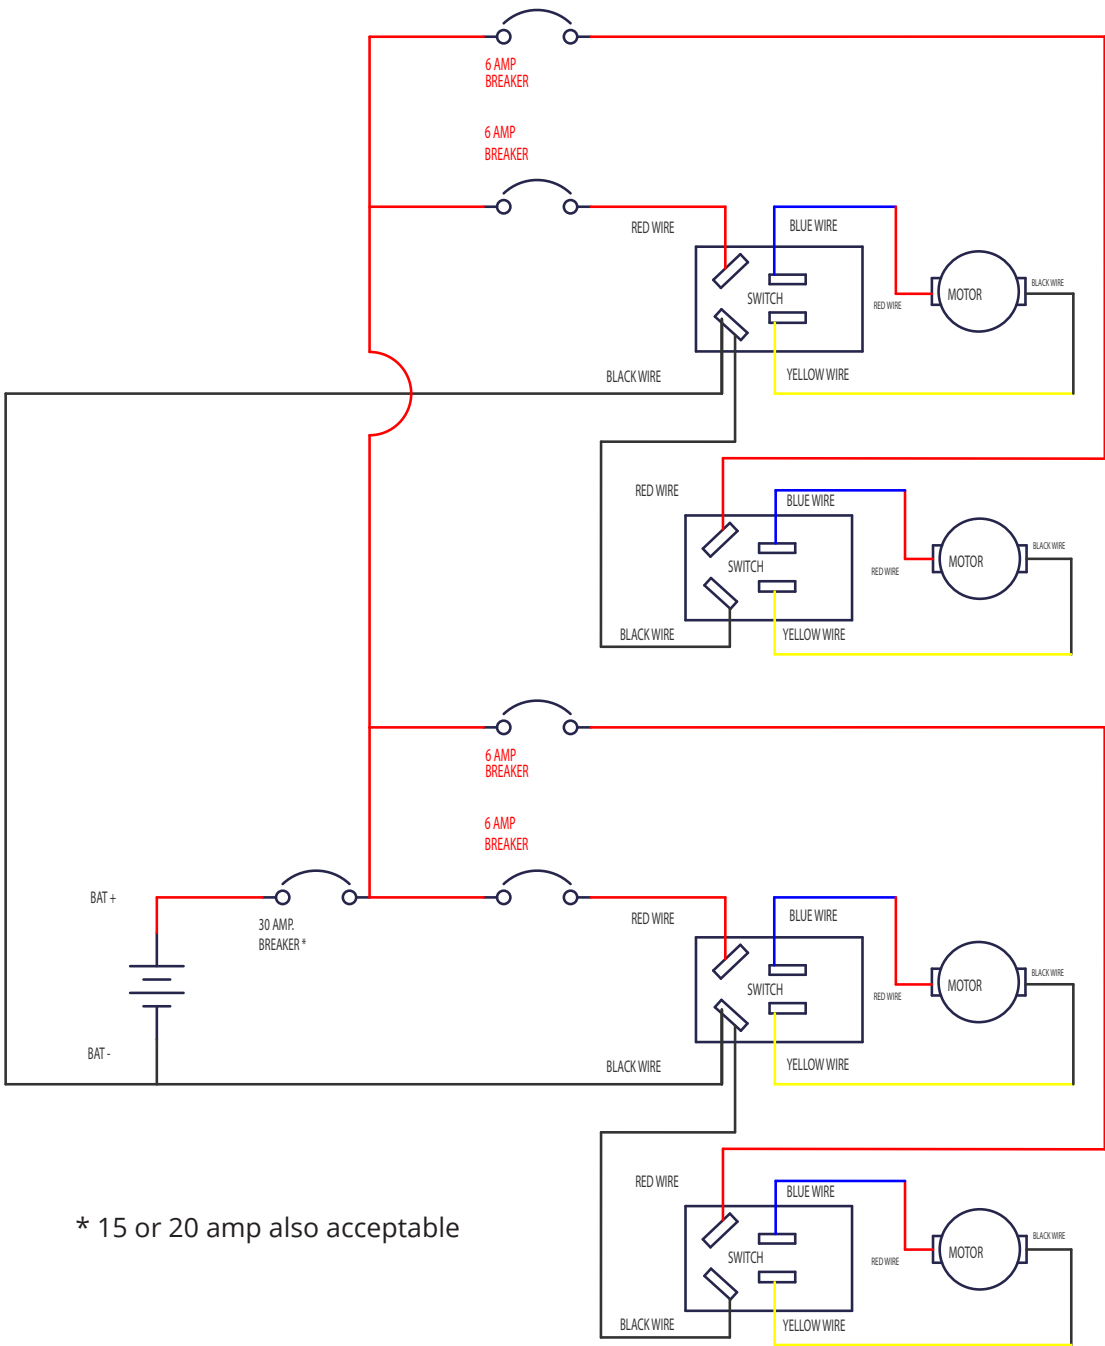

OPTION 4

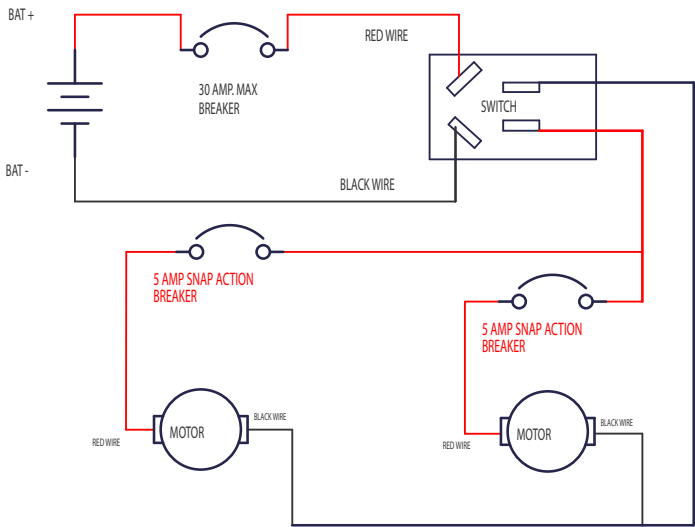

° Must be Type 2 modified reset breaker



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.