




Coleman® Roadtrip® Grill ME66 Installation Instructions

Be sure your Coleman® Roadtrip® Grill is NOT connected to a propane fuel source while installing the ME66CP.


STEP 1: Remove the regulator assembly from the grill by unscrewing the brass connection.

STEP 2: Separate the regulator assembly into its two components by removing the regulator and metal tube arm from the brass swivel connection piece. To do this secure the flat sides of the brass swivel connection component near the regulator tubing with vise-grip pliers or Channel-Lock pliers. Then unscrew the regulator/metal tubing by hand.


NOTE: Be sure to keep the spring and back flow stopper that is inside the swivel connector in place.

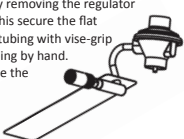

NOTE: Due to a recent change to the Coleman Roadtrip grills you may require a different fitting to adapt the ME66CP kit to the grill. Do a quick test to see if the male threads (included in the kit) fit the grills brass swivel connection that was attached to the grill. If they fit together, move to step 3-4. If they do not fit together move to steps 5-7.

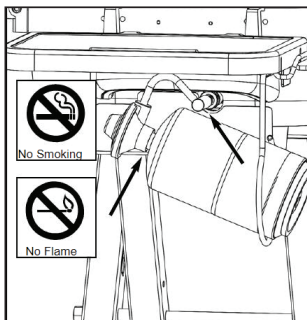


STEP 3: If they fit together well, disconnect again and apply thread sealant (supplied in the kit) to the male threads of the ME66CP brass fitting (also supplied in the kit).

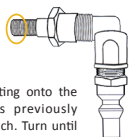

Now you can install the ME66CP fitting onto the brass swivel connection that was previously confirmed to fit. Tighten with a wrench. Turn until snug, plus 1/4 turn.

STEP 4: Install the brass swivel connection piece with ME66CP attachment into the rear of the grill. Continue to STEP 9.

STEP 5: If the connections shown in step 3 DO NOT fit together, you need to unscrew the brass ME66CP fitting into its three components and remove the two that look like this




STEP 6: Apply thread sealant to the male threads on the extra male adapter (supplied in the kit) and attach to the female adapter also supplied in the kit. Tighten with a wrench. Turn until snug, plus 1/4 turn.




STEP 7: Now take the new assembly you have just created and attach it to the other ME66CP fitting by applying thread sealant to the male threads on the swivel connection. Turn until snug, plus 1/4 turn.

STEP 8: Take the metal tube arm that was attached to the regulator and connect the new assembly to the curved end. On the other end of the tube arm, attach the brass swivel connection back into place. Then you may install the whole assembly onto the rear of the grill.

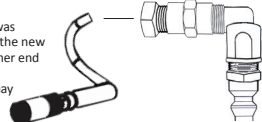

STEP 9: Attach the Female 1/4" quick-connect end of the 10' hose provided in the ME66CP kit to the male 1/4" male nipple end of the attachment at the rear of grill. Tighten with a wrench. DO NOT USE THREAD SEALANT ON THIS CONNECTION!!





STEP 10: Be sure the gas control knob of your grill is in the off position.

STEP 11: If your RV has a shut-off valve as part of the quick-connect system, move it to the off position.

STEP 13: CHECK ALL CONNECTIONS FOR LEAKS by thoroughly soaking each connection with leak detect solution (included in the kit). Be sure that the main propane supply on your RV is on at this time and if applicable, open valve at your RV's quick-connect port. If the connection leaks, the leak detector will bubble within 5-20 seconds. Turn off the propane supply immediately and tighten the leaking connections. Repeat the Safety Leak Check until you no longer see evidence of a gas leak.



STEP 12: Insert the male end of the ME66CP hose assembly into female quick-connect fitting of the RV.

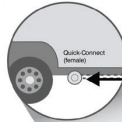

Always check your connections for leaks prior to using any propane products!!!



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.