




INSTALLATION INSTRUCTIONS

DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE'S LAMP LOAD RATING, WHICHEVER IS LOWER

56229 USCAR REPLACEMENT VEHICLE END WITH 24" WIRES

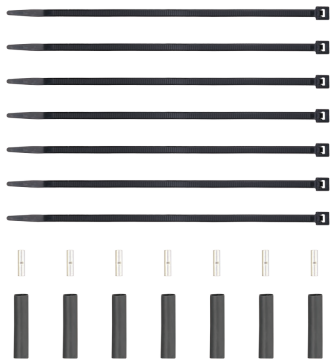

TOOLS NEEDED

Wire stripper
Crimping tool
Heat gun


WARNING

Avoid heating the gas tank, fuel lines, brake lines or other flammable materials when heating the heat shrink.

INSTALLATION


Step 1

Strip the insulation to reveal 0.25" of bare wire (A).

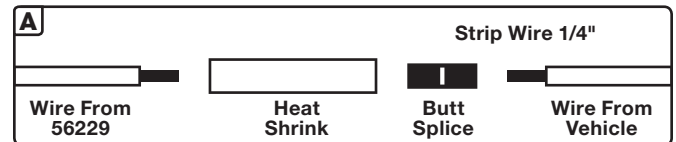


Step 2

Place the heat shrink on the wire as shown below (B). Crimp the butt splice.

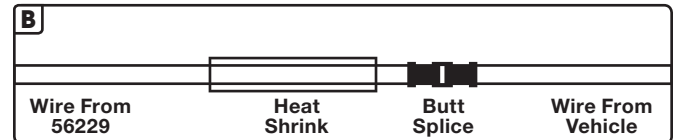


Step 3

Position the heat shrink over the splice (C) and heat using a heat gun or similar device.

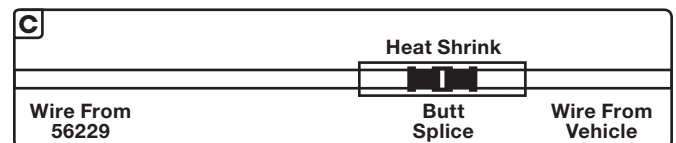

WIRING GUIDE

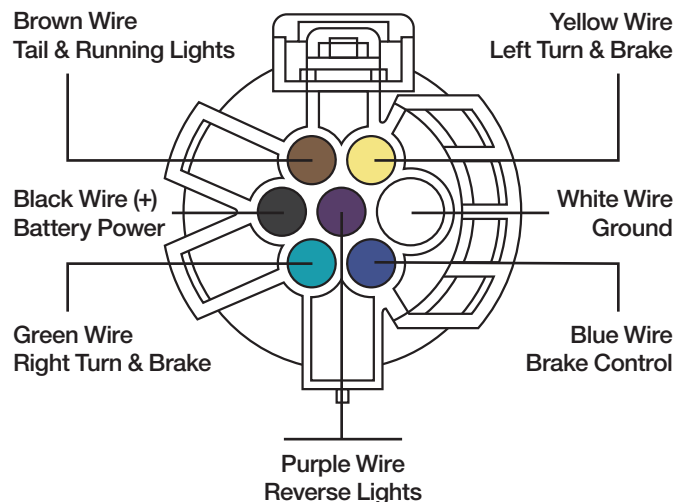



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.