



INSTALLATION INSTRUCTIONS

57007 CUSTOM VEHICLE-TO-TRAILER WIRING HARNESS EXTENSION ISOLATION KIT FOR 7-WAY



TOOLS NEEDED

Drill
3/8" drill bit

Phillips screwdriver
Center punch

WARNING

Check for miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and / or personal injury.

INSTALLATION

Step 1

Reference the installation instructions in the 56000 / 56070 5th wheel hitch / gooseneck factory wiring extension kit for installation.

Step 2

After drilling the hole for the 7-way receptacle, mark the pattern for the mounting holes on the box.

Step 3

Drill four 3/8" diameter holes.

Step 4


Insert well nuts into the holes drilled in step 3.

Step 5

Mount the 7-way in the box using the provided hardware.

Step 6

Finish the install according to the wiring kit installation instructions.

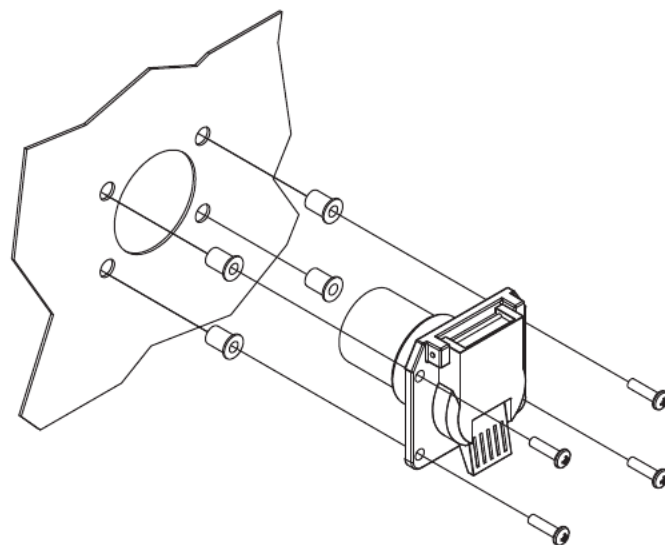



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.