

MAGNET MOUNTING FEET QUICK START GUIDE



ZAMP  SOLAR[®]
➡ DOMETIC

TOOLS NEEDED

- 10mm Socket, Nut Driver or Open Ended Wrench

CONTENTS

- A. Circular Magnet with attached threaded post. (A)
- B. Flat Washer (B)
- C. 10-32 Star Nut (C)

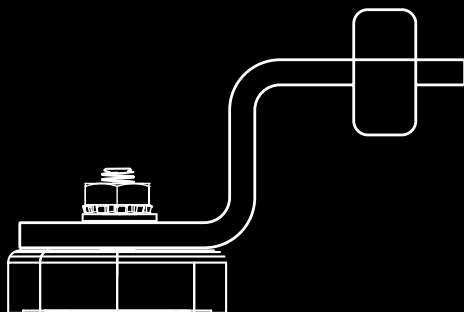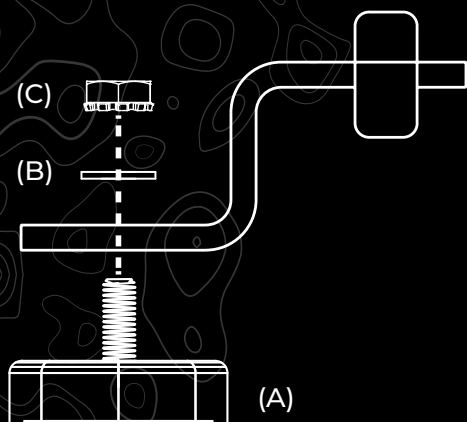

INSTALL INSTRUCTIONS

1. Place the threaded post from the Circular Magnet (A) through the holes in the Zamp Solar mounting foot.
2. Place the Flat Washer (B) over the threaded post.
3. Tighten the Star Nut (C) onto the threaded post and tighten with the 10mm socket.
4. Repeat steps 1-3 for the other 3 feet.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.