



What's in the box

Component	Description	Quantity
	Conversion Bracket	4
	Bolt ST 1/4-20, 4 3/4" (121mm) long	4
	Bolt ST 1/4-20, 2" (51mm) long	4
	Wire Adapter	1
	Installation Instructions	1



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent for an authorized Lippert representation has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.


For all concerns or questions, please contact Lippert
PhL 432-LIPPERT (432-547-7378) | Web: lippert.com | E-mail: customerservice@lci1.com

IG-FHA00009 V2.0

The Scope of this manual is to support the installation of your new Furrion rooftop unit with your existing Air Distribution Box unit and control using the Furrion universal conversion kit.

Installation

- Follow the Furrion rooftop installation instructions to prepare the RV roof opening and install the rooftop unit onto the RV roof. The recommended roof thickness is 3-6" (75-152mm).

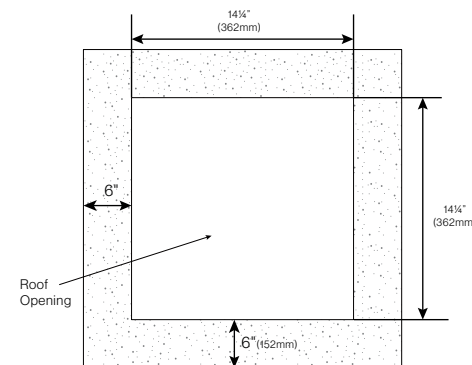

- Install the four conversion brackets onto the bottom of the rooftop unit as shown in Fig. 1 and fix with 4 short bolts provided.

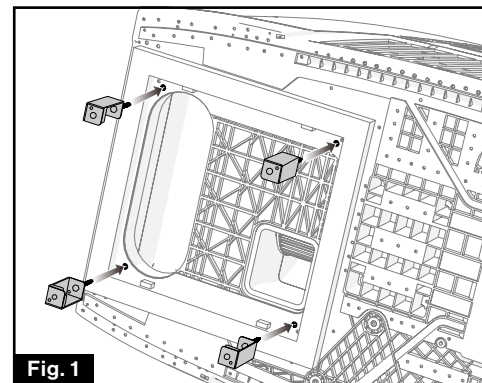


Fig. 1

- Replace existing metal bracket and duct divider, per existing installation requirements. Be sure to seal any gaps an openings with aluminum foil tape.
- In case you need to connect the Furrion rooftop to an other brand Air Distribution Box (ADB), Furrion provides a wire adapter in the conversion bracket packaging as an option. (Fig. 2) Always adjust the thermostat to the lowest temperature when the 'FAN' mode is selected.




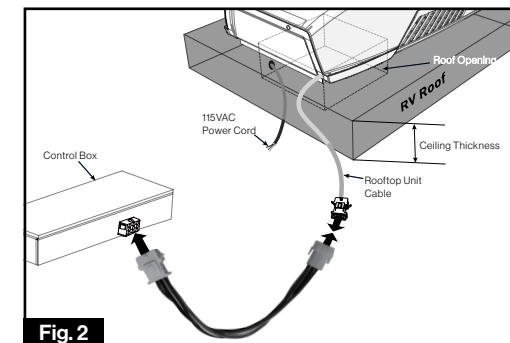


Fig. 2

- Refer to the existing trim kit installation manual to install the trim kit onto the RV roof and secure with the 4 long bolts provided.

NOTE: Furrion provides 4 3/4" (121mm) bolts as default, refer to the table below to cut or buy new bolts from you local store when different length of bolts are required (manual version only).

ST 1/4-20	Length	Roof Thickness
	2 1/4" (70mm)	3-4" (76-102mm)
	3 3/4" (95mm)	4-5" (102-127mm)
	4 3/4" (121mm)	5-6" (127-152mm)



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.