




SOFA BACK REST LOCKS

Used with swing down sofa hinge brackets
Locks back rest from swinging outward when
sofas are set down vertically along coach wall.

INSTALLATION INSTRUCTIONS



Place flat washer on bolt then put the bolt through thin oval slot in lock plate. Right side Installation shown. Bolt will come through from opposite side for left side installation.

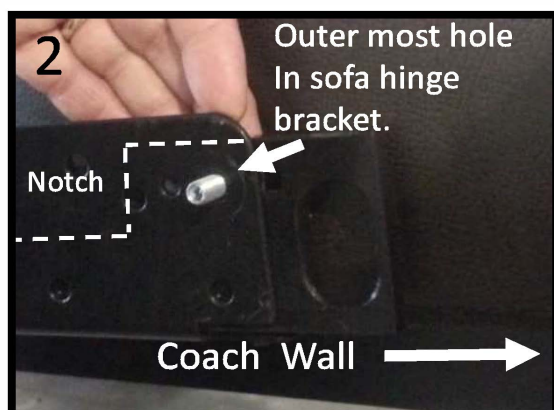

Install the lock plate (notch up) inside of the sofa hinge bracket as shown, with the bolt coming from the inside out.



Install flat washer and self-locking nut. Tighten until nut just begins to snug, then back the nut off just enough that lock plate slides freely. The plate should freely drop into locking mode when the sofas are set down vertically.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.