



ELECTRONIC CLIMATE CONTROL

SERVICE BULLETIN

To minimize large temperature swings in the motorhome.

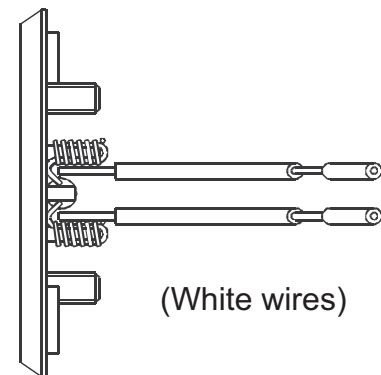

Old temp probe assembly
P/N 00-00356-000

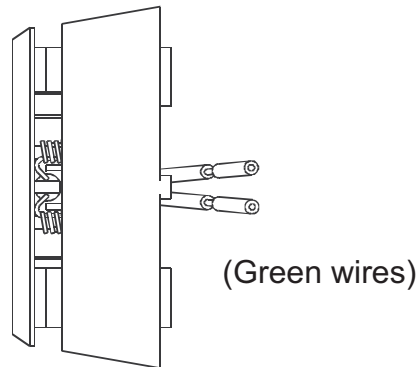

New temp probe assembly
P/N 00-00356-100

Procedure

- 1) Remove the two screws holding the old probe (00-00356-000) to the wall.
- 2) Pull assembly from the wall and cut both white wires.
***Leave enough wire for the connection of the new wires.**
- 3) Splice green wires from the new assembly (00-00356-100) together with the wires coming out of the wall. Polarity is NOT important.
- 4) Push wires back into wall and screw the new assembly into place.

This will move the temperature sensing device out of the wall and into the room.

Intellitec

1485 Jacobs Rd.
Deland, FL 32724
386.738.7307



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.