


KIT #01-00083-100

**THIS INSTALLATION KIT USED ON THE FOLLOWING SMART EMS SYSTEMS:
MODELS 500, 500A, 700, 750, 800, 850 & 900**

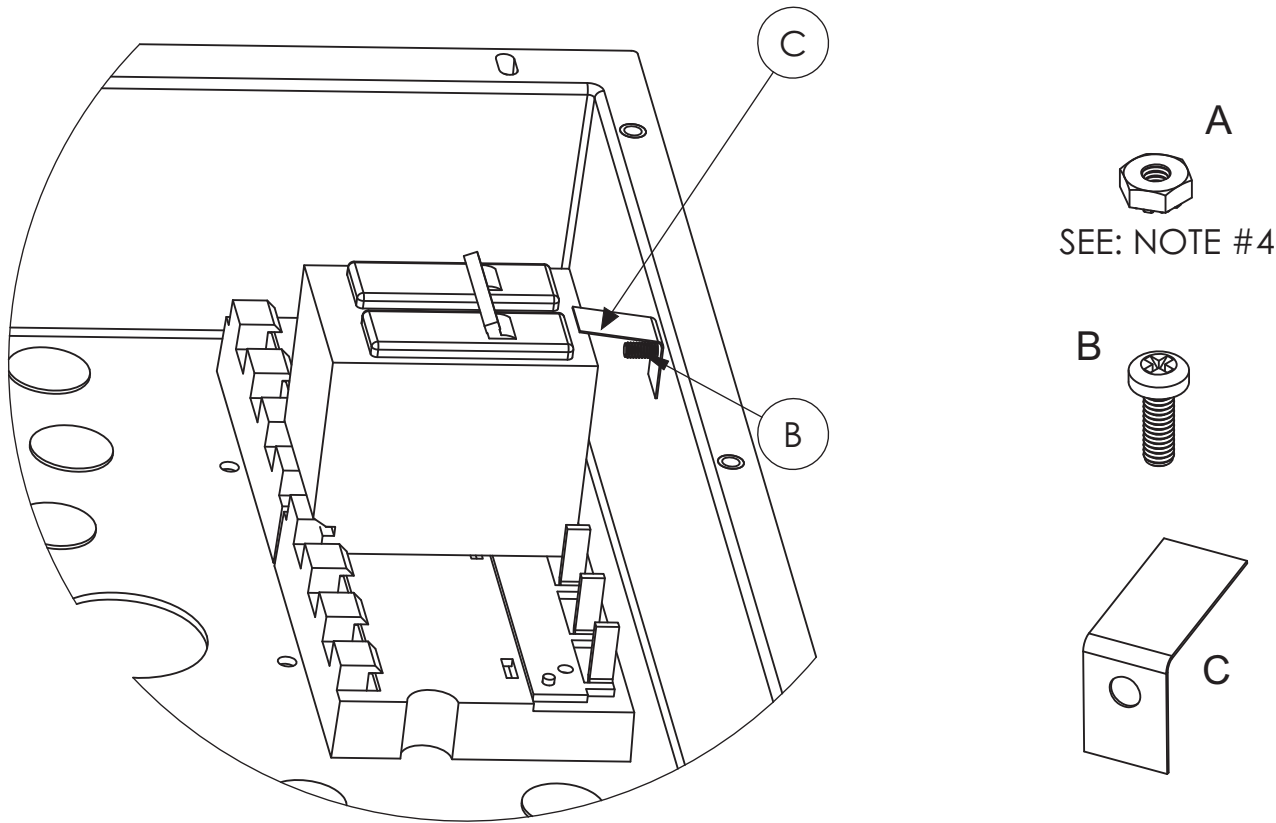

CONTENTS OF MAIN BREAKER HOLD-DOWN KIT: #01-00083-100

- (1) - #8 - 32 KEPS NUT "A"
- (1) - #8 - 32 X 1/2" SCREW "B"
- (1) - SPRING CLIP "C"
- (1) - INSTRUCTION SHEET
- (1) - POLYBAG

THIS KIT IS "UL" COMPLIANT.

INSTALLATION INSTRUCTIONS:

- 1) **"CAUTION"**- TURN OFF POWER AHEAD OF THIS LOAD CENTER BEFORE INSTALLING KIT. HAZARDOUS VOLTAGE CAN CAUSE INJURY OR DEATH.
- 2) SCREW FROM KIT IS PASSED THRU HOLE IN THE WALL OF HOUSING, LOCATED NEAR THE "STAB" STUDS AND INTO THE SPRING CLIP.
- 3) INSTALLER POSITIONS CLIP OVER EDGE OF BREAKER AND TIGHTENS SCREW TO PROVIDE A SNUG FIT, (SEE ILLUSTRATION).
- 4) HEX NUT SUPPLIED WITH THIS KIT IS USED TO SECURE SCREW (WITHOUT SPRING CLIP) ONLY WHEN ALTERNATE KIT #01-00083-000 IS USED.

 **Intellitec**
1485 Jacobs Rd.
Deland, FL 32724
386.738.7307

P/N 53-00894-900 Rev. C 072919



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.