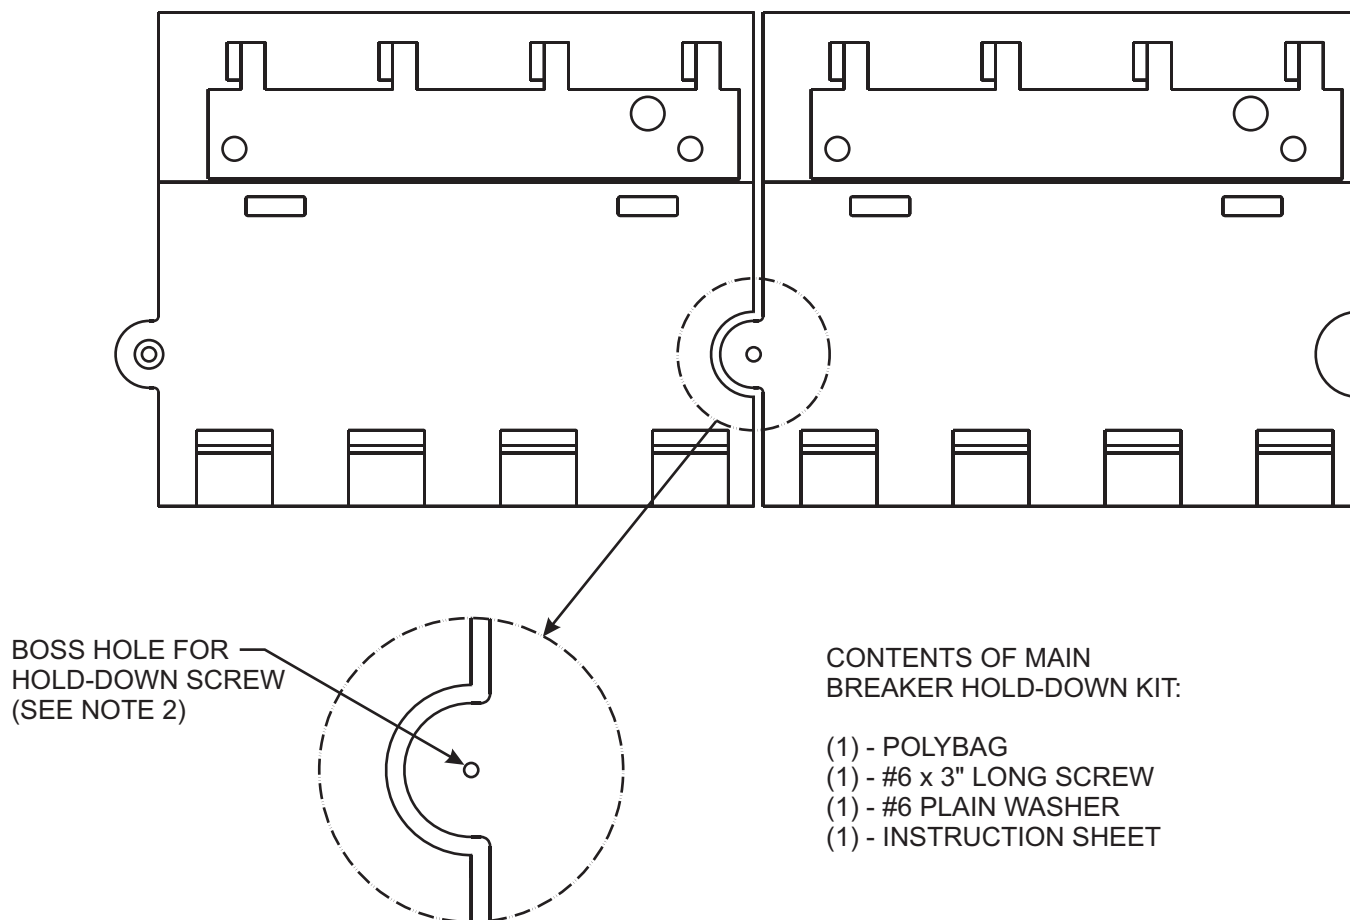

THIS INSTALLATION KIT USED ON THE FOLLOWING SMART EMS SYSTEMS: MODELS 700, 750 & 900



INSTALLATION INSTRUCTIONS:

- 1) **"CAUTION"** - TURN OFF POWER AHEAD OF THIS LOAD CENTER BEFORE INSTALLING KIT. HAZARDOUS VOLTAGE CAN CAUSE INJURY OR DEATH.
- 2) MAIN CIRCUIT BREAKERS POSITIONED HERE BETWEEN THE 2 PLASTIC BLOCKS AND PRESSED ONTO ALUMINUM "STAB" STUDS (WHICH ARE PART OF THE PLASTIC BLOCKS).
- 3) THREAD-CUTTING SCREW FROM KIT IS PASSED THRU THE OPENINGS IN THE BREAKER WALL AND INTO THE BOSS HOLE IN THE PLASTIC BLOCK.
- 4) INSTALLER TO APPLY 3-5 IN/LBS TO 3" LONG SCREW WITH PLAIN WASHER UNDER SCREW HEAD.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.