



SuperSlide II and Trim Kit Installation

©1/07 Kwikkee Products #1422272 Rev. 0B

Included in
SuperSlide II and
Trim Kit for
SuperSlide II

Description	Qty.
Rivet, 3/16 x .250 (SB-64)	40
Inner rail assembly	2
Outer rail assembly	2
Slide square jig knee brace	4
End trim piece: X" *	2
Mid-rail trim piece: X" *	3
Slide square jig cross strip; X" *	2

* Where X" = the width of slide
(24", 32", 37", 39", 44", or 51")
Note: OEM widths in 1"
increments

Tools needed

Plywood or particle board for
panel inserts

Carpet or other material to
cover panel inserts

Wood screws

Safety glasses

#2 Phillips screwdriver


Pop-rivet gun

Two-by-fours or other wood
may be needed to raise slide
enough to clear cargo
compartment door



SuperSlide II and Trim Kit Installation Instructions


Instructions cover the
installation of SuperSlide II
Assemblies and Trim Kit for
SuperSlide II.

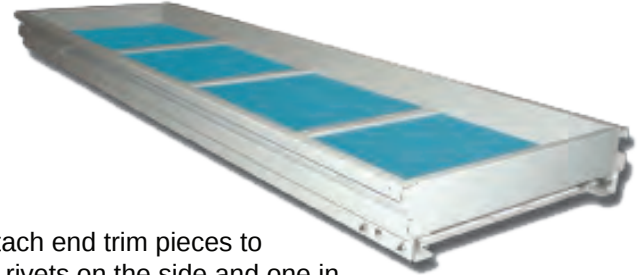

Inner Rail Assembly


1. Align pre-drilled holes and attach end trim pieces to inner rail assembly using two rivets on the side and one in each corner. (Figure 1A)
2. Align mid-rail trim pieces to holes along inside edges of inner rail assembly. Attach each mid-rail with four rivets; two on left side and two on right side of each mid-rail. (Figure 1B)
3. Measure inside dimensions of each insert area for wood insert panels (not provided). (Figure 1D) See Figure 2 on next page for optional method using a single carpet-covered panel over the wood inserts and mid-rails.
5. Allowing for thickness of panel covering, trim plywood or particleboard. Check fit.
6. Cover panels with carpet or other material, such as vinyl or rubber mat.

Figure 1: Assemble inner rail, end and mid-rail trim pieces.

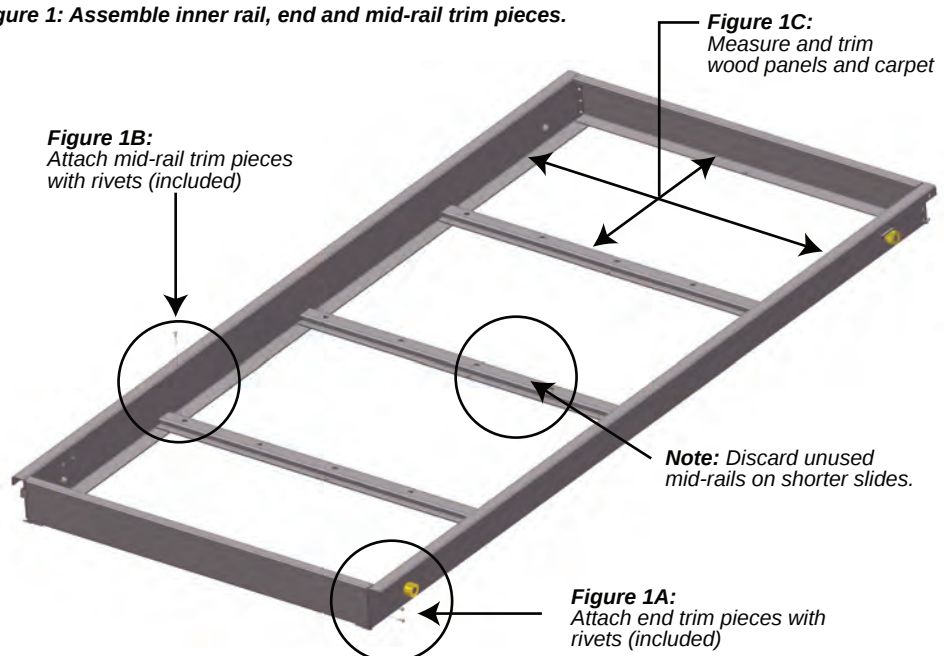

7. Attach carpeted panels with wood screws (not provided) shown in Figure 2.

Figure 2: Install carpet-covered wood panels into inner rail assembly.

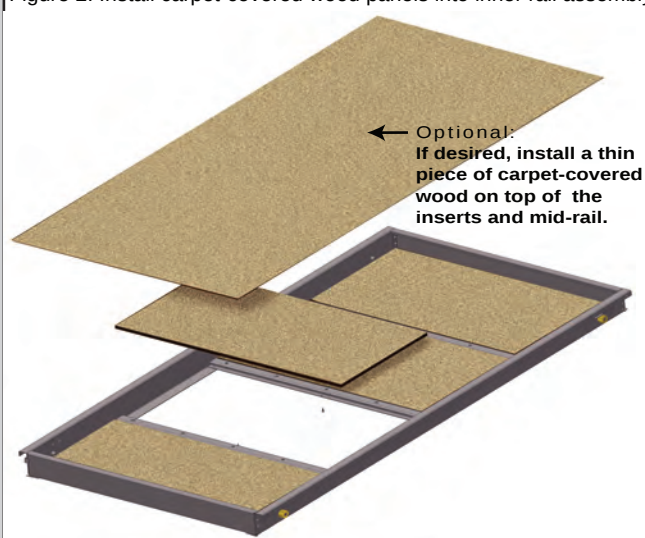

Outer Rail Assembly

8. Using rivets, attach a slide jig square cross strap to the outer rail assemblies at each end. (Figure 3A)
9. Using rivets, attach a slide jig square knee brace to the outer rail assemblies at each corner. (Figure 3B)
10. Before attaching the outer rail assembly to the floor of the cargo compartment, check for clearance at the compartment door. It may be necessary to raise the outer rail assembly up a few inches using two-by-fours (not provided). Make sure that the inner rail assembly will clear the edges of the cargo compartment door.
11. Align inner rail assembly rollers with outer rail assembly rollers and slide inner rail assembly into place. It may be necessary to flex outer rails out to clear stops.
12. Attach mounting tabs shown in Figure 3C of the outer rail assembly to floor (or two-by-fours) of the cargo compartment using carriage bolts (not provided).
13. Check to make sure the latch secures the inner rail assembly when the slide is in the stowed position.




NOTICE

Picture does not represent all available models

Kwikkee®

Figure 3: Assemble and install outer rail.

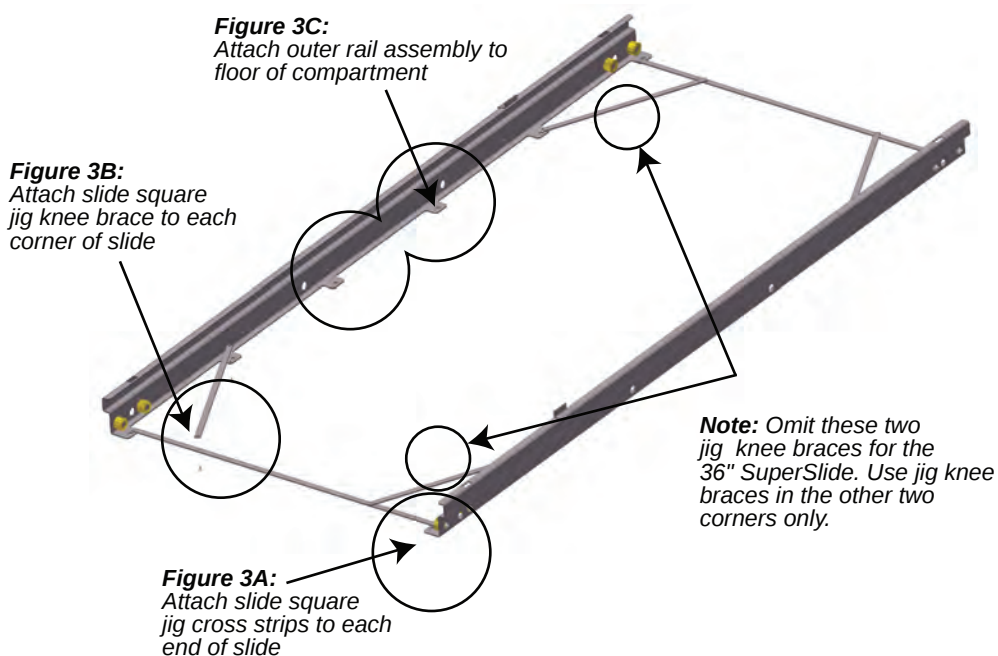



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.