






HAPPIJAC®

A Division of Lippert Components Inc.

ADDING OR REPLACING A SOLENOID BRAKE

The brake wires in parallel with the motor such that when the motor is energized, it releases the brake and when the motor is de-energized, the brake sets and does not allow the slider / bed lift to drift.

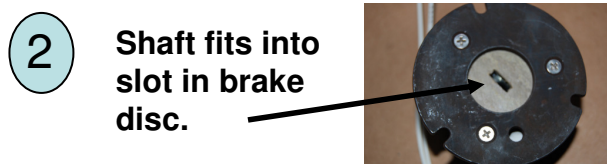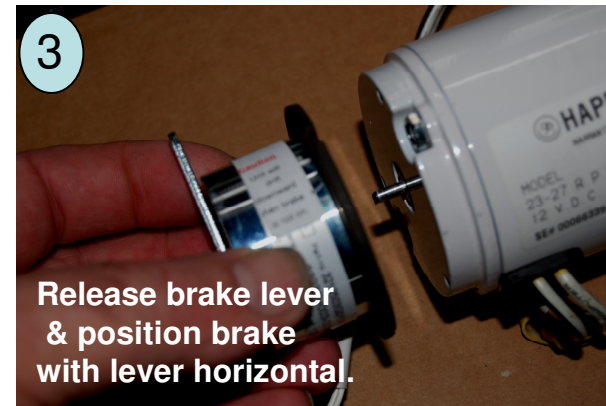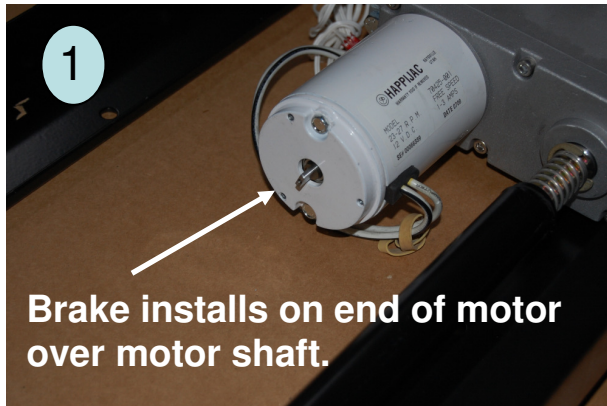

Install the 3 mounting screws & reset brake lever.

- 5** The brake wires are wired in parallel with the motor wires. There is no polarity therefore it does not matter which brake wire goes to which motor wire. Crimp on automotive style connectors can be used, or electrical wire nuts.



This manual is provided courtesy of RV Tech Cheat Sheet



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

[Join our free Facebook group →](#)



Follow proper safety practices. If in doubt, consult a professional RV technician.