



HAPPIJAC®
A Division of Lippert Components Inc.


Model: CA-CGL

1999 - 2003 Chevy Silverado
1999 - 2003 GMC Sierra



FRONT ANCHOR INSTALLATIONS

1. Prepare the Guide Plates and Anchor Plates for installation by using the adhesive strips provided to attach the black plastic spacers to the Guide Plate and Anchor Plate as shown in Fig. 1 & 2.

2. Position the silver Guide Plate such that holes marked "3" are toward bed side wall, the top edge is 11½ inches down from the top of the bed rail, and the outside edge is 1/8" in from corner. (Fig. 3 & 4) Set plate parallel to bed floor and secure in place with masking tape.

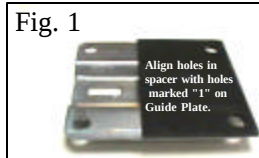

3. Drill 1/16" pilot holes in bed front wall through the two small holes in guide plate. If a stabilizer bar (SB-100) is being installed (recommended), Remove Guide Plates and attach stabilizer bar per instructions enclosed with bar. If no stabilizer bar is used, insert and tighten the small sheet metal screws to secure Guide Plates to bed, then remove tape. Otherwise, do this after the bar is attached.

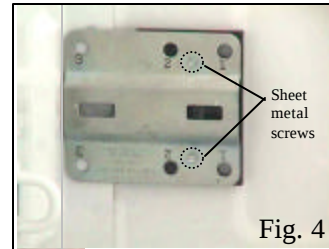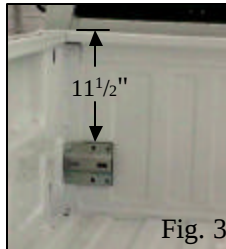


4. Once both Guide Plates are attached to the bed with the small sheet metal screws, use the Guide Plates as drill guides and drill 7/16" holes through the bed front wall through hole pairs marked 1 & 3. (Fig. 4) **Caution, do not allow drill bit to strike cab.** Place a board or some other barrier between bed and cab while drilling.

5. Slip the black Anchor Plates (with spacers attached) between the bed & cab and start all four 1" X 3/8" bolts through Guide Plate and bed, into threaded holes in Black Anchor Plate. **Important:** Start all 4 before tightening.

(Hint: These will start much easier if you run the bolts through the plate prior to installation to clear the paint from the holes.)

6. Once all 4 bolts are started, remove the sheet metal screws, then tighten all bolts just until all parts draw snugly together.

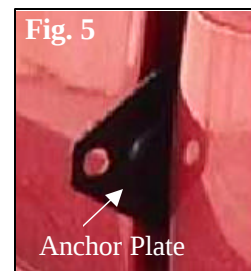

IMPORTANT NOTE: This plate will roughly follow the contour of the bed front. Since this is a "universal" plate, designed to fit a range of trucks, it will not follow the contour perfectly, however, all parts will draw together when tightened down.



See reverse side for rear anchor installation.

REAR ANCHOR INSTALLATION

NOTE: Rear anchors are installed in the end of the bumper. When properly installed, the bumper mount tiedowns provide excellent performance and a clean attractive appearance. There is no precise mounting location since a variety of bumpers may be installed. The general guidelines are as follows:

1. Mounting location should be as flat & vertical as possible.
2. Be sure no moldings or bumper caps interfere with the removable coupler.
3. **Warning: Mounting near the front edge of bumper could result in bumper twist and poor performance.** Choose a location as far back as possible on the flat end of the bumper. Don't go into the radius.
4. Check back side of selected mounting location to ensure adequate access for tightening the nut, then center punch and drill a $\frac{1}{8}$ " pilot hole. Enlarge to $\frac{1}{2}$ " and install Anchor Bolt with 2" fender washer, lock washer & nut.

Flat edges of Anchor Bolt must be horizontal for proper operation. Be sure to remove slide on coupler when unloading camper to avoid loosening them.

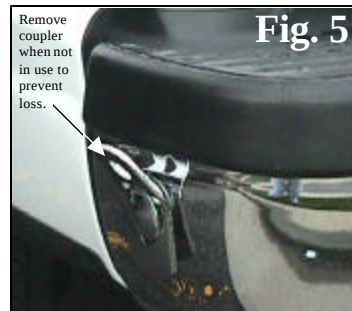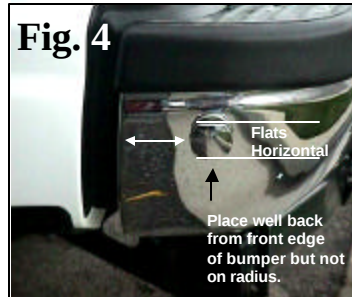



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.