




HAPPIJAC®
A Division of Lippert Components Inc.

CA-DR4 INSTALLATION INSTRUCTIONS

1. Position the **GUIDE PLATE** at the inside front corner of the bed just where the first flute narrows, (as shown in the drawing) with the black plastic spacer against the front bed wall. **NOTE:** Center of bottom holes is 17 inches down from top of bed.
2. Hold **GUIDE PLATE** firmly in place and mark hole pairs 1 & 2 (3 is not used).
3. Locate the center of each hole and dimple with a punch. Drill 1/8" pilot hole then enlarge to 7/16"
CAUTION: Avoid hitting cab with drill bit.
4. Reposition **GUIDE PLATE** & Spacer inside bed, and position black **CAMPER ANCHOR TIEDOWN** in the corresponding position between bed & cab.
5. Start **ALL 4** (3/8-24 x 1") bolts before tightening, then tighten.

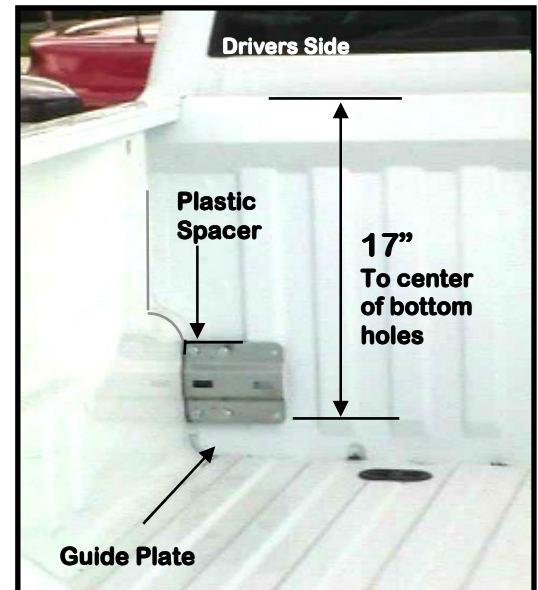

6. See **UNIVERSAL REAR ANCHOR** installation instructions on back of box when installing the rear anchors. **CAUTION:** Body panel installation of rear anchors **IS NOT RECOMMENDED** on this truck model.

Camper Anchor STABILIZING BAR

- **Greatly** increases front anchor strength.
- **Tough**, attractive satin black finish.
- **Recommended with all:**


Camper over 9 ft.

Four wheel drive trucks.


Extended cab / crew cab trucks.

MODELS:

SB-100 1" x 1-1/2" x 64"	Chev / GMC 1988-2000 (Full Size)
SB-150 1" x 1-1/2" x 69"	Ford 1980 - 1996 F-Series 1997 F250 (Over 8500 GVW) & 1997 F350
SB-200 1" x 1-1/2" x 66-3/4"	Dodge 1994-2000 (Full Size) Ford 1999-2000 F250 Heavy & F350 (Mandatory application)

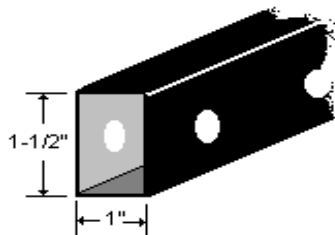

IMPORTANT NOTE: This product is used in conjunction with one of the following tie-down sets: CA-UT8, CA-DR4 or CA-FU9 or CA-CG9. Installation is most easily performed at the time these tie-downs are installed.

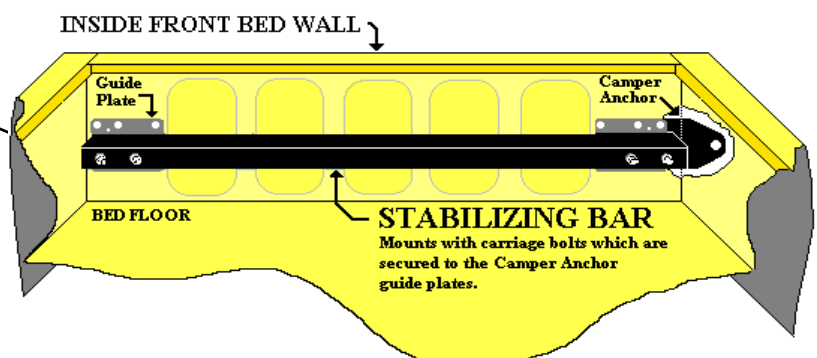

Cannot be installed with full bed liner. Campers **should not** be installed on plastic bed liner. The slippery nature of the liner creates excessive movement of the camper within the bed which can result in damage to truck, camper, or tie-down system. A rubber bed mat is a better alternative. It reduces movement while protecting bed.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.