



Model: CA-FD7

FITS: 1997 FORD F-150

1997 FORD F-250 (Under 8,500 GVW)

FRONT ANCHORS

NOTE: The diagram below shows driver's side installation. The support brackets are universal and will fit either side. Familiarize yourself with the hole numbers for the drivers side installation, then locate the corresponding holes for the passenger side installation.

1. Locate the installation point for the triangular support bracket under truck frame cross member at front of truck bed as shown. (Fig. 2)
2. Fit bracket as shown so that it rests flush against all three surfaces which it contacts (cross frame, outer wall, & vertical support) then mark, center punch, and drill a 1/8" pilot hole at hole location ①
3. Install #8 sheet metal screw at location ①, recheck positioning of support bracket then tighten.
4. Drill 1/8" pilot hole at location ② and install and tighten #8 sheet metal screw.
5. Using centering guide provided, ⓪ drill 1/8" pilot hole (from inside out) at hole location ③ .
6. Enlarge hole ③ through outer bed wall to 1/2" drilling from the outside.
7. Install chrome step washer onto chrome anchor bolt with stepped side toward head, then insert in hole ③ from the outside. Set anchor bolt with flat sides at top and bottom and secure with 1/2" lock washer & nut. (Fig. 1)
8. Drill 3/8" holes at positions ④, ⑤, & ⑥ and install 3/8" hardware. Insert bolt with flat washer downward through access holes in cross frame member at holes ④ & ⑤. Insert bolt with flat washer through hole ⑥. Secure all bolts with 3/8" split lock washer & nut.

Fig. 1



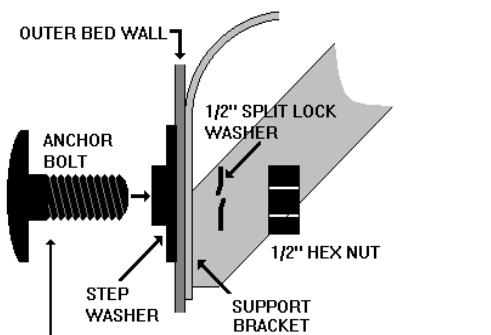


Fig. 2

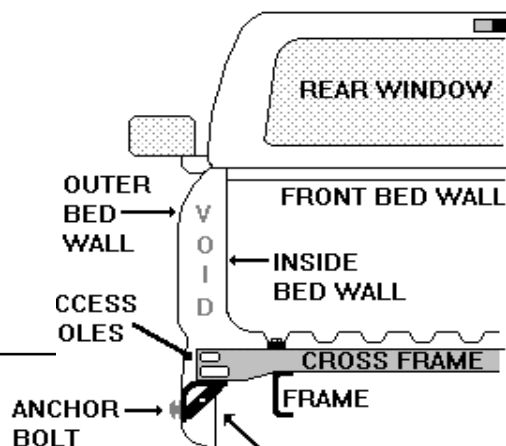

SUPPORT BRACKET MOUNTS TO CROSS FRAME MEMBER UNDER FRONT OF TRUCK BED AT THE LOCATION SHOWN.

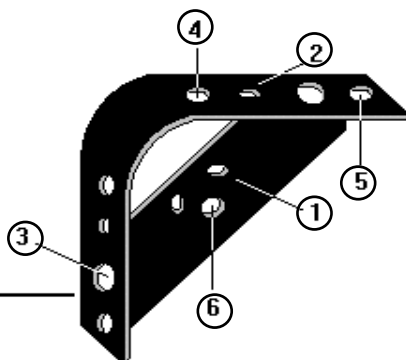

SEE REVERSE FOR REAR ANCHOR INSTALLATION

REAR ANCHORS

NOTE: The diagram below shows driver's side installation. The same procedure and dimensions apply to the passenger side installation.

1. Looking at the end of the bumper, locate and mark a point mid way (center) from left to right, and 1-1/8" down from bottom of inset. (See Fig. 3 below)
2. Center punch, then drill 1/8" pilot hole at this point.
3. Enlarge hole to 1/2".
4. Install anchor bolt as shown in Fig. 3, with the flat surfaces horizontal.
5. When loading camper, slide the angled tie down coupler (Fig. 4) over the anchor bolt and insert turnbuckles into the eye of the coupler.
It is best to slip the turnbuckle hook through the coupler from the truck side outward.

NOTE: When camper is not loaded, remove and store Tiedown Couplers to avoid loosening them.




Fig. 3

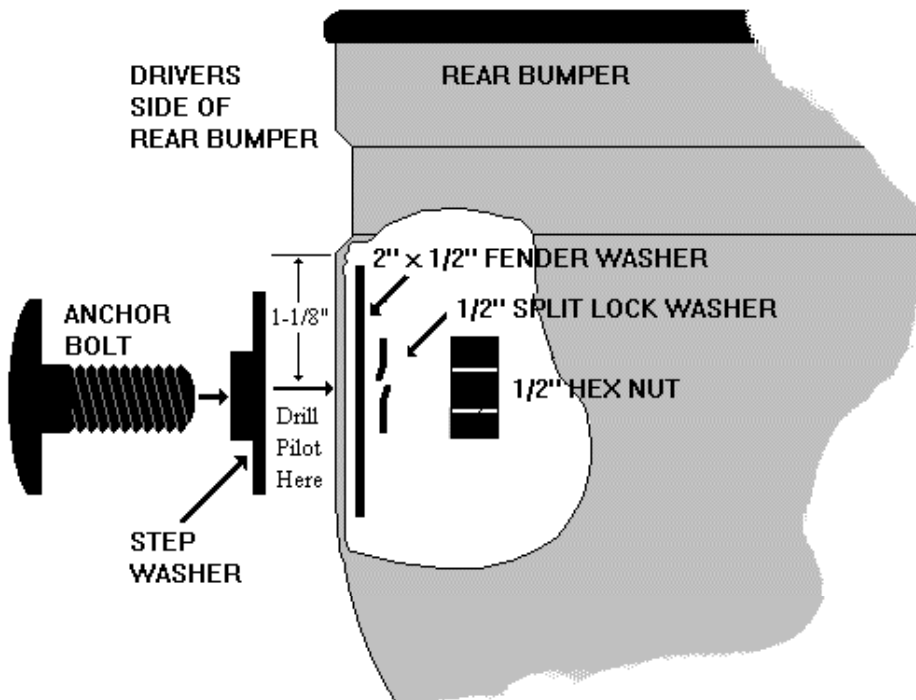


Fig. 4



Tiedown Coupler



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.