


INSTALLATION INSTRUCTIONS

READ COMPLETE INSTRUCTIONS BEFORE STARTING

TOOLS NEEDED TO INSTALL

- * BATTERY OPERATED DRILL * 9/64 DRILL BIT
- * PHILLIPS SCREW DRIVER * POP RIVET TOOL
- * WHITE CAULK OR SEALANT* TAPE MEASURE

1 LOCATE CENTER OF SUNBONNET FRAME & MARK. (SHOULD BE ON THE SEAM OF THE FRAME POCKET) MEASURE THE OUTBOARD LOCATIONS FROM CENTER TO CENTER OF RAIL MOUNT (40400071) MOUNTING THE OUTBOARD MOUNTS FIRST. HOLD THE RAIL MOUNT IN PLACE (SLIGHTLY DOWNWARD 10 TO 15 DEGREES FROM HORIZONTAL SEE PICTURES). DRILL HOLE IN FRAME WITH 9/64" BIT AND "POP" RIVET IN PLACE AS SHOWN IN PICTURES: FOLLOW SAME PROCEDURE FOR CENTER MOVING THE MOUNT TO EDGE OF SEAM SLIGHTLY OFF CENTER.

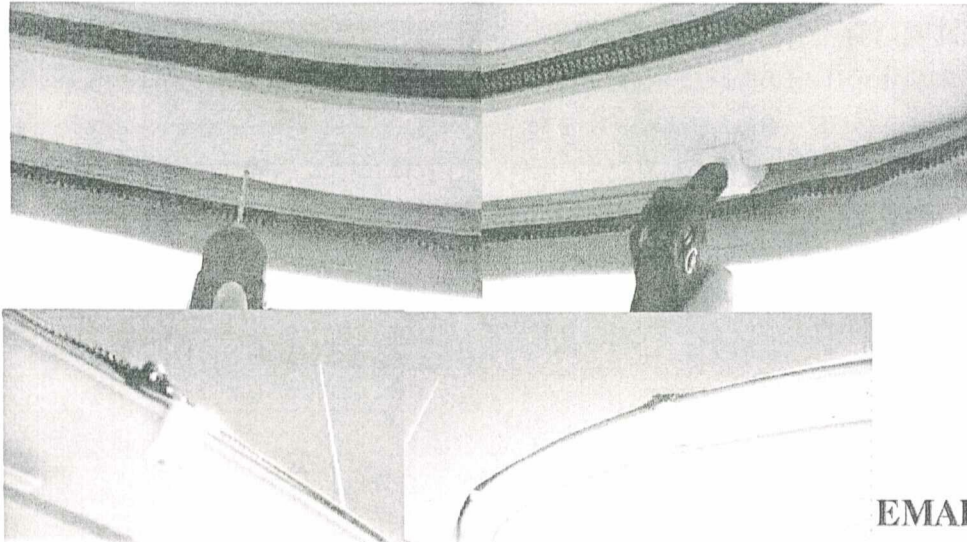

2 POSITION DECK MOUNTS (40400073) USING MEASUREMENTS SHOWN ON PARTS SHEET. DO NOT INSTALL MOUNT ON HATCH LID. INSTALL THE 290 & 310 DECK MOUNTS ON TOP OF RAIN CAP AS SHOWN IN PHOTO ON RIGHT. OTHER MODELS MOUNT AS SHOWN IN PHOTO ON LEFT:



BE SURE TO COUNTERSINK HOLE ON GELCOAT TO PREVENT CRACKS AND CAULK HOLE BEFORE INSERTING MOUNTING SCREWS IN DECK MOUNTS.

3 FINAL STAGE: ZIP IN YOUR FASTBACK THE SAME AS YOU DO YOUR AFT CURTAIN. NEXT OPEN ALUMINUM POLES TO FULL EXTENDED LENGTH AND INSERT ONE END IN TOP MOUNT(SEE PICTURE) AND OTHER END IN DECK MOUNT BOWING THE POLE. START WITH CENTER POLE THEN THE OUTBOARD .FASTEN HOOK & LOOP TO HOLD POLES IN PLACE.



Taylor Made
SYSTEMS

EMAIL: fastback2001@earthlink.net

4854 DISTRIBUTION CT.SUITE 11
ORLANDO,FLORIDA 32822
407-737-3692 Fax 407-737-1890


4 INSTALLING VERSA-SNAP

AFTER THE TOP IS UP IN PLACE IT IS TIME TO PUT THE SNAPS IN PLACE.. START IN THE CENTER AT THE TRANSOM AND ATTACH A VERSA-SNAP OVER THE EXISTING SNAP ON YOUR BOAT.THEN PRESS THE LOOP ON THE TOP TO THE SNAP AND IT WILL STAY IN PLACE. YOU CAN PEEL OFF AND RELOCATE IF NECESSARY WORK YOUR WAY TO EACH CORNER DOING ONE AT A TIME.CONTINUE ON TO THE RADAR ARCH MAKING SURE THE FASTBACK IS EVEN ON EACH SIDE. IF NEEDED, ADD A STUD IN PLACES WHERE NO STUDS ARE BY DRILLING AND COUNTERSINKING AS YOU MOUNT THEM. 8 ADDITIONAL STUDS ARE PROVIDED. AT THE DOORS YOU MAY HAVE TO TRIM ONE SIDE OF THE VERSA-SNAP TO PREVENT OVERHANG OF CANVAS. SEE PICTURES BELOW



5 INSTALLING SPREADER BARS

IN ORDER TO HOLD SUPPORT POLES MORE SECURE WHILE UNDERWAY OR WITH ALL DOORS ROLLED UP THE SPREADER BAR SNAPS IN JUST ABOVE THE REAR WINDOWS AS SHOWN IN PICTURE BELOW.

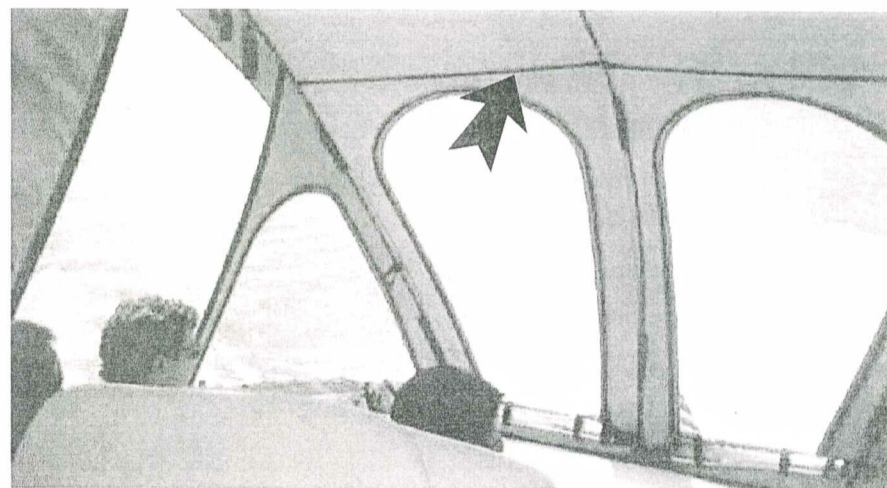

INFORMATION

DUE TO THE POSSIBILITY OF SOME SLIGHT CHANGES IN THE INSTALLATION OF THE ALREADY INSTALLED CANVAS ON YOUR BOAT AND THE SLIGHT CHANGES IN THE SUNBONNET MOUNTED TO THE RADAR ARCH THE ALUMINUM POLES MAY NEED TO BE SHORTENED TO MAKE SNAPS ALIGN PROPERLY. THIS CAN BE DONE BY REMOVING THE CAP ON THE POLE HALF THAT HAS THE BRIGHT CONNECTOR INSERTED. THEN TAKE A HACK SAW AND CUT OFF CAREFUL NOT TO CUT MORE THAN 1/2" AT A TIME. THIS SHOULD BE THE EXCEPTION AND MAY NOT BE NECESSARY.ANY QUESTIONS PLEASE CALL.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.