

INTERIORS


Purpose

Included with Lippert Interiors push-back recliners are four plastic feet (Fig. 1A) that need to be attached with the accompanying four screws (Fig. 1B) (one screw per foot). The feet and screws are packaged together.

Resources Required

- Cordless or Electric Drill or Screw Gun
- Appropriate Drive Bit

Fig. 1

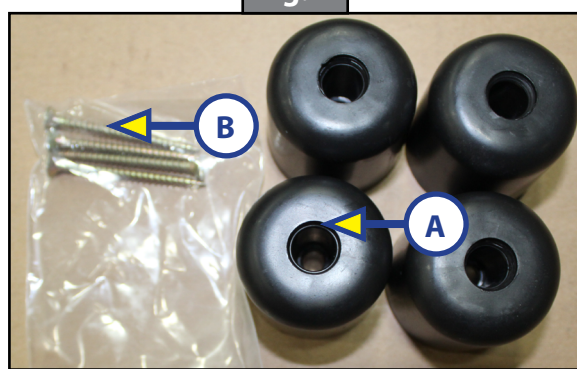

Installation

1. Gently lay the recliner on its back, exposing the bottom for installation of the four feet.
2. Starting at any foot location (Fig. 2), feel for the inside edge of the wooden mounting blocks beneath the recliner fabric.

Fig. 2



INTERIORS

3. The feet should also be centered on the leg (Fig. 3).

Fig. 3



4. Install provided screws into each through-hole of the plastic foot (Fig. 3A). Secure foot to wooden mounting block. The screw heads will be inset down into the screw holes of the plastic foot.
5. Repeat steps 2-4 for each recliner foot.

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.